

# CipherLab User Guide

1504 Barcode Scanner

Setup barcodes included.

Version 1.06



Copyright © 2011~2012 CIPHERLAB CO., LTD.  
All rights reserved

The software contains proprietary information of CIPHERLAB CO., LTD.; it is provided under a license agreement containing restrictions on use and disclosure and is also protected by copyright law. Reverse engineering of the software is prohibited.

Due to continued product development this information may change without notice. The information and intellectual property contained herein is confidential between CIPHERLAB and the client and remains the exclusive property of CIPHERLAB CO., LTD. If finding any problems in the documentation, please report them to us in writing. CIPHERLAB does not warrant that this document is error-free.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written permission of CIPHERLAB CO., LTD.

For product consultancy and technical support, please contact the local sales representative. Alternatively, visit our web site for more information.

The CipherLab logo is a registered trademark of CIPHERLAB CO., LTD.

All brand, product and service, and trademark names are the property of their registered owners.

The editorial use of these names is for identification as well as to the benefit of the owners, with no intention of infringement.

**CIPHERLAB CO., LTD.**  
Website: <http://www.cipherlab.com>

# IMPORTANT NOTICES

---

## FOR USA

This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## FOR CANADA

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil numerique respecte les limites de bruits radioelectriques applicables aux appareils numeriques de Classe B prescrites dans la norme sur le material brouilleur: "Appareils Numeriques," NMB-003 edictee par l'Industrie.

## FOR PRODUCT WITH LASER



### CAUTION

**This laser component emits FDA / IEC Class 2 laser light at the exit port. Do not stare into beam.**

## SAFETY PRECAUTIONS

- ▶ DO NOT expose the scanner to any flammable sources.
- ▶ Under no circumstances, internal components are self-serviceable.
- ▶ For AC power adaptor, a socket outlet shall be installed near the equipment and shall be easily accessible. Make sure there is stable power supply for the scanner or its peripherals to operate properly.

## CARE & MAINTENANCE

- ▶ Use a clean cloth to wipe dust off the scanning window and the body of the scanner. DO NOT use/mix any bleach or cleaner.
- ▶ If finding the scanner malfunctioning, write down the specific scenario and consult the local sales representative.

# RELEASE NOTES

---

| Version | Date          | Notes   |
|---------|---------------|---|
| 1.06    | Apr. 12, 2012 | <ul style="list-style-type: none"><li>▶ New: <b>Quick Start   Read a Setup Barcode   List Current Settings</b> - "List Page 22" added to deliver settings of Driver License parsing</li><li>▶ New: Appendix V: Reading Driver Licenses</li></ul>  |
| 1.05    | Dec. 22, 2011 | <ul style="list-style-type: none"><li>▶ New: 2.1.5 and 2.3.7 Special Keyboard Feature — Add Apply or Bypass special keyboard feature.</li><li>▶ Modified: Divide keyboard wedge table into apply and bypass partitions</li></ul>  |
| 1.04    | Nov. 24, 2011 | <ul style="list-style-type: none"><li>▶ Modified: 3.11 GS1-128 — Change GS1-128 default value to Enable.</li><li>▶ New: 1.6.7 Presentation Mode — Add Low Light Enhancement function.</li><li>▶ New: 2.3 Direct USB HID — Add HID Transmit Speed</li></ul>  |
| 1.03    | Aug. 31, 2011 | <ul style="list-style-type: none"><li>▶ Deleted: "Continuous Mode" and "Alternate Mode" are removed from the manual. The original sections 1.6.1 "Continuous Mode" and 1.6.6 "Alternate Mode" are deleted.</li><li>▶ New: Kanji Transmission support is added for USB HID and Keyboard Wedge under sections 2.1, 2.1.2, 2.3, and 2.3.2.</li></ul>                                     |
| 1.02    | Jul. 19, 2011 | <ul style="list-style-type: none"><li>▶ New: 1.14 Picklist Mode</li></ul>   |
| 1.01    | Jun. 17, 2011 | <ul style="list-style-type: none"><li>▶ Modified: 1.8 Delay between Re-read — Presentation Mode</li><li>▶ Modified: 2.1.1 Activate Keyboard Wedge &amp; Select Keyboard Type — add #31 PCAT (Hungarian)</li><li>▶ Modified: 2.3 Direct USB HID — add Inter-Character Delay</li><li>▶ Modified: 2.3.1 Activate USB HID &amp; Select Keyboard Type — add #77 PCAT (Hungarian)</li></ul> |
| 1.00    | Feb. 25, 2011 | Initial release   |



# CONTENTS

---

|  |              |
|--|--------------|
| <b>IMPORTANT NOTICES .....</b>                 | <b>- 3 -</b> |
| For USA .....                                  | 3 -          |
| For Canada .....                               | 3 -          |
| For Product with Laser .....                   | 4 -          |
| Safety Precautions .....                       | 4 -          |
| Care & Maintenance .....                       | 4 -          |
| <b>RELEASE NOTES .....</b>                     | <b>- 5 -</b> |
| <b>INTRODUCTION .....</b>                      | <b>1</b>     |
| Inside the Package.....                        | 2            |
| Product Highlights .....                       | 2            |
| Symbologies Supported .....                    | 3            |
| <b>QUICK START .....</b>                       | <b>5</b>     |
| Enter Configuration Mode.....                  | 6            |
| Exit Configuration Mode.....                   | 6            |
| Default Settings.....                          | 7            |
| Save User Settings as Defaults.....            | 7            |
| Restore User Defaults.....                     | 7            |
| Restore System Defaults .....                  | 7            |
| Read a Setup Barcode .....                     | 8            |
| Configure Parameters.....                      | 8            |
| List the Current Settings .....                | 12           |
| Create One-Scan Setup Barcodes.....            | 14           |
| <b>UNDERSTANDING THE BARCODE SCANNER .....</b> | <b>15</b>    |
| 1.1 Power.....                                 | 16           |
| 1.2 Transmit Buffer.....                       | 16           |
| 1.3 LED Indicator .....                        | 17           |
| 1.3.1 Good Read LED .....                      | 17           |
| 1.3.2 Good Read LED Duration.....              | 17           |
| 1.4 Beeper .....                               | 18           |
| 1.4.1 Beeper Volume.....                       | 18           |
| 1.4.2 Good Read Beep .....                     | 19           |
| 1.5 Send “NR” to Host .....                    | 20           |
| 1.6 Scan Modes .....                           | 21           |
| 1.6.1 Test Mode .....                          | 21           |
| 1.6.2 Laser Mode.....                          | 22           |
| 1.6.3 Auto Off Mode.....                       | 22           |
| 1.6.4 Auto Power Off Mode .....                | 22           |
| 1.6.5 Aiming Mode.....                         | 23           |
| 1.6.6 Multi-Barcode Mode.....                  | 23           |

|  |           |
|--|-----------|
| 1.6.7 Presentation Mode.....                               | 24        |
| 1.7 Scanning Timeout.....                                  | 25        |
| 1.8 Delay between Re-read .....                            | 26        |
| 1.9 Read Redundancy (1D) .....                             | 27        |
| 1.10 Addon Security for UPC/EAN Barcodes .....             | 28        |
| 1.11 Auto-Sense Mode .....                                 | 29        |
| 1.12 Negative Barcodes .....                               | 29        |
| 1.13 Cable Auto-Detect .....                               | 31        |
| 1.14 Picklist Mode .....                                   | 32        |
| <b>SELECTING OUTPUT INTERFACE .....</b>                    | <b>33</b> |
| 2.1 Keyboard Wedge .....                                   | 34        |
| 2.1.1 Activate Keyboard Wedge & Select Keyboard Type ..... | 35        |
| 2.1.2 Keyboard Settings.....                               | 36        |
| 2.1.3 Inter-Character Delay .....                          | 42        |
| 2.1.4 Inter-Function Delay.....                            | 43        |
| 2.1.5 Special Keyboard Feature .....                       | 43        |
| 2.2 RS-232 .....   | 44        |
| 2.2.1 Activate RS-232 Interface .....                      | 44        |
| 2.2.2 Baud Rate .....                                      | 44        |
| 2.2.3 Data Bits .....                                      | 45        |
| 2.2.4 Parity .....   | 45        |
| 2.2.5 Stop Bit .....                                       | 45        |
| 2.2.6 Flow Control.....                                    | 46        |
| 2.2.7 Inter-Character Delay .....                          | 47        |
| 2.2.8 Inter-Function Delay.....                            | 47        |
| 2.2.9 ACK/NAK Timeout.....                                 | 48        |
| 2.3 Direct USB HID .....                                   | 49        |
| 2.3.1 Activate USB HID & Select Keyboard Type .....        | 49        |
| 2.3.2 Keyboard Settings.....                               | 50        |
| 2.3.3 Inter-Character Delay .....                          | 56        |
| 2.3.4 Inter-Function Delay.....                            | 56        |
| 2.3.5 HID Character Transmit Mode.....                     | 57        |
| 2.3.6 HID Transmit Speed .....                             | 57        |
| 2.3.7 Special Keyboard Feature .....                       | 57        |
| 2.4 Direct USB VCOM.....                                   | 58        |
| 2.4.1 Activate USB Virtual COM .....                       | 58        |
| 2.4.2 Inter-Function Delay.....                            | 58        |
| 2.4.3 ACK/NAK Timeout.....                                 | 59        |
| 2.5 Direct USB VCOM_CDC.....                               | 60        |
| 2.5.1 Activate USB VCOM_CDC.....                           | 60        |
| 2.5.2 Inter-Function Delay .....                           | 60        |
| 2.5.3 ACK/NAK Timeout .....                                | 61        |
| <b>CHANGING SYMBOLIC SETTINGS .....</b>                    | <b>63</b> |
| 3.1 Codabar .....  | 64        |
| 3.1.1 Start/Stop Transmission.....                         | 64        |
| 3.1.2 CLSI Conversion .....                                | 64        |
| 3.1.3 Code Length Qualification .....                      | 65        |

|  |    |
|--|----|
| 3.2 Code 25 – Industrial 25 .....                | 66 |
| 3.2.1 Code Length Qualification .....            | 67 |
| 3.3 Code 25 – Interleaved 25 .....               | 68 |
| 3.3.1 Verify Check Digit .....                   | 68 |
| 3.3.2 Transmit Check Digit.....                  | 68 |
| 3.3.3 Convert to EAN-13.....                     | 69 |
| 3.3.4 Code Length Qualification .....            | 70 |
| 3.4 Code 25 – Matrix 25 .....                    | 71 |
| 3.4.1 Verify Check Digit .....                   | 71 |
| 3.4.2 Transmit Check Digit.....                  | 71 |
| 3.4.3 Code Length Qualification .....            | 72 |
| 3.5 Code 25 – Chinese 25 .....                   | 73 |
| 3.6 Italian Pharmacode (Code 32).....            | 74 |
| 3.7 Code 39.....                                 | 75 |
| 3.7.1 Verify Check Digit.....                    | 75 |
| 3.7.2 Transmit Check Digit.....                  | 75 |
| 3.7.3 Standard/Full ASCII Code 39 .....          | 76 |
| 3.7.4 Code Length Qualification .....            | 77 |
| 3.8 Trioptic Code 39 .....                       | 78 |
| 3.9 Code 93.....                                 | 79 |
| 3.9.1 Code Length Qualification .....            | 80 |
| 3.10 Code 128 .....                              | 81 |
| 3.11 GS1-128 (EAN-128) .....                     | 82 |
| 3.11.1 Transmit Code ID .....                    | 82 |
| 3.11.2 Field Separator (GS Character).....       | 82 |
| 3.12 ISBT 128 .....                              | 83 |
| 3.12.1 ISBT Concatenation .....                  | 83 |
| 3.12.2 ISBT Concatenation Redundancy .....       | 84 |
| 3.13 GS1 DataBar (RSS Family) .....              | 85 |
| 3.13.1 Select Code ID.....                       | 85 |
| 3.13.2 GS1 DataBar Omnidirectional (RSS-14)..... | 86 |
| 3.13.3 GS1 DataBar Expanded (RSS Expanded).....  | 87 |
| 3.13.4 GS1 DataBar Limited (RSS Limited).....    | 88 |
| 3.13.5 Convert to UPC/EAN .....                  | 89 |
| 3.14 MSI .....                                   | 90 |
| 3.14.1 Verify Check Digit.....                   | 90 |
| 3.14.2 Transmit Check Digit .....                | 90 |
| 3.14.3 Code Length Qualification .....           | 91 |
| 3.15 EAN-8 .....                                 | 92 |
| 3.16 EAN-13 .....                                | 93 |
| 3.16.1 Convert to ISBN.....                      | 94 |
| 3.16.2 Convert to ISSN.....                      | 94 |
| 3.17 UCC Coupon Extended Code .....              | 95 |
| 3.18 UPC-A.....                                  | 96 |
| 3.18.1 Transmit System Number.....               | 97 |
| 3.18.2 Transmit Check Digit .....                | 97 |
| 3.19 UPC-E.....                                  | 98 |
| 3.19.1 Select System Number.....                 | 99 |

|   |            |
|---|------------|
| 3.19.2 Convert to UPC-A .....                                   | 99         |
| 3.19.3 Transmit System Number .....                             | 100        |
| 3.19.4 Transmit Check Digit .....                               | 100        |
| 3.20 Code 11 .....  | 101        |
| 3.20.1 Verify Check Digit .....                                 | 101        |
| 3.20.2 Transmit Check Digit .....                               | 101        |
| 3.20.3 Code Length Qualification .....                          | 102        |
| 3.21 Composite Code .....                                       | 103        |
| 3.21.1 Composite CC-A/B .....                                   | 103        |
| 3.21.2 Composite CC-C .....                                     | 103        |
| 3.21.3 Composite TLC-39 .....                                   | 103        |
| 3.21.4 UPC Composite Mode .....                                 | 104        |
| 3.21.5 GS1-128 Emulation Mode for UCC/EAN Composite Codes ..... | 104        |
| 3.22 US Postal Code .....                                       | 105        |
| 3.22.1 US Postnet .....   | 105        |
| 3.22.2 US Planet .....  | 105        |
| 3.22.3 Transmit Check Digit .....                               | 105        |
| 3.23 UK Postal Code .....                                       | 106        |
| 3.23.1 UK Postal .....  | 106        |
| 3.23.2 Transmit Check Digit .....                               | 106        |
| 3.24 More Postal Code .....                                     | 107        |
| 3.24.1 Japan Postal .....                                       | 107        |
| 3.24.2 Australian Postal .....                                  | 107        |
| 3.24.3 Dutch Postal .....                                       | 107        |
| 3.24.4 USPS 4CB/One Code/Intelligent Mail .....                 | 107        |
| 3.24.5 UPU FICS Postal .....                                    | 108        |
| 3.25 2D Symbologies .....                                       | 109        |
| 3.25.1 PDF417 .....   | 109        |
| 3.25.2 MicroPDF417 .....  | 109        |
| 3.25.3 Data Matrix .....  | 110        |
| 3.25.4 Maxicode .....   | 111        |
| 3.25.5 QR Code .....  | 111        |
| 3.25.6 MicroQR .....  | 111        |
| 3.25.7 Aztec .....  | 111        |
| 3.26 Macro PDF .....  | 112        |
| 3.26.1 Transmit/Decode Mode .....                               | 112        |
| 3.26.2 Escape Characters .....                                  | 113        |
| 3.26.3 Transmit Control Header .....                            | 113        |
| <b>DEFINING OUTPUT FORMAT .....</b>                             | <b>115</b> |
| 4.1 Letter Case .....   | 115        |
| 4.2 Character Substitution .....                                | 116        |
| 4.2.1 Select a Set for Character Substitution .....             | 117        |
| 4.2.2 Symbologies for Character Substitution (All 3 Sets) ..... | 118        |
| 4.3 Prefix/Suffix Code .....                                    | 128        |
| 4.4 Code ID .....   | 129        |
| 4.4.1 Select Pre-defined Code ID .....                          | 129        |
| 4.4.2 Change Code ID .....                                      | 132        |
| 4.4.3 Clear Code ID Settings .....                              | 135        |
| 4.5 Length Code .....   | 136        |

|   |            |
|---|------------|
| 4.6 Multi-Barcode Editor.....                               | 144        |
| 4.6.1 Edit a Concatenation of Barcodes .....                | 145        |
| 4.6.2 Activate the Concatenation of Barcodes .....          | 147        |
| 4.7 Removal of Special Character .....                      | 148        |
| <b>APPLYING FORMATS FOR DATA EDITING.....</b>               | <b>149</b> |
| 5.1 Activating Editing Formats .....                        | 150        |
| 5.1.1 Activate Editing Formats.....                         | 150        |
| 5.1.2 Exclusive Data Editing.....                           | 151        |
| 5.2 How to Configure Editing Formats .....                  | 152        |
| 5.2.1 Select Format to Configure.....                       | 153        |
| 5.2.2 Restore Default Format .....                          | 154        |
| 5.3 Configuring Format – Define Data Criteria .....         | 155        |
| 5.3.1 Applicable Code Type.....                             | 155        |
| 5.3.2 Data Length .....                                     | 165        |
| 5.3.3 Matching String & Location .....                      | 166        |
| 5.4 Configuring Format – Define Data Field .....            | 167        |
| 5.4.1 Start Position .....                                  | 167        |
| 5.4.2 Field Adjustment .....                                | 167        |
| 5.4.3 Total Number of Fields.....                           | 168        |
| 5.4.4 Field Settings.....                                   | 169        |
| 5.4.5 Pause Field Setting .....                             | 175        |
| 5.5 Configuring Format – Define Transmission Sequence ..... | 176        |
| 5.6 Programming Examples .....                              | 178        |
| 5.6.1 Example I .....                                       | 178        |
| 5.6.2 Example II .....                                      | 179        |
| <b>SPECIFICATIONS .....</b>                                 | <b>181</b> |
| <b>FIRMWARE UPGRADE.....</b>                                | <b>183</b> |
| Using RS-232.....   | 183        |
| Using USB Virtual COM .....                                 | 185        |
| <b>HOST SERIAL COMMANDS .....</b>                           | <b>187</b> |
| Serial Commands .....                                       | 187        |
| Example .....   | 188        |
| <b>KEYBOARD WEDGE TABLE .....</b>                           | <b>189</b> |
| Key Type & Status .....                                     | 191        |
| Key Type.....   | 191        |
| Key Status .....  | 191        |
| Example .....   | 192        |
| <b>NUMERAL SYSTEMS .....</b>                                | <b>193</b> |
| Decimal System.....   | 193        |
| Hexadecimal System.....                                     | 194        |
| ASCII Table.....  | 195        |
| <b>READING DRIVER LICENSES .....</b>                        | <b>196</b> |
| License Parsing Setup .....                                 | 196        |

|                             |     |
|-----------------------------|-----|
| Data Sequence Setup .....   | 197 |
| Separators and Fields ..... | 203 |
| Edit Separators.....        | 204 |
| Edit Fields .....           | 205 |

# INTRODUCTION

---

The small-form-factor 1500 Series Barcode Scanners are now capable of reading 2D barcodes. The tethered handheld scanners are designed to help accelerate productivity while lowering the total cost of ownership. Intensive data collection jobs are made easier with fast, accurate barcode scanning in various working environments, especially in small businesses. A new ordering option is provided for adapting a 2D scan engine to read both 1D and 2D barcodes.

Owing to the slim, ergonomic design, extremely low power consumption, and powerful decoding capability, CipherLab Barcode Scanners are the best choice for the following applications –

- ▶ Receiving in Retail
- ▶ Product labeling & Tracking
- ▶ Shelf Product Replenishment
- ▶ Mobile Point of Sale (POS)
- ▶ Mobile Inventory Management
- ▶ Order Picking & Staging
- ▶ Work-In-Process Tracking
- ▶ Material Flow Control
- ▶ Transportation & Distribution
- ▶ Warehousing
- ▶ Asset Management

This manual contains information on operating the scanner and using its features. It is better to keep one copy of the manual at hand for quick reference or maintenance purposes. To avoid any improper disposal or operation, please read the manual thoroughly before use.

Thank you for choosing CipherLab products!



## INSIDE THE PACKAGE

The items included in the package may be different, depending on order. Rich choices of output interfaces are available to enhance the total performance of the scanner. Refer to product specifications.

Save the box and packaging material for future use in case it is need to store or ship the scanner.

- ▶ Barcode Scanner: 1504
- ▶ Product CD

---

Note: The CD-ROM includes this manual and Windows-based *ScanMaster* software for configuration, as well as the USB Virtual COM driver.

---

## PRODUCT HIGHLIGHTS

- ▶ Small-form-factor and built tough to survive drop test
- ▶ Extremely low power consumption
- ▶ Firmware upgradeable
- ▶ Supports most popular barcode symbologies, including GS1-128 (EAN-128), GS1 DataBar (RSS), etc.
- ▶ Supports negative barcodes
- ▶ Supports a variety of 2D symbologies
- ▶ Supports different scan modes, including Aiming Mode and Multi-Barcode Mode<sup>Note</sup>
- ▶ User feedback via LED indicator and beeper
- ▶ Beeping tone and duration programmable for Good Read
- ▶ Provides choices of output interfaces, including RS-232, Keyboard Wedge, and USB.
- ▶ Programmable parameters include data output format, editing format, symbologies, etc.

---

Note: In any scan mode other than Multi-Barcode Mode, a barcode acceptable to 1504 can only contain data of 7 KB at most.

---



## SYMOLOGIES SUPPORTED

Most of the popular barcode symbologies are supported, as listed below. Each can be individually enabled or disabled. The scanner will automatically discriminate and recognize all the symbologies that are enabled. Refer to [Chapter 3 Changing Symbology Settings](#) for details of each symbology.

| Symbologies Supported: Enable/Disable |                                      | Default |          |
|---------------------------------------|--------------------------------------|---------|----------|
| <b>Codabar</b>                        |                                      | Enabled |          |
| <b>Code 93</b>                        |                                      | Enabled |          |
| <b>MSI</b>                            |                                      |         | Disabled |
| <b>Code 128</b>                       | Code 128                             | Enabled |          |
|                                       | GS1-128 (EAN-128)                    | Enabled |          |
|                                       | ISBT 128                             | Enabled |          |
| <b>Code 2 of 5</b>                    | Industrial 25                        | Enabled |          |
|                                       | Interleaved 25                       | Enabled |          |
|                                       | Matrix 25                            |         | Disabled |
|                                       | Chinese 25                           |         | Disabled |
| <b>Code 3 of 9</b>                    | Code 39                              | Enabled |          |
|                                       | Italian Pharmacode                   |         | Disabled |
|                                       | Trioptic Code 39                     |         | Disabled |
| <b>EAN/UPC</b>                        | EAN-8                                | Enabled |          |
|                                       | EAN-8 Addon 2                        |         | Disabled |
|                                       | EAN-8 Addon 5                        |         | Disabled |
|                                       | EAN-13                               | Enabled |          |
|                                       | EAN-13 & UPC-A Addon 2               |         | Disabled |
|                                       | EAN-13 & UPC-A Addon 5               |         | Disabled |
|                                       | ISBN                                 |         | Disabled |
|                                       | UPC-E0                               | Enabled |          |
|                                       | UPC-E1                               |         | Disabled |
|                                       | UPC-E Addon 2                        |         | Disabled |
|                                       | UPC-E Addon 5                        |         | Disabled |
|                                       | UPC-A                                | Enabled |          |
| <b>GS1 DataBar (RSS)</b>              | GS1 DataBar Omnidirectional (RSS-14) |         | Disabled |
|                                       | GS1 DataBar Truncated                |         | Disabled |
|                                       | GS1 DataBar Stacked                  |         | Disabled |
|                                       | GS1 DataBar Stacked Omnidirectional  |         | Disabled |



|                         |                                     |         |          |
|-------------------------|-------------------------------------|---------|----------|
|                         | GS1 DataBar Limited (RSS Limited)   |         | Disabled |
|                         | GS1 DataBar Expanded (RSS Expanded) |         | Disabled |
|                         | GS1 DataBar Expanded Stacked        |         | Disabled |
| <b>Code 11</b>          |                                     |         | Disabled |
| <b>Composite Code</b>   | Composite CC-A/B                    |         | Disabled |
|                         | Composite CC-C                      |         | Disabled |
|                         | Composite TLC-39                    |         | Disabled |
| <b>Postal Code</b>      | US Postnet                          | Enabled |          |
|                         | US Planet                           | Enabled |          |
|                         | UK Postal                           | Enabled |          |
|                         | Japan Postal                        | Enabled |          |
|                         | Australian Postal                   | Enabled |          |
|                         | Dutch Postal                        | Enabled |          |
|                         | USPS 4CB/One Code/Intelligent Mail  |         | Disabled |
|                         | UPU FICS Postal                     |         | Disabled |
| <b>2D Symbolologies</b> | PDF417                              | Enabled |          |
|                         | MicroPDF417                         |         | Disabled |
|                         | Data Matrix                         | Enabled |          |
|                         | Maxicode                            | Enabled |          |
|                         | QR Code                             | Enabled |          |
|                         | MicroQR                             | Enabled |          |
|                         | Aztec                               | Enabled |          |




# QUICK START

The configuration of the scanner can be done by reading the setup barcodes contained in this manual or via the *ScanMaster* software.

This section describes the procedure of configuring the scanner by reading the setup barcodes and provides some examples for demonstration.

Note: If RS-232 or USB Virtual COM is selected for output interface, the host can directly send serial commands to configure the scanner.

For example, run HyperTerminal.exe and type the 6-digit command located under each setup barcode. Refer to [Appendix II Host Serial Commands](#).

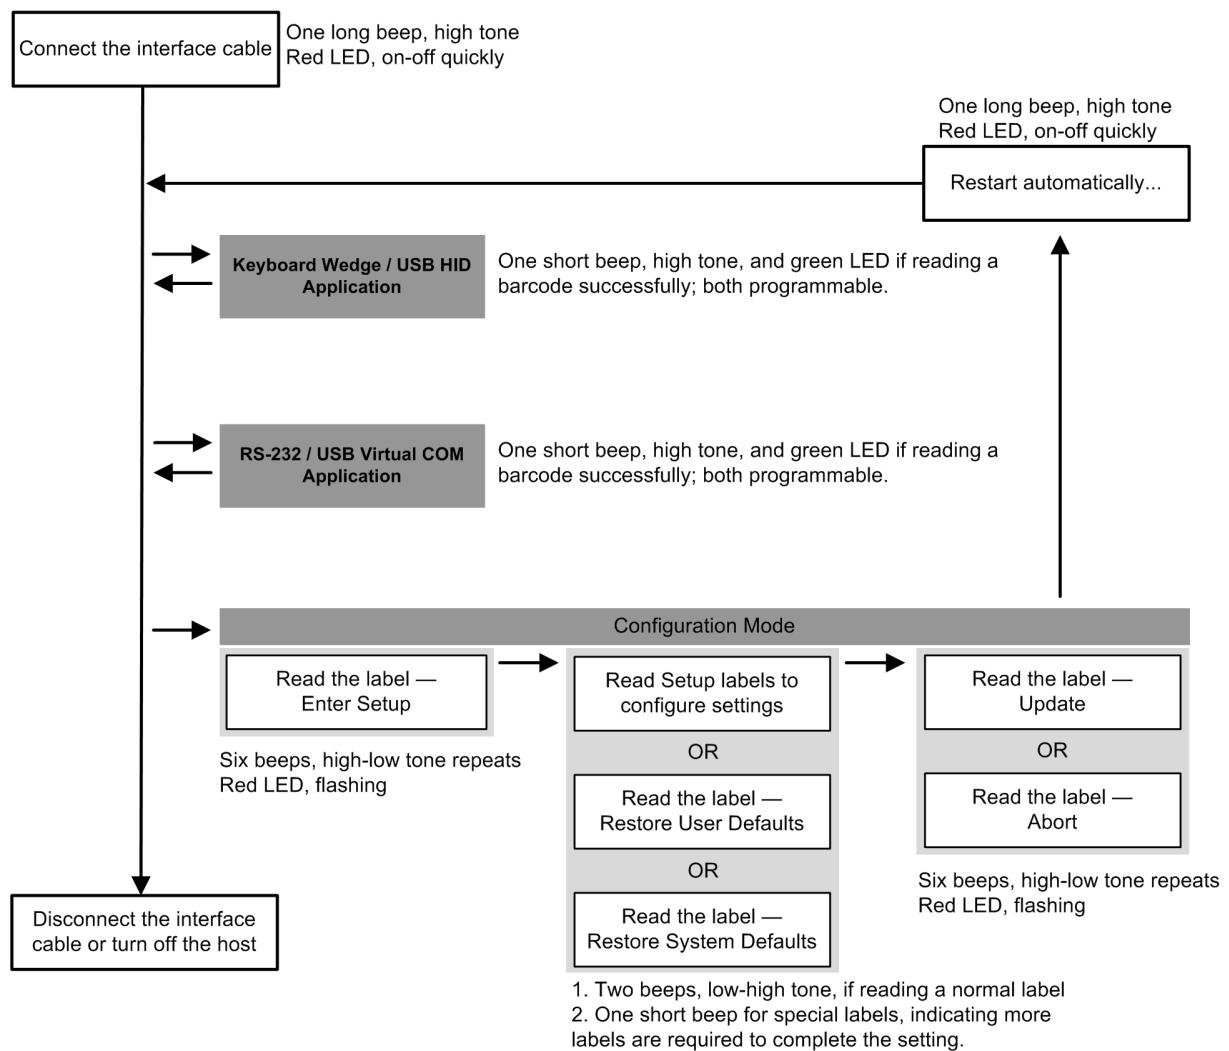

## ENTER CONFIGURATION MODE

For the scanner to enter the configuration mode, having it read the "Enter Setup" barcode, which can be located at the bottom of almost every even page of this manual.

- ▶ The scanner will respond with six beeps and its LED indicator will become flashing red after reading the barcode.

Enter Setup



For configuring scanner parameters, see "Read a Setup Barcode" below.

## EXIT CONFIGURATION MODE

For the scanner to save settings and exit the configuration mode, having it read the "Update" barcode, which can be located at the bottom of almost every odd page of this manual. To exit the configuration mode without saving any changes, have the scanner read the "Abort" barcode instead.

- ▶ Just like reading the "Enter Setup" barcode, the scanner will respond with six beeps and its LED indicator will become flashing red after reading the barcode. Wait for a few seconds for the scanner to restart itself.

Update



109999

Abort



109998



Enter Setup

## DEFAULT SETTINGS

### SAVE USER SETTINGS AS DEFAULTS

For the scanner to keep the customized settings as user defaults, having it read the "Save as User Defaults" barcode. This is a normal setup barcode, and the scanner will respond with two beeps (low-high tone).

- ▶ After reading the "Update" barcode, the current settings will be saved as user defaults.

Save as User  
Defaults



109986

### RESTORE USER DEFAULTS

For the scanner to restore the user defaults saved earlier, having it read the "Restore User Defaults" barcode. This is a normal setup barcode, and the scanner will respond with two beeps (low-high tone).

- ▶ After reading the "Update" barcode, all the parameters of the scanner will return to their customized values.

Restore User  
Defaults



109987

### RESTORE SYSTEM DEFAULTS

For the scanner to restore the factory defaults, having it read the "Restore System Defaults" barcode. This is a normal setup barcode, and the scanner will respond with two beeps (low-high tone).

- ▶ After reading the "Update" barcode, all the parameters of the scanner will return to their default values.

Restore System  
Defaults



109993

Note: The system default value (if there is) for each setting is indicated by an asterisk **"\*"**.



Update

## READ A SETUP BARCODE


### CONFIGURE PARAMETERS

For most of the scanner parameters, only one read is required to set them to new values. The scanner will respond with two beeps (low-high tone) when each parameter is set successfully.

But for a number of special parameters, multiple reads are required to complete the setting. In this case, the scanner will respond with a short beep to indicate it needs to read more setup barcodes. These special parameters may require reading one or more setup barcodes, such as

- ▶ Numeric barcodes, say, for keyboard type, inter-character delay, length qualification
- ▶ Hexadecimal barcodes, say, for character strings as prefix, suffix, etc.
- ▶ When “Keyboard Wedge” or “USB HID” is configured for interface, Key Type and Key Status will then become applicable. Decide whether or not to change key status when “Normal Key” is selected for Key Type.

To complete the configuration of these special parameters, it requires reading the “Validate” barcode, and the scanner will respond with two beeps (low-high tone) to indicate the input values are validated.

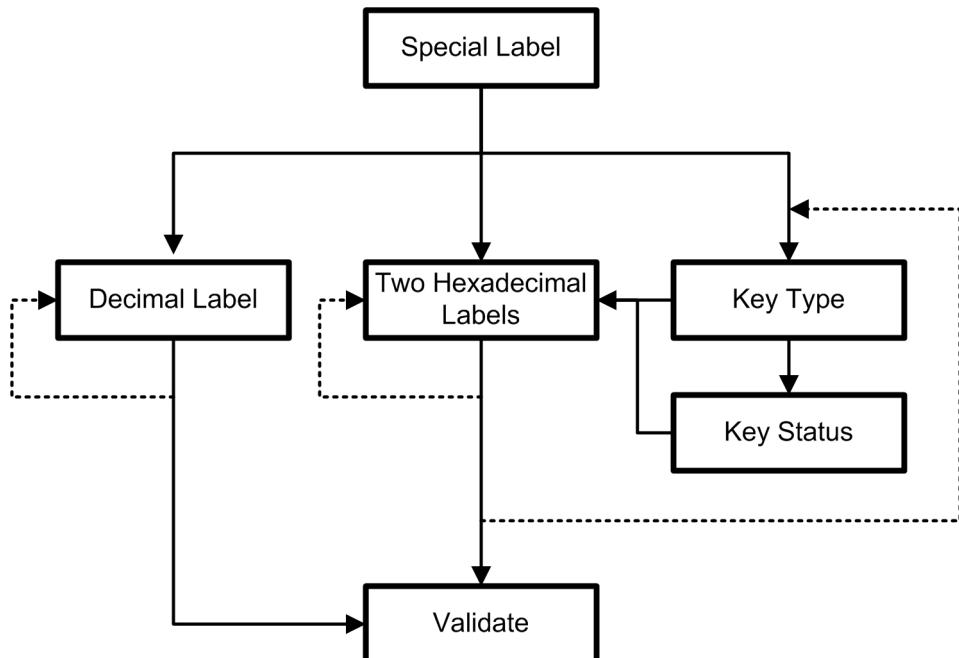






The example below shows how to save settings as "User Default" so that to restore user defaults later:

| Steps | Action   | User Feedback if Successful  |
|-------|--|--|
| 1     | Power on the scanner...  | The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off quickly.    |
| 2     | Enter the Configuration Mode...<br><br>Enter Setup   | The scanner will respond with six beeps (high-low tone repeats three times), and its LED indicator will be flashing red. |
| 3     | Read a Setup barcode...<br><br>For example,<br><br>*Enable Industrial 25                     | The scanner will respond with two beeps (low-high tone) if reading a normal setup barcode.                               |
| 4     | Exit the Configuration Mode...   | Same as for <i>Enter the Configuration Mode</i> .  |
| 5     | The scanner will automatically restart itself...<br>* When any configuration error occurs... | Same as for <i>Power on the scanner</i> .<br>The scanner will respond with one long beep (low tone).                     |





Update

     The example below shows how to set numeric parameters:

| Steps | Action  | User Feedback if Successful   |
|-------|---|---|
| 1     | Power on the scanner...   | The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off quickly.                                       |
| 2     | Enter the Configuration Mode...<br><br>  | The scanner will respond with six beeps (high-low tone repeats three times), and its LED indicator will become flashing red.                                |
| 3     | Read a Setup barcode...<br><br>For example,<br><br><br><br>100309   | The scanner will respond with two beeps (low-high tone) if reading a normal setup barcode.  |
|       | <br><br><br>100604  |   |
|       | <br><br><br>100606  | The scanner will respond with one short beep if reading a special setup barcode such as "Max. Length", indicating the setup requires reading more barcodes. |
|       | <br><br><br>109901<br><br><br>109905 | Read the "Decimal Value" barcode(s).<br>▶ Refer to Appendix IV "Decimal System"   |
|       | <br>109994   | The scanner will respond with two beeps (low-high tone) when the input values are validated.  |
| 4     | Exit the Configuration Mode...<br><br><br>109999<br><br><br>OR<br>109998  | Same as for <i>Enter the Configuration Mode</i> .   |
| 5     | The scanner will automatically restart itself...  | Same as for <i>Power on the scanner</i> .   |



  The example below shows how to set string parameters:

| Steps | Action   | User Feedback if Successful  |
|-------|--|--|
| 1     | Power on the scanner...  | The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off quickly.  |
| 2     | Enter the Configuration Mode...<br><br>Enter Setup   | The scanner will respond with six beeps (high-low tone repeats three times), and its LED indicator will become flashing red.   |
| 3     | Read a Setup barcode...<br><br>For example,<br><br><br><br><br><br><br><br> | The scanner will respond with one short beep if reading a special setup barcode such as "Prefix Code", indicating the setup requires reading more barcodes.  |
|       |  | When "Keyboard Wedge" or "USB HID" is configured for interface, Key Type and Key Status will then become applicable. Decide whether or not to change key status when "Normal Key" is selected for Key Type.<br>► Refer to Appendix III |
|       |  | Read the "Hexadecimal Value" barcodes for the desired character string. For example, read "2" and "B" for the scanner to prefix the character "+".<br>► Refer to Appendix IV "Hexadecimal System"                                      |
| 4     | Exit the Configuration Mode...<br><br><br><br><br><br><br><br>       | The scanner will respond with two beeps (low-high tone) when the input values are validated.<br>Same as for <i>Enter the Configuration Mode</i> .  |
| 5     | The scanner will automatically restart itself...<br><br><br><br><br><br>OR<br><br>109999      OR      109998   | Same as for <i>Power on the scanner</i> .  |



## LIST THE CURRENT SETTINGS

The current settings of all scanner parameters can be sent to the host computer for user inspection. The listing includes pages as shown below. Select the page of interest by having the scanner read the "List Page x" barcode. The scanner will respond with two beeps (low-high tone) and send the selected page to the host immediately.

Lists settings regarding Firmware Version, Serial Number, Interface, Buzzer, and Other Scanner Parameters

**List Page 1**



109950

Lists settings regarding Prefix, Suffix, and Length Code Setting (1/2)

**List Page 2**



109951

Lists settings regarding Prefix, Suffix, and Length Code Setting (2/2)

**List Page 3**



109952

Lists settings regarding Code ID

**List Page 4**



109953

Lists settings regarding: Readable Symbologies (1/2)

**List Page 5**



109954

Lists settings regarding: Readable Symbologies (2/2)

**List Page 6**



109955

Lists settings regarding Symbology Parameters (1/3)

**List Page 7**



109956

Lists settings regarding Symbology Parameters (2/3)

**List Page 8**



109957

Lists settings regarding Symbology Parameters (3/3)

**List Page 9**



109958

Reserved

**List Page 10**



109959



Lists settings regarding Editing Format 1  
(1/2)

List Page 11



109937

Lists settings regarding Editing Format 1  
(2/2)

List Page 12



109938

Lists settings regarding Editing Format 2  
(1/2)

List Page 13



109939

Lists settings regarding Editing Format 2  
(2/2)

List Page 14



109940

Lists settings regarding Editing Format 3  
(1/2)

List Page 15



109941

Lists settings regarding Editing Format 3  
(2/2)

List Page 16



109942

Lists settings regarding Editing Format 4  
(1/2)

List Page 17



109943

Lists settings regarding Editing Format 4  
(2/2)

List Page 18



109944

Lists settings regarding Editing Format 5  
(1/2)

List Page 19



109945

Lists settings regarding Editing Format 5  
(2/2)

List Page 20



109946

Lists settings of Driver License parsing

List Page 22



109948



## CREATE ONE-SCAN SETUP BARCODES

The fact is most of the scanner parameters require only one read for setting new values. To facilitate configuring the scanner, create One-Scan setup barcodes for use.

The requirements of a One-Scan setup barcode are:

- ▶ a prefix of the "#@" characters
- ▶ the six digits of command parameters
- ▶ a suffix of the "#" character

For example, the scanner needs reading three setup barcodes for the command parameter "109952" to take effect:

Enter Setup



List Page 3



109952

Update



109999

Now, it requires only one read:

One-Scan Setup Barcode  
for 109952



#@109952#

---

Note: The scanner will restart automatically upon reading the One-Scan setup barcode for changing the interface. It will respond with a long beep and its LED will come on-off shortly.

---



Enter Setup

# Chapter 1

## UNDERSTANDING THE BARCODE SCANNER

---

This chapter explains the features and usage of the barcode scanner.

### IN THIS CHAPTER

---

|  |    |
|--|----|
| 1.1 Power .....                                | 16 |
| 1.2 Transmit Buffer .....                      | 16 |
| 1.3 LED Indicator .....                        | 17 |
| 1.4 Beeper .....                               | 18 |
| 1.5 Send "NR" to Host .....                    | 20 |
| 1.6 Scan Modes .....                           | 21 |
| 1.7 Scanning Timeout .....                     | 25 |
| 1.8 Delay between Re-read .....                | 26 |
| 1.9 Read Redundancy (1D) .....                 | 27 |
| 1.10 Addon Security for UPC/EAN Barcodes ..... | 28 |
| 1.11 Auto-Sense Mode .....                     | 29 |
| 1.12 Negative Barcodes .....                   | 29 |
| 1.13 Cable Auto-Detect .....                   | 31 |
| 1.14 Picklist Mode .....                       | 32 |



## 1.1 POWER

Connect the interface cable between the scanner and computer.

- ▶ If using the RS-232 cable, it must join the power supply cord to power up the scanner.
- ▶ The scanner will respond with one long beep (high tone) and its LED indicator will become solid red and go off quickly.

## 1.2 TRANSMIT BUFFER

The scanner is designed to send any collected data to a host computer one by one via the transmit buffer (SRAM). Upon reading a barcode successfully, the scanner responds with one short beep (high tone) and its LED indicator becomes solid green and goes off quickly. However, the host computer may not receive the data immediately if using a low baud rate or waiting for handshake signal (flow control). With the 10 KB transmit buffer, the scanner can ignore the transmission status and keep on reading barcodes until the buffer is full. A warning is given when the transmit buffer is full — the scanner will respond with one long beep (low tone) and its LED indicator will become solid red and go off quickly.

---

Note: The 10 KB transmit buffer on the scanner can hold as many as 640 scans based on EAN-13 barcodes. Data will be cleared out once the power adaptor to the RS-232 cable is removed or other interface cable is disconnected!

---



## 1.3 LED INDICATOR

The dual-color LED on top of the scanner is used to provide user feedback. For example, the LED becomes solid red and goes off quickly upon powering on or running out of transmit buffer. Tell the difference by the beeps – for example, it will hear a long beep of high tone when powering on the scanner, and a long beep of low tone when the transmit buffer becomes full.

| Scanner LED   |               | Meaning   |
|---------------|---------------|---|
| Red, on-off   | ---           | <ul style="list-style-type: none"> <li>▶ Power on, with one long beep (high tone, LED on for 1 second)</li> <li>▶ Transmit buffer full, with one long beep (low tone)</li> <li>▶ RS-232/USB Virtual COM connection fails, with two beeps (high-low tone)</li> </ul> |
| ---           | Green, on-off | Good Read, with one short beep (high tone) and beeper pitch and duration programmable   |
| Red, flashing | ---           | Configuration Mode (On/Off ratio 0.5 s: 0.5 s)  |

### 1.3.1 GOOD READ LED

\*Enable  
Good Read LED



101014

Disable  
Good Read LED



101013

### 1.3.2 GOOD READ LED DURATION

By default, the Good Read LED stays on for 40 milliseconds. Specify a value, ranging from 1 to 254 in units of 10 milliseconds.

Good Read LED  
Time-out after  
0.01~2.54 sec.  
(\*40 ms)



101020

- 1) Read the barcode above to specify the time interval before the Good Read LED goes off.
- 2) Read the “[Decimal Value](#)” barcode on page 193. For example, read “1” and “5” for the LED to go off after 150 milliseconds.
- 3) Read the “Validate” barcode on the same page to complete this setting.



Update

## 1.4 BEEPER

The scanner has a buzzer to provide user feedback in various operating conditions.

| Beeping   | Meaning  |
|---|--|
| One long beep, high tone                                      | Power on, with red LED on (1 second) and off quickly   |
| One short beep, high tone<br>▶ Programmable, default to 4 KHz | Good Read, with green LED on-off quickly   |
| Six short beeps<br>▶ High-low tone repeats three times        | ▶ Enter Configuration Mode, with red LED flashing<br>▶ Exit Configuration Mode   |
| Two beeps, low-high tone                                      | ▶ Setup barcode read successfully  |
| Two beeps, high-low tone                                      | RS-232/USB Virtual COM connection fails (data saved in Transmit Buffer), with red LED on-off quickly   |
| One short beep, high tone                                     | More setup barcode required  |
| One short beep, low tone                                      | More barcodes required to complete the "output sequence" requirements of Multi-Barcode Editor, with green LED on-off quickly (Upon completion, same as Good Read.) |
| One long beep, low tone                                       | ▶ Transmit buffer full, with red LED on-off quickly<br>▶ Configuration error (Wrong barcode...)  |
| Two long beeps, high-low tone                                 | Multi-Barcode Mode – Buffer full   |

### 1.4.1 BEEPER VOLUME

Mute



101009

Minimum Volume



101010

Medium Volume



101011

\*Maximum Volume



101012



## 1.4.2 GOOD READ BEEP

### Frequency

8 kHz



101001

\*4 kHz



101002

2 kHz



101003

1 kHz



101004

### Duration

\*Shortest



101005

Shorter



101006

Longer



101007

Longest



101008



## 1.5 SEND “NR” TO HOST

This feature only works when Keyboard Wedge or RS-232 is selected for output interface. Have the scanner send the “NR” string to the host to notify the No Read event.

**Enable**



100267

**\*Disable**



100266



Enter Setup

## 1.6 SCAN MODES

Different scan modes are supported – select the scan mode that best suits the requirements of a specific application. Refer to the comparison table below.

- In any scan mode other than Multi-Barcode Mode, a barcode acceptable to 1504 can only contain data of 7 KB at most.

| Scan Mode           | Start to Scan |                    |              |                     | Stop Scanning   |                    |                    |         |
|---------------------|---------------|--------------------|--------------|---------------------|-----------------|--------------------|--------------------|---------|
|                     | Always        | Press trigger once | Hold trigger | Press trigger twice | Release trigger | Press trigger once | Barcode being read | Timeout |
| Test mode           | ✓             |                    |              |                     |                 |                    |                    |         |
| Laser mode          |               |                    | ✓            |                     | ✓               |                    | ✓                  | ✓       |
| Auto Off mode       |               | ✓                  |              |                     |                 |                    | ✓                  | ✓       |
| Auto Power Off mode |               | ✓                  |              |                     |                 |                    |                    | ✓       |
| Aiming mode         |               |                    |              | ✓                   |                 |                    | ✓                  | ✓       |
| Multi-Barcode mode  |               |                    | ✓            |                     | ✓               |                    |                    |         |
| Presentation mode   | ✓             |                    |              |                     |                 |                    |                    |         |

Note: By default, the scan mode is set to Laser mode.

### 1.6.1 TEST MODE

The scanner is always scanning.

- Capable of decoding the same barcode repeatedly without removing it, for testing purpose.

Test Mode



100207



Update

## 1.6.2 LASER MODE

The scanner will start scanning once the trigger is held down.

- ▶ The scanning won't stop until (1) a barcode is decoded, (2) the pre-set timeout expires, or (3) release the trigger.

---

Note: Refer to "Scanning Timeout".

---

\*Laser Mode



100206

## 1.6.3 AUTO OFF MODE

The scanner will start scanning once the trigger is pressed.

- ▶ The scanning won't stop until (1) a barcode is decoded, and (2) the pre-set timeout expires.

---

Note: Refer to "Scanning Timeout".

---

Auto Off Mode



100200

## 1.6.4 AUTO POWER OFF MODE

The scanner will start scanning once the trigger is pressed.

- ▶ The scanning won't stop until the pre-set timeout expires, and, the pre-set timeout period re-counts after each successful decoding.

---

Note: Refer to "Delay between Re-read" and "Scanning Timeout".

---

Auto Power Off Mode



100202



## 1.6.5 AIMING MODE

The scanner will aim at a barcode once the trigger is pressed, and start scanning when the trigger is pressed again within one second.

- ▶ The scanning won't stop until (1) a barcode is decoded, and (2) the pre-set timeout expires.

Aiming Mode



100208

### Aiming Timeout

Limit the aiming time interval (1~15). By default, the scanner time-out is set to 1 second.

Aiming Time-out  
after 1~15 sec.  
(\*1)



100226

1. Read the barcode above to specify the time interval before aiming ends. (It is set to 1 by default.)
2. Read the "[Decimal Value](#)" barcode on page 193. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 10 seconds.
3. Read the "Validate" barcode on the same page to complete this setting.

## 1.6.6 MULTI-BARCODE MODE

The scanner will be scanning as long as the trigger is held down, capable of decoding one single barcode, as well as multiple unique barcodes one at a time. While decoding a bunch of unique barcodes, if a barcode is decoded twice, its subsequent decoding will be ignored and the scanner is expecting another unique barcode.

For 1504 to decode multiple unique barcodes, the maximum output data length of all the barcodes is 10 KB after configuration. When the output length exceeds 10 KB, Multi-Barcode Mode will not take effect.

- ▶ The scanning won't stop until release the trigger.

Multi-Barcode Mode



100209

Note: (1) A barcode is considered unique when its Code Type or data is different from others.

(2) Multi-Barcode Mode has nothing to do with the [Multi-Barcode Editor](#).



Update

## 1.6.7 PRESENTATION MODE

The scanner will be expecting barcodes. Whenever a barcode is brought within range, the scanner will be able to decode it. It is suggested to seat it in the Auto-Sense Stand for hands-free operation.

Presentation Mode



100210

### Low Light Enhancement

Enable Low Light Enhancement will cause the illumination to remain on at a low power in low lighting conditions.

Enable



102247

\*Disable



102246



## 1.7 SCANNING TIMEOUT

Specify the scanning time interval (1~254 sec.; 0= Disable) when the scan mode is set to any of the following –

- ▶ Laser mode
- ▶ Auto Off mode
- ▶ Auto Power Off mode
- ▶ Aiming mode

Scanner Time-out  
after 0~254 sec.  
(\*10)



100235

- 1) Read the barcode above to specify the time interval before the scan engine times out.
- 2) Read the “[Decimal Value](#)” barcode on page 193. For example, read “1” and “5” for the scanner to automatically shut down after being idle for 15 seconds.
- 3) Read the “Validate” barcode on the same page to complete this setting.



Update

## 1.8 DELAY BETWEEN RE-READ

This is also referred to as the “Blocking Time”, which is used to prevent the scanner from accidentally reading the same barcode twice when the scan mode is set to any of the following –

- ▶ Auto Power Off mode
- ▶ Presentation mode



## 1.9 READ REDUNDANCY (1D)

Select the level of reading security. For example,

- ▶ If "No Redundancy" is selected, one successful decoding will make the reading valid and induce the "READER Event".
- ▶ If "Two Times" is selected, it will take a total of three consecutive successful decoding of the same barcode to make the reading valid. The higher the reading security is (that is, the more redundancy the user selects), the slower the reading speed gets.

It is obvious that the more redundancy selected, the higher the reading security is, and thus, the slower the reading speed becomes. It will have to compromise between reading security and decoding speed.

\***No Redundancy**



100262

**One Time**



100263

**Two Times**



100264



Update

## 1.10 ADDON SECURITY FOR UPC/EAN BARCODES

The scanner is capable of decoding a mix of UPC/EAN barcodes with and without addons. The read redundancy (2~30 times) allows changing the number of times to decode a UPC/EAN barcode before transmission. The more redundancy selected, the higher the reading security is, and thus, the slower the reading speed becomes. It will have to compromise between reading security and decoding speed.

---

Note: UPC/EAN Addon 2 and Addon 5 must be enabled individually for this setting to take effect.

---

Addon Security Level  
(\*2~30)



100380


- I) Read the barcode above to specify the read redundancy for UPC/EAN barcodes. (It is set to 2 by default.)
- 2) Read the "[Decimal Value](#)" barcode on page 193. For example, read "1" and "2" for the scanner to re-read the barcode for 12 times.
- 3) Read the "Validate" barcode on the same page to complete this setting.



## 1.11 AUTO-SENSE MODE

This mode is only available when seat the scanner in the Auto-Sense Stand. Enable this mode, it will force the scanner to apply Laser mode as the scan mode. However, it works slightly different from the original Laser mode. Now the scanner will be expecting barcodes as long as it is seated in the Auto-Sense Stand, as shown below. Whenever a barcode is brought within range, the scanner will be able to decode it.

Refer to [1.6.7 Presentation Mode](#).

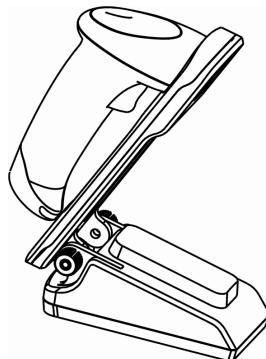

Note: To stop this mode, remove the scanner from the stand or have the scanner read the "Disable (Auto-Sense)" barcode below. It will return to Laser mode. If Laser mode is not desired, proceed to select a scan mode best suits the application.

Enable



\*Disable



## 1.12 NEGATIVE BARCODES



Update

Normally, barcodes are printed with the color of the bars darker than that of the spaces. But for negative barcodes, they are printed in the opposite sense just like negative films. The spaces of negative barcodes are printed with a color darker than that of the bars. Configure the scanner to be able to read negative barcodes in the following symbologies:

- ▶ All 1D symbologies
- ▶ Data Matrix
- ▶ QR Code
- ▶ Aztec

**Enable**



100225

**\*Disable**



100224



## 1.13 CABLE AUTO-DETECT

Find the interface cable provided inside the package. Connect it to the scanner. The scanner will detect the interface automatically. Refer to [Chapter 2 — Selecting Output Interface](#).

| Cable Auto-Detect | Defaults                                  |
|-------------------|---|
| Keyboard Wedge    | PCAT (US) for keyboard type               |
| RS-232            | 115200 bps, 8 bits, No parity, 1 stop bit |
| USB               | USB HID and PCAT (US) for keyboard type   |

Note: If "USB Virtual COM" is desired, have the scanner read the setup barcodes.

\*Enable



100017

Disable



100016



Update

## 1.14 PICKLIST MODE

Picklist mode enables the decoder to decode only the barcodes aligned at the center under the laser aiming pattern.

**Enable**



102201

**\*Disable**



102200



# Chapter 2

## SELECTING OUTPUT INTERFACE

---

In order to establish a proper connection between computer and the scanner, it suggests following these instructions –

- I) Connect the scanner and computer with the provided interface cable. The scanner is capable of detecting the interface.


- ▶ If using the RS-232 cable, join the power supply cord.
- ▶ If using the USB cable, it is set to USB HID by default.

If "USB Virtual COM" is desired, have the scanner read the setup barcodes.

| Cable Auto-Detect | Defaults                                  |
|-------------------|---|
| Keyboard Wedge    | PCAT (US) for keyboard type               |
| RS-232            | 115200 bps, 8 bits, No parity, 1 stop bit |
| USB               | USB HID and PCAT (US) for keyboard type   |

Note: Please make sure the cable using supports auto-detection. Check whether there is a sticker on the cable, stating "Cable Detection Supported".

- 2) Have the scanner read the "Enter Setup" barcode to enter the configuration mode.
- 3) Have the scanner read the associated barcodes to activate the desired interface.  
See the following sections for output interfaces supported.
- 4) Have the scanner read the barcodes for related settings.
- 5) Have the scanner read the "Update" barcode to apply the settings and quit the configuration mode.

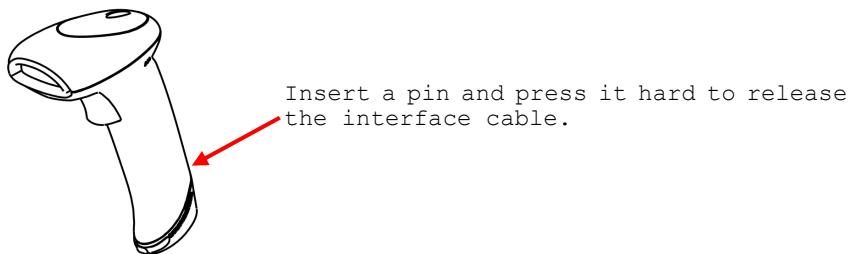

### IN THIS CHAPTER

---

|                               |    |
|-------------------------------|----|
| 2.1 Keyboard Wedge .....      | 34 |
| 2.2 RS-232 .....              | 44 |
| 2.3 Direct USB HID.....       | 49 |
| 2.4 Direct USB VCOM.....      | 58 |
| 2.5 Direct USB VCOM_CDC ..... | 60 |



## 2.1 KEYBOARD WEDGE

 
The Y cable allows connecting the scanner to the keyboard input port of PC and joining the keyboard as well. The scanned data will be transmitted to the host keyboard port as if it is manually entered via the keyboard.

| Keyboard Wedge Settings | Defaults            |
|-------------------------|---------------------|
| Keyboard Type           | PCAT (US)           |
| Alphabets Layout        | Normal              |
| Digits Layout           | Normal              |
| Capital Lock Type       | Normal              |
| Capital Lock State      | Off                 |
| Alphabets Transmission  | Case-sensitive      |
| Digits Transmission     | Alphanumeric keypad |
| Kanji Transmission      | Disable             |
| Alternate Composing     | No                  |
| Laptop Support          | Disable             |
| Inter-Character Delay   | 0 (ms)              |
| Inter-Function Delay    | 0 (ms)              |



### 2.1.1 ACTIVATE KEYBOARD WEDGE & SELECT KEYBOARD TYPE

When Keyboard Wedge interface is activated, it will have to select a keyboard type to complete this setting.



- 1) Read this barcode above to activate Keyboard Wedge and select a keyboard type.
- 2) Read the "[Decimal Value](#)" barcode on page 193. Refer to the table below for the number of desired keyboard type.
- 3) Read the "Validate" barcode on the same page to complete this setting.

#### Keyboard Type

By default, the keyboard type is set to PCAT (US). The following keyboard types are supported –

| No. | Keyboard Type         | No. | Keyboard Type                         |
|-----|-----------------------|-----|---------------------------------------|
| 1   | PCAT (US)             | 16  | PS55 001-2                            |
| 2   | PCAT (French)         | 17  | PS55 001-82                           |
| 3   | PCAT (German)         | 18  | PS55 001-3                            |
| 4   | PCAT (Italian)        | 19  | PS55 001-8A                           |
| 5   | PCAT (Swedish)        | 20  | PS55 002-1, 003-1                     |
| 6   | PCAT (Norwegian)      | 21  | PS55 002-81, 003-81                   |
| 7   | PCAT (UK)             | 22  | PS55 002-2, 003-2                     |
| 8   | PCAT (Belgium)        | 23  | PS55 002-82, 003-82                   |
| 9   | PCAT (Spanish)        | 24  | PS55 002-3, 003-3                     |
| 10  | PCAT (Portuguese)     | 25  | PS55 002-8A, 003-8A                   |
| 11  | PS55 A01-1            | 26  | IBM 3477 Type 4 (Japanese)            |
| 12  | PS55 A01-2 (Japanese) | 27  | PS2-30                                |
| 13  | PS55 A01-3            | 28  | IBM 34XX/319X, Memorex Telex 122 Keys |
| 14  | PS55 001-1            | 29  | User-defined table                    |
| 15  | PS55 001-81           | 30  | PCAT (Turkish)                        |
|     |                       | 31  | PCAT (Hungarian)                      |



## 2.1.2 KEYBOARD SETTINGS

- ▶ Alphabets Layout
- ▶ Digits Layout
- ▶ Capital Lock Type
- ▶ Capital Lock Setting
- ▶ Alphabets Transmission
- ▶ Digits Transmission
- ▶ Kanji Transmission
- ▶ Alternate Composing
- ▶ Laptop Support

### Alphabets Layout

---

By default, the alphabets layout is set to normal mode, also known as the standard English layout. Select French or German keyboard layout if necessary. The scanner will make adjustments when sending the "A", "Q", "W", "Z", "Y", and "M" characters according to this setting.

\*Normal



100060

AZERTY



100061

QWERTZ



100062

---


Note: This setting only works when the keyboard type selected is US keyboard, such as PCAT (US). The Alphabets Layout and Digits Layout setting must match the keyboard.

---



**US Keyboard Style – Normal**

QWERTY layout, which is normally used in western countries.

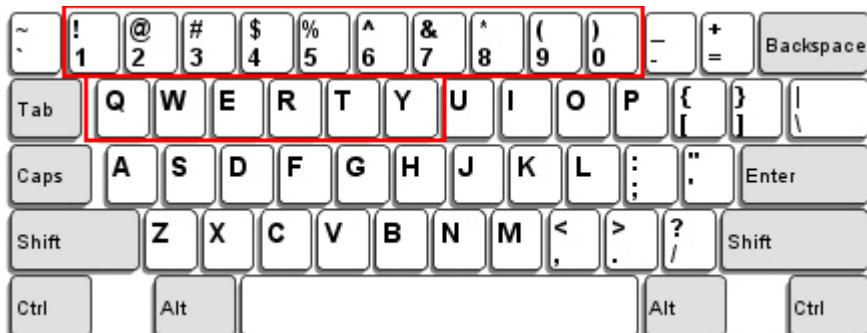

- ▶ Select “Lower Row” for the “Digits Layout” setting for the upper row is for special characters.

**French Keyboard Style – AZERTY**


French layout; see below for French Keyboard Style.



- ▶ Select “Upper Row” for the “Digits Layout” setting for the lower row is for special characters.

**German Keyboard Layout – QWERTZ**

German layout; see below for German Keyboard Style.

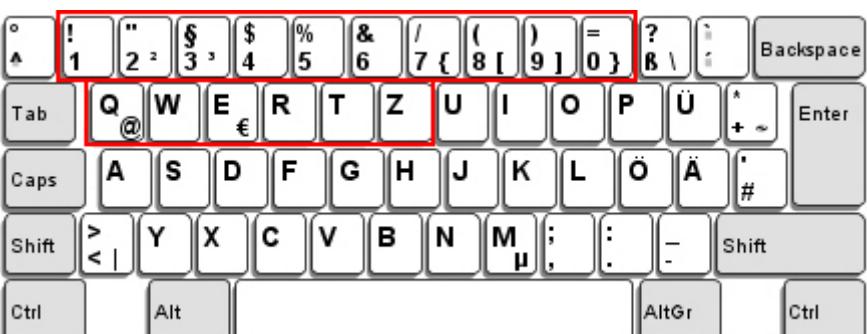

- ▶ Select “Lower Row” for the “Digits Layout” setting for the upper row is for special characters.



### Digits Layout

Select a proper layout that matches the alphabets layout. The scanner will make adjustments according to this setting.

| Options   | Description  |
|-----------|--|
| Normal    | Depends on the [Shift] key or [Shift Lock] setting |
| Lower Row | For QWERTY or QWERTZ keyboard                      |
| Upper Row | For AZERTY keyboard                                |

\*Normal



100046

Upper Row



100049

Lower Row



100048

---

Note: This setting is meant to be used with the Alphabets Layout; and perhaps with the Character Substitution setting when support to certain keyboard types (languages) is unavailable but required.

---



Enter Setup

### Capital Lock Type & Setting

In order to send the alphabets with correct case, the scanner needs to know the status of Caps Lock on the keyboard. Incorrect settings may result in reversed case of the alphabets being transmitted.

| Cap Lock Type | Description   |
|---------------|---|
| Normal        | Normal type   |
| Capital Lock  | When enabled, the keys of alphabetic characters will be interpreted as capital letters. However, this does not affect the number or punctuation keys. |
| Shift Lock    | When enabled, the keys of alphabetic characters will be interpreted as capital letters. In addition, this affects the number or punctuation keys.     |

\*Normal



100042

Shift Lock



100045

Capital Lock



100044

| Capital Lock State | Description   |
|--------------------|---|
| Capital Lock OFF   | Assuming that the status of Caps Lock on the keyboard is OFF, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabets Transmission).   |
| Capital Lock ON    | Assuming that the status of Caps Lock on the keyboard is ON, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabets Transmission).<br>▶ Refer to the Capital Lock Type above.   |
| Auto Detection     | The scanner will automatically detect the status of Caps Lock on the keyboard before data is transmitted; transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabets Transmission). |

Auto Detect



100054

Capital Lock ON



100053



\*Capital Lock OFF



100052

**Alphabets Transmission**

By default, the alphabets transmission is case-sensitive, meaning that the alphabets will be transmitted according to their original case, the status of Caps Lock on the keyboard, as well as the Capital Lock setting. Select [Ignore Case] to have alphabets transmitted according to the status of Caps Lock on the keyboard only.

Ignore Case



100051

\*Case-sensitive



100050



1. Letter Case for Output Format

Refer to 4.1 Letter Case.



Abcd

ABCD

abcd



2. Alphabets Transmission for Keyboard Wedge &amp; Bluetooth HID

\*Case-sensitive

Ignore Case



 
3a. Check Caps Lock on the keyboard



4. Check Capital Lock setting


|                   |  |  |
|-------------------|--|--|
| *Capital Lock OFF |  |  |
| Capital Lock ON   |  |  |
| Auto Detection    |  |  |

3b. Check Caps Lock on the keyboard



### Digits Transmission

By default, the alphanumeric keypad is used for transmitting digits. Select “Numeric Keypad” if wishing to use the keys on the numeric keypad.

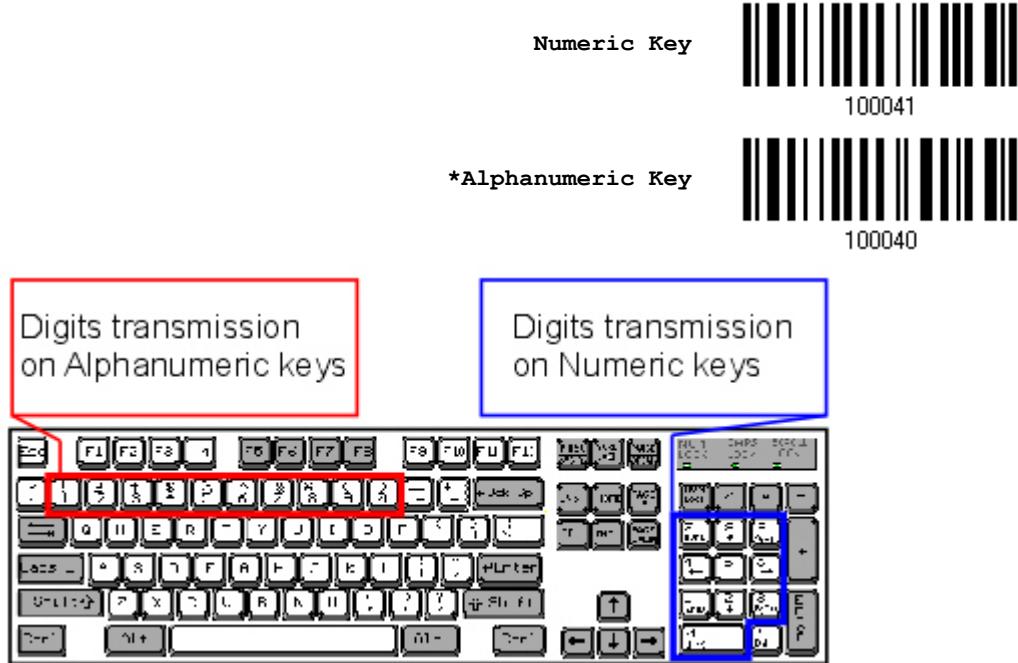

Note: If selecting “Numeric Keypad”, the Num Lock status of the physical keyboard should be “ON”.

### Kanji Transmission

Kanji Transmission is supported by the scanner when either Keyboard Wedge or Direct USB HID is selected for the output interface. By Kanji Transmission, when the host computer is running on Japanese Windows O.S., the scanner is able to transmit Japanese characters including the Chinese characters used in modern Japanese writing system.

Kanji Transmission is disabled by default. Enable/disable scanner’s Kanji Transmission by reading the following barcodes:




### ALT Composing

By default, Alternate key composing is disabled. Select [Yes] to allow emulating Alternate key code of a specific keyboard character. For example, [Alt] + [065] will be sent to host for the character "A" regardless the keyboard type using.



### Laptop Support

By default, laptop support value is disabled. It suggests enabling this feature if connecting the wedge cable to a laptop without an external keyboard being inter-connected.

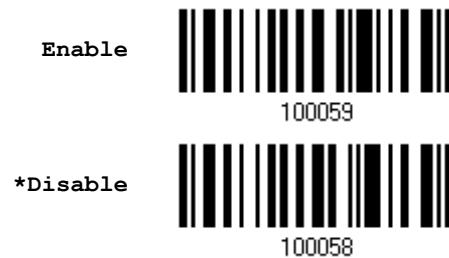

### 2.1.3 INTER-CHARACTER DELAY

By default, the inter-character delay is set to zero. Specify a value, ranging from 0 to 254 in units of millisecond, to match the computer response time of the keyboard interface. Such delay time is inserted between every character being transmitted. The longer the delay time is, the slower the transmission speed will be.



- 1) Read the barcode above to specify the inter-character delay.
- 2) Read the "[Decimal Value](#)" barcode on page 193 for the desired inter-character delay (millisecond).
- 3) Read the "Validate" barcode on the same page to complete this setting.



## 2.1.4 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of millisecond, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



100012

- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the “[Decimal Value](#)” barcode on page 193 for the desired inter-function delay (millisecond).
- 3) Read the “Validate” barcode on the same page to complete this setting.

## 2.1.5 SPECIAL KEYBOARD FEATURE

By default, the special keyboard feature is based on the factory definition. You can decide whether to apply the special keyboard feature. Refer to [Keyboard Wedge Table](#).

\*Apply



100018

Bypass



100019



## 2.2 RS-232

Use the RS-232 cable to connect the scanner to the serial port of PC and join the power adaptor to the RS-232 connector. The associated RS-232 parameters must match those configured on the computer. The scanned data will be transmitted to the serial port.

| RS-232 Settings                       | Defaults                                  |
|---------------------------------------|---|
| Baud Rate, Data Bit, Parity, Stop Bit | 115200 bps, 8 bits, No parity, 1 stop bit |
| Flow Control                          | None                                      |
| Inter-Character Delay                 | 0 (ms)                                    |
| Inter-Function Delay                  | 0 (ms)                                    |
| ACK/NAK Timeout                       | 0   |
| ACK/NAK Beep                          | Disable                                   |

### 2.2.1 ACTIVATE RS-232 INTERFACE

Activate RS-232  
Interface



100001

### 2.2.2 BAUD RATE

\*115200 bps



100080

57600 bps



100081

38400 bps



100082

19200 bps



100083

9600 bps



100084

4800 bps



100100



2400 bps



100085

1200 bps



100086

600 bps



100087

### 2.2.3 DATA BITS

\*8 bits



100093

7 bits



100092

### 2.2.4 PARITY

\*No parity



100088

Even



100090

Odd



100091

### 2.2.5 STOP BIT

2 stop bits



100099

\*1 stop bit



100098



Update

## 2.2.6 FLOW CONTROL

By default, there is no flow control in use. Select the flow control (handshake) method.

| Options             | Description   |
|---------------------|---|
| No                  | No flow control   |
| Scanner Ready       | The scanner will activate the RTS signal upon powering on. After each good read, the scanner will then wait for the CTS signal to become active. Data will not be sent until the CTS signal becomes active. |
| Data Ready          | The RTS signal will be activated after each good read. The scanner will then wait for the CTS signal to become active. Data will not be sent until the CTS signal becomes active.                           |
| Inverted Data Ready | It works the same as the Data Ready flow control except that the RTS signal level is inverted.  |

\*None



100094

Scanner Ready



100095

Data Ready



100096

Invert Data Ready



100097



## 2.2.7 INTER-CHARACTER DELAY

By default, the inter-character delay is zero. Specify a value, ranging from 0 to 254 in units of millisecond, to match the computer response time. Such delay time is inserted between every character being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Character  
Delay... (\*0~254)



100011

- 1) Read the barcode above to specify the inter-character delay.
- 2) Read the "[Decimal Value](#)" barcode on page 193 for the desired inter-character delay (millisecond).
- 3) Read the "Validate" barcode on the same page to complete this setting.

## 2.2.8 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of millisecond, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



100012

- 1) Read this barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 193 for the desired inter-function delay (millisecond).
- 3) Read the "Validate" barcode on the same page to complete this setting.



Update

## 2.2.9 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all three attempts fail without any notification, data loss will occur.

ACK/NAK Time-out  
after ... (\*0~99)



100013

- I) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 193. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

### ACK/NAK Error Beep

---

Enable Error Beep



100015

\*Disable Error Beep



100014

---

Note: We suggest enabling the error beep to notice of such data loss and have the scanner re-read data.

---



Enter Setup

## 2.3 DIRECT USB HID

For USB HID, connect the scanner to the USB port of PC. Run any text editor on the computer, and the scanned data will be transmitted to the computer.

| HID Settings           | Defaults            |
|------------------------|---------------------|
| Keyboard Type          | PCAT (US)           |
| Digits Layout          | Normal              |
| Capital Lock Type      | Normal              |
| Capital Lock State     | Off                 |
| Alphabets Transmission | Case-sensitive      |
| Digits Transmission    | Alphanumeric keypad |
| Kanji Transmission     | Disable             |
| Inter-Character Delay  | 0 (ms)              |
| Inter-Function Delay   | 0 (ms)              |

### 2.3.1 ACTIVATE USB HID & SELECT KEYBOARD TYPE

When USB HID interface is activated, it will have to select a keyboard type to complete this setting.

Activate  
Direct USB HID &  
Select Keyboard  
Type...



100009

- 1) Read the barcode above to activate USB HID and select a keyboard type.
- 2) Read the “[Decimal Value](#)” barcode on page 193. Refer to the table below for the number of desired keyboard type.
- 3) Read the “Validate” barcode on the same page to complete this setting.

#### USB HID

By default, the keyboard type is set to PCAT (US). The following keyboard types are supported —

| No. | Keyboard Type    | No. | Keyboard Type         |
|-----|------------------|-----|-----------------------|
| 64  | PCAT (US)        | 71  | PCAT (Belgium)        |
| 65  | PCAT (French)    | 72  | PCAT (Spanish)        |
| 66  | PCAT (German)    | 73  | PCAT (Portuguese)     |
| 67  | PCAT (Italy)     | 74  | PS55 A01-2 (Japanese) |
| 68  | PCAT (Swedish)   | 75  | User-defined table    |
| 69  | PCAT (Norwegian) | 76  | PCAT (Turkish)        |
| 70  | PCAT (UK)        | 77  | PCAT (Hungarian)      |



Update

## 2.3.2 KEYBOARD SETTINGS

- ▶ Alphabets Layout
- ▶ Digits Layout
- ▶ Capital Lock Type
- ▶ Capital Lock Setting
- ▶ Alphabets Transmission
- ▶ Digits Transmission
- ▶ Kanji Transmission

### Alphabets Layout

By default, the alphabets layout is set to normal mode, also known as the standard English layout. Select French or German keyboard layout if necessary. The scanner will make adjustments when sending the "A", "Q", "W", "Z", "Y", and "M" characters according to this setting.

\*Normal



100060

AZERTY



100061

QWERTZ



100062

---


Note: This setting only works when the keyboard type selected is US keyboard, such as PCAT (US). The Alphabets Layout and Digits Layout setting must match the keyboard.

---



US Keyboard Style – Normal


QWERTY layout, which is normally used in western countries.

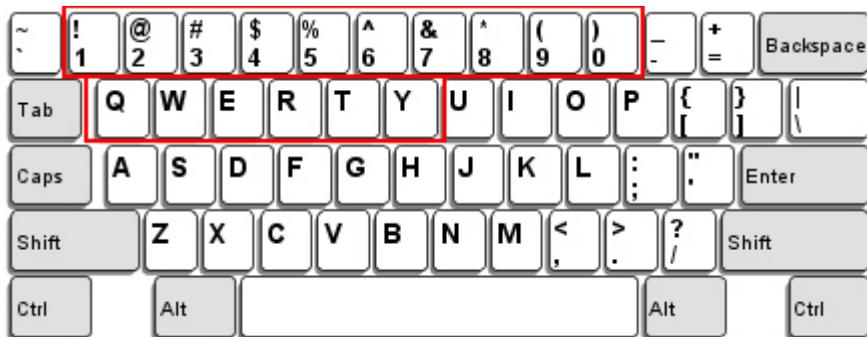

- ▶ Select “Lower Row” for the “Digits Layout” setting for the upper row is for special characters.

## French Keyboard Style – AZERTY

French layout; see below for French Keyboard Style.

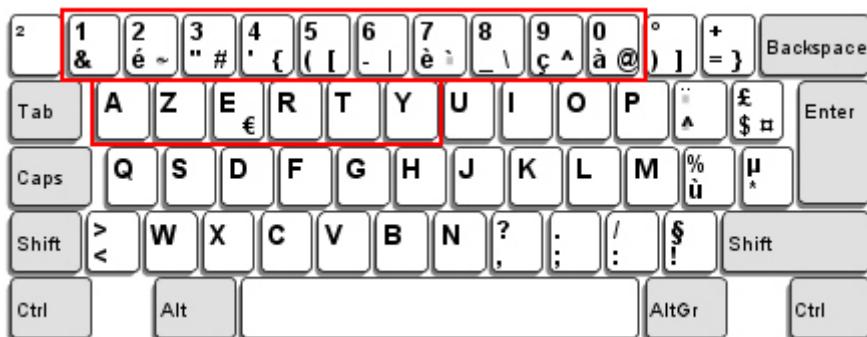

- ▶ Select “Upper Row” for the “Digits Layout” setting for the lower row is for special characters.

## German Keyboard Layout – QWERTZ

German layout; see below for German Keyboard Style.



- ▶ Select “Lower Row” for the “Digits Layout” setting for the upper row is for special characters.



### Digits Layout

Select a proper layout that matches the alphabets layout. The scanner will make adjustments according to this setting.

| Options   | Description  |
|-----------|--|
| Normal    | Depends on the [Shift] key or [Shift Lock] setting |
| Lower Row | For QWERTY or QWERTZ keyboard                      |
| Upper Row | For AZERTY keyboard                                |

\*Normal



100046

Upper Row



100049

Lower Row



100048

---

Note: This setting is to be used with the Character Substitution setting when support to certain keyboard types (languages) is unavailable but required.

---



Enter Setup

### Capital Lock Type & Setting

In order to send the alphabets with correct case, the scanner needs to know the status of Caps Lock on the keyboard. Incorrect settings may result in reversed case of the alphabets being transmitted.

| Cap Lock Type | Description   |
|---------------|---|
| Normal        | Normal type   |
| Capital Lock  | When enabled, the keys of alphabetic characters will be interpreted as capital letters. However, this does not affect the number or punctuation keys. |
| Shift Lock    | When enabled, the keys of alphabetic characters will be interpreted as capital letters. In addition, this affects the number or punctuation keys.     |

\*Normal



100042

Shift Lock



100045

Capital Lock



100044

| Capital Lock State | Description   |
|--------------------|---|
| Capital Lock OFF   | Assuming that the status of Caps Lock on the keyboard is OFF, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabets Transmission).   |
| Capital Lock ON    | Assuming that the status of Caps Lock on the keyboard is ON, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabets Transmission).<br>▶ Refer to the Capital Lock Type above.   |
| Auto Detection     | The scanner will automatically detect the status of Caps Lock on the keyboard before data is transmitted; transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabets Transmission). |

Auto Detect



100054

Capital Lock ON



100053



\*Capital Lock OFF



100052

**Alphabets Transmission**

By default, the alphabets transmission is case-sensitive, meaning that the alphabets will be transmitted according to their original case, the status of Caps Lock on the keyboard, as well as the Capital Lock setting. Select [Ignore Case] to have alphabets transmitted according to the status of Caps Lock on the keyboard only.

Ignore Case



100051

\*Case-sensitive



100050



1. Letter Case for Output Format

Refer to 4.1 Letter Case.



Abcd

ABCD

abcd

2. Alphabets Transmission for Keyboard Wedge &amp; Bluetooth HID

\*Case-sensitive

Ignore Case

3a. Check Caps Lock on the keyboard



4. Check Capital Lock setting

\*Capital Lock OFF



Capital Lock ON



Auto Detection




3b. Check Caps Lock on the keyboard



### Digits Transmission

By default, the alphanumeric keypad is used for transmitting digits. Select “Numeric Keypad” to use the keys on the numeric keypad.

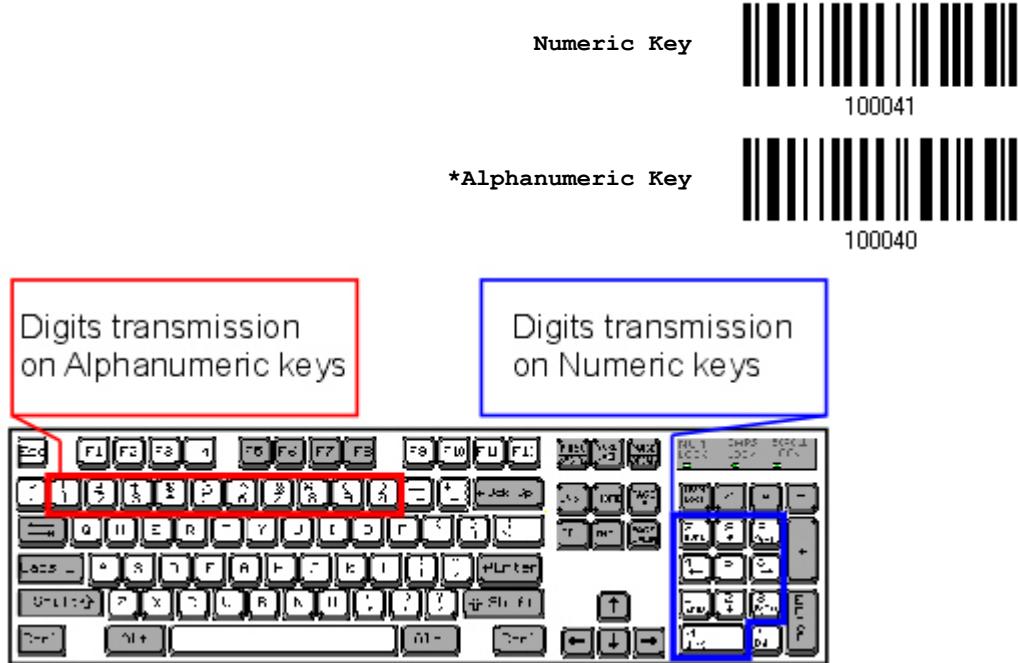

Note: If selecting “Numeric Keypad”, the Num Lock status of the physical keyboard should be “ON”.

### Kanji Transmission

Kanji Transmission is supported by the scanner when either Keyboard Wedge or Direct USB HID is selected for the output interface. By Kanji Transmission, when the host computer is running on Japanese Windows O.S., the scanner is able to transmit Japanese characters including the Chinese characters used in modern Japanese writing system.

Kanji Transmission is disabled by default. Enable/disable scanner’s Kanji Transmission by reading the following barcodes:



### 2.3.3 INTER-CHARACTER DELAY

By default, the inter-character delay is set to zero. Specify a value, ranging from 0 to 254 in units of millisecond, to match the computer response time of the keyboard interface. Such delay time is inserted between every character being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Character  
Delay... (\*0~254)



100011

- 1) Read the barcode above to specify the inter-character delay.
- 2) Read the “[Decimal Value](#)” barcode on page 193 for the desired inter-character delay (millisecond).
- 3) Read the “Validate” barcode on the same page to complete this setting.

### 2.3.4 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of millisecond, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



100012

- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the “[Decimal Value](#)” barcode on page 193 for the desired inter-function delay (millisecond).
- 3) Read the “Validate” barcode on the same page to complete this setting.



### 2.3.5 HID CHARACTER TRANSMIT MODE

By default, USB HID interface sends data to the host in batch. Have the scanner read the "By Character" barcode to process data one character at a time.

\*Batch Processing



100064

By Character



100065

### 2.3.6 HID TRANSMIT SPEED

In order to avoid missed characters during barcode output, you can slow-down the HID transmit speed.

\*Normal



100068

Faster



100070

Fastest



100071

### 2.3.7 SPECIAL KEYBOARD FEATURE

By default, the special keyboard feature is based on the factory definition. You can decide whether to apply the special keyboard feature. Refer to [Keyboard Wedge Table](#).

\*Apply



100018

Bypass



100019



## 2.4 DIRECT USB VCOM

For USB Virtual COM, connect the scanner to the USB port of PC. Run HyperTerminal.exe on the computer, and the scanned data will be transmitted to the computer.

Note: If using USB Virtual COM for the first time, it must install its driver from the CD-ROM. Driver version 5.3 or later is required. Please remove older versions! For 1504 to connect to Windows PC, it must select Direct USB VCOM\_CDC. Refer to [2.5 Direct USB VCOM\\_CDC](#).

### 2.4.1 ACTIVATE USB VIRTUAL COM

Activate Direct USB  
Virtual COM



100008

### 2.4.2 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of millisecond, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



100012

- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 193 for the desired inter-function delay (millisecond).
- 3) Read the "Validate" barcode on the same page to complete this setting.



Enter Setup

### 2.4.3 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all three attempts fail without any notification, data loss will occur.

**ACK/NAK Time-out  
after ... (\*0~99)**



100013

- I) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 193. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

#### ACK/NAK Error Beep

**Enable Error Beep**



100015

**\*Disable Error Beep**



100014

Note: We suggest enabling the error beep to notice of such data loss and have the scanner re-read data.



Update

## 2.5 DIRECT USB VCOM\_CDC

For USB Virtual COM, connect the scanner to the USB port of PC. Run HyperTerminal.exe on the computer, and the scanned data will be transmitted to the computer.

---

Note: If using USB Virtual COM for the first time, it must install its driver from the CD-ROM. USB CDC driver installer is available in the "Windows" folder for 1504, which will copy a vendor-supplied INF file to Windows.

---

### 2.5.1 ACTIVATE USB VCOM\_CDC

Activate  
Direct USB VCOM\_CDC



100010

### 2.5.2 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of millisecond, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



100012

- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 193 for the desired inter-function delay (millisecond).
- 3) Read the "Validate" barcode on the same page to complete this setting.



Enter Setup

### 2.5.3 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all three attempts fail without any notification, data loss will occur.

**ACK/NAK Time-out  
after ... (\*0~99)**



100013

- I) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 193. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

#### ACK/NAK Error Beep

**Enable Error Beep**



100015

**\*Disable Error Beep**



100014

Note: We suggest enabling the error beep to notice of such data loss and have the scanner re-read data.





# Chapter 3

## CHANGING SYMBOLOLOGY SETTINGS

---

In this chapter, a brief on the symbology settings is provided for reference.

### IN THIS CHAPTER

---

|  |     |
|--|-----|
| 3.1 Codabar .....                      | 64  |
| 3.2 Code 25 – Industrial 25 .....      | 66  |
| 3.3 Code 25 – Interleaved 25.....      | 68  |
| 3.4 Code 25 – Matrix 25.....           | 71  |
| 3.5 Code 25 – Chinese 25 .....         | 73  |
| 3.6 Italian Pharmacode (Code 32) ..... | 74  |
| 3.7 Code 39 .....                      | 75  |
| 3.8 Trioptic Code 39 .....             | 78  |
| 3.9 Code 93 .....                      | 79  |
| 3.10 Code 128 .....                    | 81  |
| 3.11 GS1-128 (EAN-128) .....           | 82  |
| 3.12 ISBT 128 .....                    | 83  |
| 3.13 GS1 DataBar (RSS Family) .....    | 85  |
| 3.14 MSI.....                          | 90  |
| 3.15 EAN-8 .....                       | 92  |
| 3.16 EAN-13.....                       | 93  |
| 3.17 UCC Coupon Extended Code .....    | 95  |
| 3.18 UPC-A .....                       | 96  |
| 3.19 UPC-E .....                       | 98  |
| 3.20 Code 11.....                      | 101 |
| 3.21 Composite Code.....               | 103 |
| 3.22 US Postal Code .....              | 105 |
| 3.23 UK Postal Code .....              | 106 |
| 3.24 More Postal Code .....            | 107 |
| 3.25 2D Symbologies.....               | 109 |
| 3.26 Macro PDF .....                   | 112 |



### 3.1 CODABAR

\*Enable



100313

Disable



100312

#### 3.1.1 START/STOP TRANSMISSION

Decide whether to include the start/stop characters in the data being transmitted.

Transmit Start/Stop Characters



100441

\*Do Not Transmit



100440

#### 3.1.2 CLSI CONVERSION

When enabled, the CLSI editing strips the start/stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar barcode.

Apply CLSI Editing



100443

\*Do Not Apply



100442

---

Note: The 14-character barcode length does not include start/stop characters.

---



### 3.1.3 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

Note: The specified length(s) must include the check digit(s) the barcode contains.

- I) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (1~55) ...



102222

Enable Fixed  
Length(s) ...



102221

- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*55) or  
Fixed Length 1



102223

Min. Length (\*4) or  
Fixed Length 2



102224

- 3) Read the "[Decimal Value](#)" barcode on page 193 for the desired length.

- 4) Read the "Validate" barcode on the same page to complete this setting.



### 3.2 CODE 25 – INDUSTRIAL 25

\*Enable



100307

Disable



100306



Enter Setup

### 3.2.1 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

Note: The specified length(s) must include the check digit(s) the barcode contains.

- I) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (1~55) ...



100601

Enable Fixed  
Length(s) ...



100600

- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*55) or  
Fixed Length 1



100602

Min. Length (\*4) or  
Fixed Length 2



100603

- 3) Read the "[Decimal Value](#)" barcode on page 193 for the desired length.

- 4) Read the "Validate" barcode on the same page to complete this setting.



Update

### 3.3 CODE 25 – INTERLEAVED 25

\*Enable



100309

Disable



100308

#### 3.3.1 VERIFY CHECK DIGIT

Decide whether to verify the check digit. When desired, select one of the algorithms, USS or OPCC. If incorrect, the barcode will not be accepted.

\*Do Not Verify



102122

USS Check Digit



102123

OPCC Check Digit



102124

#### 3.3.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit  
Interleaved 25  
Check Digit



100431

Do Not Transmit



100430



### 3.3.3 CONVERT TO EAN-13

Decide whether to convert a 14-character barcode into EAN-13 if the following requirements are met:

- ▶ The barcode must have a leading 0 and a valid EAN-13 check digit.
- ▶ “Verify Check Digit” must be disabled.

Convert to EAN-13



102101

\*Do Not Convert



102100



### 3.3.4 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

Note: The specified length(s) must include the check digit(s) the barcode contains.

- I) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (1~55) ...



100605

Enable Fixed  
Length(s) ...



100604

- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*55) or  
Fixed Length 1



100606

Min. Length (\*4) or  
Fixed Length 2



100607

- 3) Read the "[Decimal Value](#)" barcode on page 193 for the desired length.

- 4) Read the "Validate" barcode on the same page to complete this setting.



### 3.4 CODE 25 – MATRIX 25

Enable



100311

\*Disable



100310

#### 3.4.1 VERIFY CHECK DIGIT

Decide whether to verify the check digit. If incorrect, the barcode will not be accepted.

Verify Matrix 25  
Check Digit



100433

\*Do Not Verify



100432

#### 3.4.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit Matrix 25  
Check Digit



100435

Do Not Transmit



100434



Update

### 3.4.3 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

Note: The specified length(s) must include the check digit(s) the barcode contains.

- I) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (1~55) ...



100609

Enable Fixed  
Length(s) ...



100608

- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.  
Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*55) or  
Fixed Length 1



100610

Min. Length (\*4) or  
Fixed Length 2



100611

- 3) Read the "[Decimal Value](#)" barcode on page 193 for the desired length.  
4) Read the "Validate" barcode on the same page to complete this setting.



### 3.5 CODE 25 – CHINESE 25

Enable



102015

\*Disable



102014



Update

### 3.6 ITALIAN PHARMACODE (CODE 32)

Enable



100303

\*Disable



100302

---

Note: Code 39 must be enabled first.

---



Enter Setup

### 3.7 CODE 39

\*Enable



100301

Disable



100300

#### 3.7.1 VERIFY CHECK DIGIT

Decide whether to verify the check digit. If incorrect, the barcode will not be accepted.

Verify Code 39  
Check Digit



100405

\*Do Not Verify



100404

#### 3.7.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit Code 39  
Check Digit



100407

Do Not Transmit



100406



### 3.7.3 STANDARD/FULL ASCII CODE 39

Decide whether to support Code 39 Full ASCII that includes all the alphanumeric and special characters.

Code 39 Full ASCII



100401

\*Standard Code 39



100400

---

Note: Trioptic Code 39 and Code 39 Full ASCII cannot be enabled at the same time.

---



Enter Setup

### 3.7.4 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

Note: The specified length(s) must include the check digit(s) the barcode contains.

- I) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (1~55) ...



102218

Enable Fixed  
Length(s) ...



102217

- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*55) or  
Fixed Length 1



102219

Min. Length (\*4) or  
Fixed Length 2



102220

- 3) Read the "[Decimal Value](#)" barcode on page 193 for the desired length.

- 4) Read the "Validate" barcode on the same page to complete this setting.



### 3.8 TRIOPTIC CODE 39

Decide whether to decode Trioptic Code 39.

- ▶ Trioptic Code 39 is a variant of Code 39 used in the marking of computer tape cartridges. It always contains six characters.

**Enable**



102005

**\*Disable**



102004

---

Note: Trioptic Code 39 and Code 39 Full ASCII cannot be enabled at the same time.

---



Enter Setup

### 3.9 CODE 93

\*Enable



100315

Disable



100314



Update

### 3.9.1 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

Note: The specified length(s) must include the check digit(s) the barcode contains.

- I) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (1~55) ...



102226

Enable Fixed  
Length(s) ...



102225

- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*55) or  
Fixed Length 1



102227

Min. Length (\*4) or  
Fixed Length 2



102228

- 3) Read the "[Decimal Value](#)" barcode on page 193 for the desired length.

- 4) Read the "Validate" barcode on the same page to complete this setting.



### 3.10 CODE 128

\*Enable



100317

Disable



100316



Update

### 3.11 GS1-128 (EAN-128)

\*Enable



100319

Disable



100318

---

Note: GS1-128 barcodes can be decoded only when this setting is enabled.

---

#### 3.11.1 TRANSMIT CODE ID

Decide whether to include the Code ID ("]C1") in the data being transmitted.

Transmit GS1-128  
Code ID



100519

\*Do Not Transmit



100518

#### 3.11.2 FIELD SEPARATOR (GS CHARACTER)

Decide whether to apply a field separator (to convert the FNC1 control character to human readable character).

Enable Field  
Separator...



100616

- 1) Read the barcode above to enable field separator.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.

---

Note: GS1-128 barcodes start with the FNC1 control character to distinguish themselves from other uses of Code 128. FNC1 is also used to separate data fields in the GS1-128 barcodes.

---



### 3.12 ISBT 128

\*Enable



100355

Disable



100354

#### 3.12.1 ISBT CONCATENATION

Decide whether to decode and concatenate pairs of ISBT barcodes.

▶ Disable ISBT Concatenation

It will not concatenate pairs of ISBT barcodes it encounters.

▶ Enable ISBT Concatenation

There must be two ISBT barcodes in order for the scanner to decode and perform concatenation. It does not decode single ISBT barcodes.

▶ Auto-discriminate ISBT Concatenation

It decodes and concatenates pairs of ISBT barcodes immediately. If only a single ISBT barcode is present, the scanner must decode 10 times before transmitting its data to confirm that there is no additional ISBT barcode.

Disable



102237

Enable



102238

\*Auto-discriminate



102239



### 3.12.2 ISBT CONCATENATION REDUNDANCY

Specify the concatenation redundancy (2~20 times) when ISBT concatenation is enabled.

ISBT Concatenation  
Redundancy 2~20  
(\*10)



102254

- 1) Read the barcode above to specify the concatenation redundancy.
- 2) Read the "[Decimal Value](#)" barcode on page 193 for the desired redundancy.
- 3) Read the "Validate" barcode on the same page to complete this setting.



### 3.13 GS1 DATABAR (RSS FAMILY)

It is categorized into three groups:

#### Group I – GS1 DataBar Omnidirectional (RSS-14)

This group consists of the following:

- ▶ GS1 DataBar Omnidirectional
- ▶ GS1 DataBar Truncated
- ▶ GS1 DataBar Stacked
- ▶ GS1 DataBar Stacked Omnidirectional

#### Group II – GS1 DataBar Expanded (RSS Expanded)

This group consists of the following:

- ▶ GS1 DataBar Expanded
- ▶ GS1 DataBar Expanded Stacked

#### Group III – GS1 DataBar Limited (RSS Limited)

This group consists of the following:

- ▶ GS1 DataBar Limited

### 3.13.1 SELECT CODE ID

Select a desired Code ID to use:

- ▶ "Jeo" (GS1 DataBar Code ID)
- ▶ "Jc1" (GS1-128 Code ID)

Use "Jc1"



100517

\*Use "Jeo"



100516



Update

### 3.13.2 GS1 DATABAR OMNIDIRECTIONAL (RSS-14)

Enable RSS-14 &  
RSS Expanded  
(Groups I, II)



100349

\*Disable



100348

The settings below apply to Group I symbologies only:

- ▶ GS1 DataBar Omnidirectional
- ▶ GS1 DataBar Truncated
- ▶ GS1 DataBar Stacked
- ▶ GS1 DataBar Stacked Omnidirectional

#### Transmit Code ID

Decide whether to include the Code ID in the data being transmitted.

\*Transmit RSS-14  
Code ID



100523

Do Not Transmit



100522

#### Transmit Application ID

Decide whether to include the Application ID ("01") in the data being transmitted.

\*Transmit RSS-14  
Application ID



100529

Do Not Transmit



100528



### 3.13.3 GS1 DATABAR EXPANDED (RSS EXPANDED)

Enable RSS-14 &  
RSS Expanded  
(Groups I, II)



100349

\*Disable



100348

The settings below apply to Group II symbologies only:

- ▶ GS1 DataBar Expanded
- ▶ GS1 DataBar Expanded Stacked

#### Transmit Code ID

Decide whether to include the Code ID in the data being transmitted.

\*Transmit  
RSS Expanded Code ID



100527

Do Not Transmit



100526



Update

### 3.13.4 GS1 DATABAR LIMITED (RSS LIMITED)

Enable RSS Limited  
(Group III)



100351

\*Disable



100350

#### Transmit Code ID

Decide whether to include the Code ID in the data being transmitted.

\*Transmit  
RSS Limited Code ID



100525

Do Not Transmit



100524

#### Transmit Application ID

Decide whether to include the Application ID ("01") in the data being transmitted.

\*Transmit  
RSS Limited  
Application ID



100531

Do Not Transmit



100530



### 3.13.5 CONVERT TO UPC/EAN

This only applies to GS1 DataBar Omnidirectional and GS1 DataBar Limited barcodes not decoded as part of a Composite barcode.

- ▶ Convert to EAN-13: It will strip the leading "010" from barcodes.  
"01" is the Application ID and must be followed by a single zero (the first digit encoded).
- ▶ Convert to UPC-A: It will strip the leading "0100" from barcodes.  
"01" is the Application ID and must be followed by two or more zeros (but not six zeros).

Convert to UPC/EAN



102103

\*Do Not Convert



102102



Update

## 3.14 MSI

Enable



100345

\*Disable



100344

### 3.14.1 VERIFY CHECK DIGIT

Select one of the three calculations to verify check digit(s) when decoding barcodes. If incorrect, the barcode will not be accepted.

\*Single Modulo 10



100448

Double Modulo 10



100449

Modulo 10 & 11



100450

### 3.14.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit(s) in the data being transmitted.

\*Last Digit Not  
Transmitted



100452

Both Digits  
Transmitted



100453

Both Digits  
Not Transmitted



100454



### 3.14.3 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

Note: The specified length(s) must include the check digit(s) the barcode contains.

- I) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (1~55) ...



100613

Enable Fixed  
Length(s) ...



100612

- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*55) or  
Fixed Length 1



100614

Min. Length (\*4) or  
Fixed Length 2



100615

- 3) Read the "[Decimal Value](#)" barcode on page 193 for the desired length.

- 4) Read the "Validate" barcode on the same page to complete this setting.



### 3.15 EAN-8

#### EAN-8

\*Enable EAN-8  
(No Addon)



100327

Disable



100326

#### EAN-8 Addon 2

Enable EAN-8 Addon 2



100329

\*Disable



100328

#### EAN-8 Addon 5

Enable EAN-8 Addon 5



100331

\*Disable



100330



## 3.16 EAN-13

### EAN-13

\*Enable EAN-13  
(No Addon)



100333

Disable



100332

### EAN-13 Addon 2

Enable EAN-13 Addon 2



100335

\*Disable



100334

### EAN-13 Addon 5

Enable EAN-13 Addon 5



100337

\*Disable



100336



Update

### 3.16.1 CONVERT TO ISBN

Decide whether to convert the EAN-13 barcode, starting with 978 and 979, to ISBN.

Convert EAN-13 to  
ISBN



100463

\*Do Not Convert



100462

### 3.16.2 CONVERT TO ISSN

Decide whether to convert the EAN-13 barcode, starting with 977 to ISSN.

Convert EAN-13 to  
ISSN



100465

\*Do Not Convert



100464



### 3.17 UCC COUPON EXTENDED CODE

Decide whether to decode the following barcodes as Coupon Code.

- ▶ UPC-A barcodes starting with digit "5"
- ▶ EAN-13 barcodes starting with digits "99"
- ▶ UPC-A/EAN-128 Coupon Codes

**Enable**



102003

**\*Disable**



102002

---

Note: Depending on requirements, UPC-A, EAN-13 and EAN-128 must be enabled first!

---



Update

### 3.18 UPC-A

#### UPC-A

\*Enable UPC-A  
(No Addon)



100339

Disable



100338

#### UPC-A Addon 2

Enable UPC-A Addon 2



100341

\*Disable



100340

#### UPC-A Addon 5

Enable UPC-A Addon 5



100343

\*Disable



100342



### 3.18.1 TRANSMIT SYSTEM NUMBER

Decide whether to include the system number in the data being transmitted.

\*Transmit UPC-A  
System Number

100477



Do Not Transmit

100476



### 3.18.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit UPC-A  
Check Digit

100469



Do Not Transmit

100468



### 3.19 UPC-E

#### UPC-E

\*Enable UPC-E  
(No Addon)



100321

Disable



100320

#### UPC-E Addon 2

Enable UPC-E Addon 2



100323

\*Disable



100322

#### UPC-E Addon 5

Enable UPC-E Addon 5



100325

\*Disable



100324



### 3.19.1 SELECT SYSTEM NUMBER

Decide whether to decode the ordinary UPC-E barcodes only or both UPC-E0 and UPC-E1 barcodes.

- ▶ System number 0 enabled for decoding UPC-E0 barcodes.
- ▶ System number 1 enabled for decoding UPC-E1 barcodes.

**System Number 0 & 1**



100479

**\*System Number 0 Only**



100478

**Warning:** Because of the way system number 1 is encoded, if both system numbers are enabled, the user might suffer from short scanning UPC-A or EAN-13 barcodes into UPC-E1 barcodes.

### 3.19.2 CONVERT TO UPC-A

Decide whether to expand the read UPC-E barcode, as well as its addons, into UPC-A.

- ▶ After conversion, the data follows UPC-A format and is affected by UPC-A programming selections (e.g. System Number, Check Digit).

**Convert UPC-E to  
UPC-A**



100457

**\*Do Not Convert**



100456



### 3.19.3 TRANSMIT SYSTEM NUMBER

Decide whether to include the system number in the data being transmitted.

Transmit UPC-E  
System Number



\*Do Not Transmit



### 3.19.4 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit UPC-E  
Check Digit



Do Not Transmit



### 3.20 CODE 11

Enable



102007

\*Disable



102006

#### 3.20.1 VERIFY CHECK DIGIT

Decide whether to verify the check digit(s). If incorrect, the barcode will not be accepted.

Verify One  
Check Digit



102244

Verify Two  
Check Digit



102245

\*Do Not Verify



102243

#### 3.20.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit(s) in the data being transmitted.

Transmit Code 11  
Check Digit



102107

\*Do Not Transmit



102106

Note: "Verify Check Digit" must be enabled first.



Update

### 3.20.3 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

Note: The specified length(s) must include the check digit(s) the barcode contains.

- I) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (1~55) ...



102234

Enable Fixed  
Length(s) ...



102233

- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*55) or  
Fixed Length 1



102235

Min. Length (\*4) or  
Fixed Length 2



102236

- 3) Read the "[Decimal Value](#)" barcode on page 193 for the desired length.

- 4) Read the "Validate" barcode on the same page to complete this setting.



### 3.21 COMPOSITE CODE

#### 3.21.1 COMPOSITE CC-A/B

Enable Composite  
CC-A/B



102009

\*Disable



102008

#### 3.21.2 COMPOSITE CC-C

Enable Composite  
CC-C



102011

\*Disable



102010

#### 3.21.3 COMPOSITE TLC-39

Enable Composite  
TLC-39



102013

\*Disable



102012



Update

### 3.21.4 UPC COMPOSITE MODE

UPC barcodes can be “linked” with a 2D barcode during transmission as if they were one barcode.

- ▶ **UPC Never Linked**  
Transmit UPC barcodes regardless of whether a 2D barcode is detected.
- ▶ **UPC Always Linked**  
Transmit UPC barcodes and the 2D portion. If the 2D portion is not detected, the UPC barcode will not be transmitted.

Note: CC-A/B or CC-C must be enabled!

- ▶ **Auto-discriminate UPC Composites**  
Transmit UPC barcodes as well as the 2D portion if present.

**UPC Never Linked**



102112

**\*UPC Always Linked**



102113

**Auto-discriminate**



102114

### 3.21.5 GS1-128 EMULATION MODE FOR UCC/EAN COMPOSITE CODES

Decide whether to transmit UCC/EAN Composite Code data as if it was encoded in GS1-128 barcodes.

**Enable GS1-128 Emulation Mode**



102105

**\*Disable**



102104



## 3.22 US POSTAL CODE

### 3.22.1 US POSTNET

\*Enable US Postnet



102017

Disable



102016

### 3.22.2 US PLANET

\*Enable US Planet



102019

Disable



102018

### 3.22.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit US Postal  
Check Digit



102111

Do Not Transmit



102110



Update

### 3.23 UK POSTAL CODE

#### 3.23.1 UK POSTAL

\*Enable UK Postal



102021

Disable



102020

#### 3.23.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit UK Postal  
Check Digit



102109

Do Not Transmit



102108



## 3.24 MORE POSTAL CODE

### 3.24.1 JAPAN POSTAL

\*Enable Japan Postal



102023

Disable



102022

### 3.24.2 AUSTRALIAN POSTAL

\*Enable Australian Postal



102025

Disable



102024

### 3.24.3 DUTCH POSTAL

\*Enable Dutch Postal



102027

Disable



102026

### 3.24.4 USPS 4CB/ONE CODE/INTELLIGENT MAIL

Enable USPS 4CB/  
One Code/  
Intelligent Mail



102029

\*Disable



102028



Update

### 3.24.5 UPU FICS POSTAL

Enable UPU FICS  
Postal



102031

\*Disable



102030



## 3.25 2D SYMBOLOGIES

### 3.25.1 PDF417

\*Enable PDF417



102033

Disable



102032

### 3.25.2 MicroPDF417

Enable MicroPDF417



102035

\*Disable



102034



Update

### 3.25.3 DATA MATRIX

\*Enable Data Matrix



102037

Disable



102036

#### Data Matrix Mirror

Decide whether to decode mirror image Data Matrix barcodes.

- ▶ Never — do not decode Data Matrix barcodes that are mirror images.
- ▶ Always — decode only Data matrix barcodes that are mirror images.
- ▶ Auto — decode both mirrored and unmirrored Data Matrix barcoes.

\*Never



102118

Always



102119

Auto



102120



#### 3.25.4 MAXICODE

\*Enable Maxicode



102039

Disable



102038

#### 3.25.5 QR CODE

\*Enable QR Code



102041

Disable



102040

#### 3.25.6 MicroQR

\*Enable MicroQR



102043

Disable



102042

#### 3.25.7 AZTEC

\*Enable Aztec



102045

Disable



102044



Update

## 3.26 MACRO PDF

Macro PDF is a special feature for concatenating multiple PDF barcodes into one file, known as Macro PDF417 or Macro MicroPDF417.

Note: When printing barcodes, keep each Macro PDF sequence separate, as each has a unique identifier. Do not mix barcodes from several Macro PDF sequences, even if they encode the same data. When scan Macro PDF sequences, scan the entire Macro PDF sequence without interruption!

### 3.26.1 TRANSMIT/DECODE MODE

Decide how to handle Macro PDF decoding.

- ▶ Buffer All Symbols / Transmit Macro PDF When Complete

Transmit all decoded data from an entire Macro PDF sequence only when the entire sequence is scanned and decoded. If the decoded data exceeds the limit of 50 symbols, no transmission because the entire sequence was not scanned!

- ▶ Transmit Any Symbol in Set / No Particular Order

Transmit data from each Macro PDF symbol as decoded, regardless of the sequence.

- ▶ Passthrough All Symbols

Transmit and decode all Macro PDF symbols and perform no processing. In this mode, the host is responsible for detecting and parsing the Macro PDF sequences.

**Buffer All Symbols /  
Transmit When Complete**



102186

**Transmit Any Symbol in Set /  
No Particular Order**



102187

**\*Passthrough All Symbols**



102190



### 3.26.2 ESCAPE CHARACTERS

When enabled, it uses the backslash "\" as an Escape character for systems that can process transmissions containing special data sequences. It will format special data according to the Global Label Identifier (GLI) protocol, which only affects the data portion of a Macro PDF symbol transmission. The Control Header, if enabled, is always sent with GLI formatting.

**GLI Protocol**



102198

**\*None**



102196

### 3.26.3 TRANSMIT CONTROL HEADER

The control header contains the segment index and file ID. For example, the field may be "\92800000\725\120\343". The five digits after the \928 are the segment index (or block index), and \725\120\343 is the file ID.

- ▶ Enable this when selecting "Transmit Any Symbol in Set/ No Particular Order".
- ▶ Disable this when selecting "Buffer All Symbols/Transmit Macro PDF When Complete".
- ▶ This option has no effect when selecting "Passthrough All Symbols".

**Transmit Control Header**



102195

**\*Do Not Transmit**



102194





# Chapter 4

## DEFINING OUTPUT FORMAT

---

The scanner allows configuring in which format the collected data will be output to the host computer. Barcode read by the scanner will be processed in the following sequence –

- 1) Perform character substitution on the data scanned.
- 2) Add Code ID and Length Code to the front of the data: [Code ID] [Length Code] [Data]
- 3) Process the whole data in step 2 with user formats. Data is now divided into fields by user specified rules. Refer to [Chapter 5 Applying Formats for Data Editing](#).
- 4) Add Prefix Code and Suffix Code before transmission: [Prefix Code] [Processed Data] [Suffix Code]

### IN THIS CHAPTER

---

|  |     |
|--|-----|
| 4.1 Letter Case .....                  | 115 |
| 4.2 Character Substitution.....        | 116 |
| 4.3 Prefix/Suffix Code .....           | 128 |
| 4.4 Code ID.....                       | 129 |
| 4.5 Length Code .....                  | 136 |
| 4.6 Multi-Barcode Editor.....          | 144 |
| 4.7 Removal of Special Character ..... | 148 |

### 4.1 LETTER CASE

By default, the alphabets transmission is case-sensitive, meaning that the alphabets will be transmitted according to their original case. Ignoring the original letter case, select [Upper Case] to output data in upper case only; otherwise, select [Lower Case] to output data in lower case only.

\*Normal



101202

Upper Case



101203

Lower Case



101204



## 4.2 CHARACTER SUBSTITUTION

Character substitution is performed on every occurrence of the first character specified. If only one character is specified, every occurrence of that character in the barcode will be taken away.

- ▶ The first character will be replaced by the second character(s).
- ▶ Up to three sets of character substitution can be configured.
- ▶ If "Keyboard Wedge" or "USB HID" is configured for interface, [Key Type](#) and [Key Status](#) will then become applicable. Decide whether or not to apply Key Status when "Normal Key" is selected for Key Type.

| Key Type   |  | Key Status  |
|------------|--|---|
| Scan Code  | Only 1 scan code value is allowed.<br>Refer to <a href="#">4.2.1 Select a Set for Character Substitution</a> . | N/A   |
| Normal Key | Up to 3 character strings are allowed.   | <ul style="list-style-type: none"> <li>▶ Add Shift</li> <li>▶ Add Left Ctrl</li> <li>▶ Add Left Alt</li> <li>▶ Add Right Ctrl</li> <li>▶ Add Right Alt</li> </ul> <p>Refer to <a href="#">Keyboard Wedge Table</a>.</p> |

Note: The character substitution is performed only on the barcode itself and before the processing of editing formats. It is not applicable to the Prefix/Suffix Code, Code ID, Length Code, or any Additional Field.



#### 4.2.1 SELECT A SET FOR CHARACTER SUBSTITUTION

Configure Set 1



101232

Configure Set 2



101233

Configure Set 3



101234

- I) Read the barcode above to enable character substitution by set.

For example, have the scanner read the "Set 1" barcode to configure the first set of character substitution. The scanner will respond with one short beep, high tone, to indicate more setup barcodes are required.

- 2) Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character substitution. For example,

##### **KEY TYPE = NORMAL**

- ▶ Read "3", "0", "2", and "D" to replace the character "0" with a dash "-".
- ▶ Read "3", "0", "2", "D", "3", and "0" to replace the character "0" with a dash "-0".

##### **KEY TYPE = SCAN CODE**

Replace the character "0" with "a" (= "1C" on the scan code table):

1. Read "3" and "0".
2. Read the "Scan Code" barcode.
3. Read "1" and "C".

##### **KEY TYPE = NORMAL + KEY STATUS = SHIFT**

Replace the character "0" with "!" (= "Shift" + "1" on keyboard):

1. Read "3" and "0".
2. Read the "Add Shift" barcode.
3. Read "3" and "1".

- 3) Read the "Validate" barcode to complete this setting. (The defined set or sets will be applied to all symbologies by default.)



Update

## 4.2.2 SYMBOLLOGIES FOR CHARACTER SUBSTITUTION (ALL 3 SETS)

By default character substitution will be performed on all symbologies. If the character substitution is not desired with one or more symbologies, read the "Do Not Apply" barcode for each undesired symbologies and all the three sets will be ignored for them.

### Character Substitution for Codabar

\*Apply



101253

Do Not Apply



101252

### Character Substitution for Code 39

\*Apply



101241

Do Not Apply



101240

### Character Substitution for Trioptic Code 39

\*Apply



102607

Do Not Apply



102606

### Character Substitution for Code 93

\*Apply



101255

Do Not Apply



101254



**Character Substitution for Code 128****\*Apply**

101257

**Do Not Apply**

101256

**Character Substitution for GS1-128****\*Apply**

101259

**Do Not Apply**

101258

**Character Substitution for ISBT 128****\*Apply**

101293

**Do Not Apply**

101292

**Character Substitution for EAN-8 (No Addon)****\*Apply**

101267

**Do Not Apply**

101266

**Character Substitution for EAN-8 Addon 2****\*Apply**

101269

**Do Not Apply**

101268



Update

**Character Substitution for EAN-8 Addon 5**

---

\*Apply



101271

Do Not Apply



101270

**Character Substitution for EAN-13 (No Addon)**

---

\*Apply



101273

Do Not Apply



101272

**Character Substitution for EAN-13 Addon 2**

---

\*Apply



101275

Do Not Apply



101274

**Character Substitution for EAN-13 Addon 5**

---

\*Apply



101277

Do Not Apply



101276

**Character Substitution for Italian Pharmacode**

---

\*Apply



101243

Do Not Apply



101242



**Character Substitution for Industrial 25****\*Apply**

101247

**Do Not Apply**

101246

**Character Substitution for Interleaved 25****\*Apply**

101249

**Do Not Apply**

101248

**Character Substitution for Matrix 25****\*Apply**

101251

**Do Not Apply**

101250

**Character Substitution for Chinese 25****\*Apply**

102617

**Do Not Apply**

102616

**Character Substitution for MSI****\*Apply**

101285

**Do Not Apply**

101284



**Character Substitution for GS1 DataBar**

---

\*Apply



101291

Do Not Apply



101290

**Character Substitution for UPC-A (No Addon)**

---

\*Apply



101279

Do Not Apply



101278

**Character Substitution for UPC-A Addon 2**

---

\*Apply



101281

Do Not Apply



101280

**Character Substitution for UPC-A Addon 5**

---

\*Apply



101283

Do Not Apply



101282

**Character Substitution for UPC-E (No Addon)**

---

\*Apply



101261

Do Not Apply



101260



Character Substitution for UPC-E Addon 2

---

\*Apply



101263

Do Not Apply



101262

Character Substitution for UPC-E Addon 5

---

\*Apply



101265

Do Not Apply



101264

Character Substitution for UCC Coupon Extended Code

---

\*Apply



102605

Do Not Apply



102604

Character Substitution for Code 11

---

\*Apply



102609

Do Not Apply



102608

Character Substitution for Composite CC-A/B

---

\*Apply



102611

Do Not Apply



102610



**Character Substitution for Composite CC-C**

---

\*Apply



102613

Do Not Apply



102612

**Character Substitution for Composite TLC-39**

---

\*Apply



102615

Do Not Apply



102614

**Character Substitution for US Postnet**

---

\*Apply



102619

Do Not Apply



102618

**Character Substitution for US Planet**

---

\*Apply



102621

Do Not Apply



102620

**Character Substitution for UK Postal**

---

\*Apply



102623

Do Not Apply



102622



**Character Substitution for Japan Postal****\*Apply**

102625

**Do Not Apply**

102624

**Character Substitution for Australian Postal****\*Apply**

102627

**Do Not Apply**

102626

**Character Substitution for Dutch Postal****\*Apply**

102629

**Do Not Apply**

102628

**Character Substitution for USPS 4CB/One Code/Intelligent Mail****\*Apply**

102631

**Do Not Apply**

102630

**Character Substitution for UPU FICS Postal****\*Apply**

102633

**Do Not Apply**

102632



#### Character Substitution for PDF417

\*Apply



102635

Do Not Apply



102634

#### Character Substitution for MicroPDF417

\*Apply



102637

Do Not Apply



102636

#### Character Substitution for Data Matrix

\*Apply



102639

Do Not Apply



102638

#### Character Substitution for Maxicode

\*Apply



102641

Do Not Apply



102640

#### Character Substitution for QR Code

\*Apply



102643

Do Not Apply



102642



Character Substitution for MicroQR

---

\*Apply



102645

Do Not Apply



102644

Character Substitution for Aztec

---

\*Apply



102647

Do Not Apply



102646



Update

## 4.3 PREFIX/SUFFIX CODE

By default, there is no prefix code, and [ENTER] or [CR] (Carriage Return) is configured to be suffix code. Up to 8 characters can be configured, for example, "Barcode\_ ", and have the string appear in front of the barcode read, like this – "Barcode\_1234567890".

- ▶ If "Keyboard Wedge" or "USB HID" is configured for interface, [Key Type](#) and [Key Status](#) will then become applicable. Decide whether to apply Key Status when select "Normal Key" for Key Type.

| Key Type   | Key Status  |
|------------|---|
| Scan Code  | Up to 4 scan code values are allowed.<br>N/A  |
| Normal Key | Up to 8 character strings are allowed.<br><ul style="list-style-type: none"> <li>▶ Add Shift</li> <li>▶ Add Left Ctrl</li> <li>▶ Add Left Alt</li> <li>▶ Add Right Ctrl</li> <li>▶ Add Right Alt</li> </ul> <p>Refer to <a href="#">Keyboard Wedge Table</a>.</p> |

Configure Prefix



101230

Configure Suffix



101231

- 1) Read the barcode above to apply prefix code or suffix code separately, and follow steps 2~3. (Max. 8 characters each)
- 2) Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string. For example, read "2" and "B" for the scanner to prefix or suffix the character [+].
- 3) Read the "Validate" barcode to complete this setting.



Enter Setup

## 4.4 CODE ID

Up to two characters for Code ID can be configured for each symbology. To make the Code ID configuration easier, the scanner provides five pre-defined Code ID sets that can select one and make necessary changes on it.

- ▶ If "Keyboard Wedge" or "USB HID" is configured for interface, [Key Type](#) and [Key Status](#) will then become applicable. Decide whether to apply Key Status when select "Normal Key" for Key Type.

| Key Type   | Key Status  |
|------------|---|
| Scan Code  | Only 1 scan code value is allowed.<br>N/A   |
| Normal Key | Up to 2 character strings are allowed.<br><ul style="list-style-type: none"> <li>▶ Add Shift</li> <li>▶ Add Left Ctrl</li> <li>▶ Add Left Alt</li> <li>▶ Add Right Ctrl</li> <li>▶ Add Right Alt</li> </ul> Refer to <a href="#">Keyboard Wedge Table</a> . |

Note: "]C1" is the Code ID of GS1-128 (EAN-128) barcodes; "]e0" is the default Code ID of GS1 DataBar (RSS) barcodes.

### 4.4.1 SELECT PRE-DEFINED CODE ID

Apply Code ID Set 1



109961

Apply Code ID Set 2



109962

Apply Code ID Set 3



109963

Apply Code ID Set 4



109964

Apply Code ID Set 5



109965



| Code ID options                         | Set 1 | Set 2 | Set 3 | Set 4 | Set 5 |
|---|-------|-------|-------|-------|-------|
| Code 39                                 | A     | C     | Y     | M     | A     |
| Trioptic Code 39                        | A     | C     | Y     | M     | X     |
| Italian Pharmacode                      | A     | C     | Y     | M     | A     |
| Industrial 25                           | C     | H     | H     | H     | S     |
| Interleaved 25                          | D     | I     | Z     | I     | S     |
| Matrix 25                               | E     | G     | G     | G     | S     |
| Chinese 25                              | Q     | M     | P     | S     | X     |
| Codabar                                 | F     | N     | X     | N     | F     |
| Code 93                                 | I     | L     | L     | L     | G     |
| Code 128                                | H     | K     | K     | K     | C     |
| ISBT 128                                | H     | K     | K     | K     | C     |
| UPC-E                                   | S     | E     | C     | E     | E     |
| EAN-8                                   | P     | B     | B     | FF    | E     |
| EAN-13                                  | M     | A     | A     | F     | E     |
| UPC-A                                   | J     | A     | A     | A     | E     |
| MSI                                     | V     | V     | D     | P     | M     |
| UCC Coupon Code                         | G     | F     | I     | C     | C     |
| Code 11                                 | K     | J     | J     | D     | H     |
| Composite CC-A/B                        | L     | X     | M     | J     | La    |
| Composite CC-C                          | N     | Y     | N     | O     | Lc    |
| Composite TLC-39                        | O     | Z     | O     | R     | L2    |
| US Postnet                              | h     | a     | s     | i     | X     |
| US Planet                               | i     | b     | t     | j     | X     |
| UK Postal                               | j     | c     | u     | k     | X     |
| Japan Postal                            | k     | d     | v     | l     | X     |
| Australian Postal                       | l     | e     | w     | m     | X     |
| Dutch Postal                            | m     | f     | x     | n     | X     |
| USPS 4 CB / One Code / Intelligent Mail | n     | g     | y     | o     | X     |
| UPU FICS Postal                         | o     | h     | z     | p     | X     |
| PDF417                                  | a     | O     | W     | T     | L     |
| MicroPDF417                             | b     | P     | V     | U     | L     |
| Data Matrix                             | c     | Q     | U     | V     | d     |
| Maxicode                                | d     | R     | T     | W     | U     |
| QR Code                                 | e     | S     | S     | X     | Q     |



|                   |   |   |   |   |   |
|-------------------|---|---|---|---|---|
| MicroQR           | f | T | R | Y | Q |
| Aztec             | g | U | Q | Z | z |
| IATA              | z | z | r | h | S |
| Macro PDF417      | p | i | a | q | L |
| Macro MicroPDF417 | q | j | b | r | L |



#### 4.4.2 CHANGE CODE ID

- 1) Read the barcode below to change code ID of a specific symbology.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string.  
For example, read "4" and "4" for applying the character [D] for Code ID.
- 3) Read the "Validate" barcode to complete this setting.

Configure Code ID for  
Codabar



101456

Configure Code ID for  
Code 39



101450

Configure Code ID for  
Trioptic Code 39



102566

Configure Code ID for  
Code 93



101457

Configure Code ID for  
Code 128



101458

Configure Code ID for  
ISBT 128



101466

Configure Code ID for  
EAN-8



101460

Configure Code ID for  
EAN-13



101461

Configure Code ID for  
Italian Pharmacode



101451

Configure Code ID for  
Industrial 25



101453



Configure Code ID for  
Interleaved 25



101454

Configure Code ID for  
Matrix 25



101455

Configure Code ID for  
Chinese 25



102571

Configure Code ID for  
MSI



101463

Configure Code ID for  
UPC-A



101462

Configure Code ID for  
UPC-E



101459

Configure Code ID for  
UCC Coupon Code



102565

Configure Code ID for  
Code 11



102567

Configure Code ID for  
Composite CC-A/B



102568

Configure Code ID for  
Composite CC-C



102569

Configure Code ID for  
Composite TLC-39



102570

Configure Code ID for  
US Postnet



102572



Configure Code ID for  
US Planet



102573

Configure Code ID for  
UK Postal



102574

Configure Code ID for  
Japan Postal



102575

Configure Code ID for  
Australian Postal



102576

Configure Code ID for  
Dutch Postal



102577

Configure Code ID for  
USPS 4CB / One Code /  
Intelligent Mail



102578

Configure Code ID for  
UPU FICS Postal



102579

Configure Code ID for  
PDF417



102580

Configure Code ID for  
MicroPDF417



102581

Configure Code ID for  
Data Matrix



102582

Configure Code ID for  
Maxicode



102583

Configure Code ID for  
QR Code



102584



Configure Code ID for  
MicroQR



102585

Configure Code ID for  
Aztec



102586

Configure Code ID for  
IATA



102587

Configure Code ID for  
Macro PDF417



102588

Configure Code ID for  
Macro MicroPDF417



102589

#### 4.4.3 CLEAR CODE ID SETTINGS

Clear All Code ID  
Settings



109960



Update

## 4.5 LENGTH CODE

A 4-digit code representing the length of barcode data (character count) can be inserted in front of data being transmitted. Such "Length" code can be individually enabled or disabled for each symbology.

### Length Code for Codabar

Apply



101413

\*Do Not Apply



101412

### Length Code for Code 39

Apply



101401

\*Do Not Apply



101400

### Length Code for Trioptic Code 39

Apply



102505

\*Do Not Apply



102504

### Length Code for Code 93

Apply



101415

\*Do Not Apply



101414



**Length Code for Code 128****Apply**

101417

**\*Do Not Apply**

101416

**Length Code for GS1-128 & GS1 DataBar****Apply**

101419

**\*Do Not Apply**

101418

**Length Code for ISBT 128****Apply**

101435

**\*Do Not Apply**

101434

**Length Code for EAN-8****Apply**

101423

**\*Do Not Apply**

101422

**Length Code for EAN-13****Apply**

101425

**\*Do Not Apply**

101424



Update

Length Code for Italian Pharmacode

---

Apply



101403

\*Do Not Apply



101402

Length Code for Industrial 25

---

Apply



101407

\*Do Not Apply



101406

Length Code for Interleaved 25

---

Apply



101409

\*Do Not Apply



101408

Length Code for Matrix 25

---

Apply



101411

\*Do Not Apply



101410

Length Code for Chinese 25

---

Apply



102515

\*Do Not Apply



102514



**Length Code for MSI****Apply**

101429

**\*Do Not Apply**

101428

**Length Code for UPC-A****Apply**

101427

**\*Do Not Apply**

101426

**Length Code for UPC-E****Apply**

101421

**\*Do Not Apply**

101420

**Length Code for UCC Coupon Extended Code****Apply**

102503

**\*Do Not Apply**

102502

**Length Code for Code 11****Apply**

102507

**\*Do Not Apply**

102506



**Length Code for Composite CC-A/B**

---

Apply



102509

\*Do Not Apply



102508

**Length Code for Composite CC-C**

---

Apply



102511

\*Do Not Apply



102510

**Length Code for Composite TLC-39**

---

Apply



102513

\*Do Not Apply



102512

**Length Code for US Postnet**

---

Apply



102517

\*Do Not Apply



102516

**Length Code for US Planet**

---

Apply



102519

\*Do Not Apply



102518



**Length Code for UK Postal****Apply**

102521

**\*Do Not Apply**

102520

**Length Code for Japan Postal****Apply**

102523

**\*Do Not Apply**

102522

**Length Code for Australian Postal****Apply**

102525

**\*Do Not Apply**

102524

**Length Code for Dutch Postal****Apply**

102527

**\*Do Not Apply**

102526

**Length Code for USPS 4CB/One Code/Intelligent Mail****Apply**

102529

**\*Do Not Apply**

102528



**Length Code for UPU FICS Postal**

---

Apply



102531

\*Do Not Apply



102530

**Length Code for PDF417**

---

Apply



102533

\*Do Not Apply



102532

**Length Code for MicroPDF417**

---

Apply



102535

\*Do Not Apply



102534

**Length Code for Data Matrix**

---

Apply



102537

\*Do Not Apply



102536

**Length Code for Maxicode**

---

Apply



102539

\*Do Not Apply



102538



Length Code for QR Code

---

Apply



102541

\*Do Not Apply



102540

Length Code for MicroQR

---

Apply



102543

\*Do Not Apply



102542

Length Code for Aztec

---

Apply



102545

\*Do Not Apply



102544




## 4.6 MULTI-BARCODE EDITOR

The Multi-Barcode Editor allows deciding the output sequence of a concatenation of barcodes. Up to five barcodes can be specified. When enable this mode, it will force the scanner to apply Laser mode as the scan mode. For 1504 to concatenate barcodes, the maximum output data length of all the barcodes is 10 KB after configuration. When the data length exceeds 10 KB, the concatenation will not take effect.

Note: The Multi-Barcode Editor has nothing to do with [Multi-Barcode Mode](#).

The barcodes that are found meeting the specified criteria below will be arranged in the desired sequence.

- ▶ Code Type
- ▶ 4-digit barcode length, excluding prefix, suffix, length code, etc.
- ▶ Matching the first character of barcode data

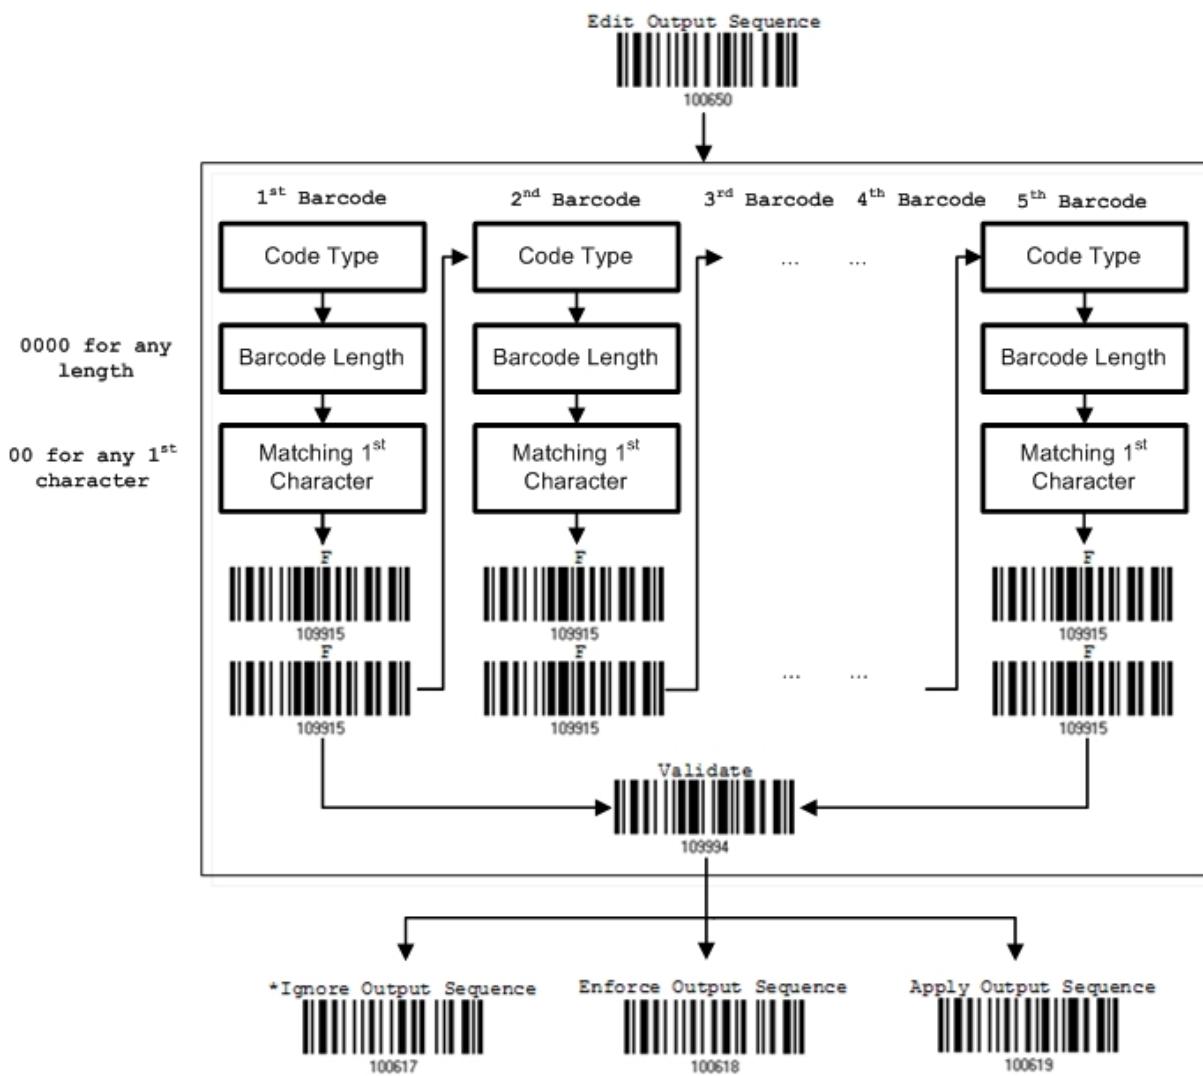

#### 4.6.1 EDIT A CONCATENATION OF BARCODES

Edit Output Sequence



100650

- 1) Read the barcode above to start editing a concatenation of barcodes.
- 2) Code Type setting – read the “[Hexadecimal Value](#)” barcode on page 194 for Code Type of the (first) barcode. For example, read “4” and “1” for Code 39.

| Code Type | Symbology           | Code Type | Symbology                    |
|-----------|---------------------|-----------|------------------------------|
| 40 (@)    | ISBT 128            |           |                              |
| 41 (A)    | Code 39             |           |                              |
| 42 (B)    | Italian Pharmacode  |           |                              |
| 43 (C)    | N/A                 |           |                              |
| 44 (D)    | Industrial 25       | 64 (d)    | TLC-39 (TCIF Linked Code 39) |
| 45 (E)    | Interleaved 25      | 65 (e)    | Trioptic Code 39             |
| 46 (F)    | Matrix 25           |           |                              |
| 47 (G)    | Codabar (NW7)       | 67 (g)    | Code 11                      |
| 48 (H)    | Code 93             |           |                              |
| 49 (I)    | Code 128            |           |                              |
| 4A (J)    | UPC-E0 / UPC-E1     | 6A (j)    | Composite CC-C               |
| 4B (K)    | UPC-E with Addon 2  | 6B (k)    | PDF417                       |
| 4C (L)    | UPC-E with Addon 5  | 6C (l)    | MicroPDF417                  |
| 4D (M)    | EAN-8               | 6D (m)    | Data Matrix                  |
| 4E (N)    | EAN-8 with Addon 2  | 6E (n)    | Maxicode                     |
| 4F (O)    | EAN-8 with Addon 5  | 6F (o)    | QR Code                      |
| 50 (P)    | EAN-13              | 70 (p)    | US Postnet                   |
| 51 (Q)    | EAN-13 with Addon 2 | 71 (q)    | US Planet                    |
| 52 (R)    | EAN-13 with Addon 5 | 72 (r)    | UK Postal                    |
| 53 (S)    | MSI                 | 73 (s)    | Japan Postal                 |
| 54 (T)    | N/A                 | 74 (t)    | Australian Postal            |
| 55 (U)    | GS1-128 (EAN-128)   | 75 (u)    | Dutch Postal                 |
| 56 (V)    | UPC-A               | 76 (v)    | Composite CC-A/B             |
| 57 (W)    | UPC-A with Addon 2  | 77 (w)    | Macro PDF417                 |
| 58 (X)    | UPC-A with Addon 5  | 78 (x)    | Macro MicroPDF417            |



|          |                   |          |  |
|----------|-------------------|----------|--|
|          |                   | 79 (y)   | Chinese 25                             |
| 5A (Z)   | N/A               | 7A (z)   | Aztec                                  |
| 5B ( [ ) | GS1 DataBar (RSS) | 7B ( { ) | Micro QR                               |
|          |                   | 7C (   ) | USPS 4CB / One Code / Intelligent Mail |
|          |                   | 7D ( } ) | UPU FICS Postal                        |
|          |                   | 7E ( ~ ) | UCC Coupon Extended Code               |

- 
- 3) Barcode Length setting – read the “[Decimal Value](#)” barcode on page 193 for the 4-digit length of the (first) barcode. For example, read “0065” for barcode length of 65 characters or read “0000” for any length.

---

Note: If not reading 0000 for any length, the 4-digit length must exclude prefix, suffix (0x0d by default), length code, etc.

- 
- 4) Matching Character setting – read the “[Hexadecimal Value](#)” barcode on page 194 for the 1<sup>st</sup> character that must be found matching in the (first) barcode. For example, read “4” and “1” for matching character “A” as the first character in the barcode or read “00” for any character.
- 5) Read twice the “F” barcode on page 194 (“FF”) to complete the setting of each barcode.
- 6) Read the “Validate” barcode to end the editing of the barcode set.



## 4.6.2 ACTIVATE THE CONCATENATION OF BARCODES

By default, the output sequence editing of the concatenation of barcodes is not applied.

When “Enforce Output Sequence” is enabled, all barcodes read by the scanner must meet with the criteria for the concatenation. If data is found excluded from all output sequence sets (= not meeting with the criteria), the scanner will not accept the reading, and therefore, data will not be transmitted.

When “Apply Output Sequence” is enabled, only barcodes found meeting with the criteria are counted for the concatenation. Those found not meeting with the criteria are processed normally and individually.

**Note:** When it requires reading more barcodes to complete the “output sequence” requirements, the scanner will respond with one short beep (low tone). After reading an acceptable barcode, its LED indicator will become solid green and go off quickly (= Good Read).

Upon completion of reading acceptable barcodes, the scanner will respond with one short beep (high tone) and its LED indicator will become solid green and go off quickly (= Good Read).

\*Ignore Output Sequence



100617

Enforce Output Sequence



100618

Apply Output Sequence



100619

**Warning:** When disable the Multi-Barcode Editor later, the scan mode remains unchanged. If Laser mode is not desired, proceed to select a scan mode best suits the application.



Update

## 4.7 REMOVAL OF SPECIAL CHARACTER

Specify only 1 character, but it will remove every matching character encountered from the starting position of barcode data until a different character is met. For example, if it is configured to remove the character "0" (hex value is "30"), one or more zeros will be stripped off the barcode data "012345" and "00012345". However, for barcode data "010333", only the first zero will be stripped off.

Remove Special  
Character



101470

- 1) Read the barcode above to remove the specified character.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string.  
For example, read "3" and "0" for the scanner to remove the character "0".
- 3) Read the "Validate" barcode to complete this setting.



Enter Setup

# Chapter 5

## APPLYING FORMATS FOR DATA EDITING

---

The scanner allows advanced data editing by applying user-configured editing formats. The whole processed data can be divided into fields by user-specified rules. These fields together with the user-configurable additional fields consist of the data actually sent to the host computer.

For 1504 to apply any editing format, the maximum output data length of a barcode is 7 KB after configuration. When the data length exceeds 7 KB, editing format will not take effect.

| [Prefix Code]      | [Code ID]          | [Length Code]      | [Data]         | [Suffix Code]      | Additional Field(s) |
|--------------------|--------------------|--------------------|----------------|--------------------|---------------------|
| None<br>by default | None<br>by default | None<br>by default | Barcode itself | 0x0d<br>by default |                     |

### IN THIS CHAPTER

---

|  |     |
|--|-----|
| 5.1 Activating Editing Formats.....                        | 150 |
| 5.2 How to Configure Editing Formats .....                 | 152 |
| 5.3 Configuring Format — Define Data Criteria .....        | 155 |
| 5.4 Configuring Format — Define Data Field .....           | 167 |
| 5.5 Configuring Format — Define Transmission Sequence .... | 175 |
| 5.6 Programming Examples .....                             | 178 |



## 5.1 ACTIVATING EDITING FORMATS

### 5.1.1 ACTIVATE EDITING FORMATS

If having already configured any editing format before, it may directly apply the editing format. If not, it must start with configuring an editing format first, and then, activate the editing format when it is desired in use.

#### Editing Format 1

**Enable**



101301

**\*Disable**



101300

#### Editing Format 2

**Enable**



101303

**\*Disable**



101302

#### Editing Format 3

**Enable**



101305

**\*Disable**



101304

#### Editing Format 4

**Enable**



101307

**\*Disable**



101306



**Editing Format 5****Enable**

101309

**\*Disable**

101308

**5.1.2 EXCLUSIVE DATA EDITING**

By default, only barcodes found meeting with the criteria are processed by the editing formats. Those found not meeting with the criteria are processed normally.

When "Exclusive Data Editing" is enabled, all barcodes read by the scanner must be processed by the editing formats. If data is found excluded from all enabled editing formats (= not meeting with the specified criteria), the scanner will not accept the reading, and therefore, data will not be transmitted.

**Yes**


101201

**\*No**

101200



## 5.2 HOW TO CONFIGURE EDITING FORMATS

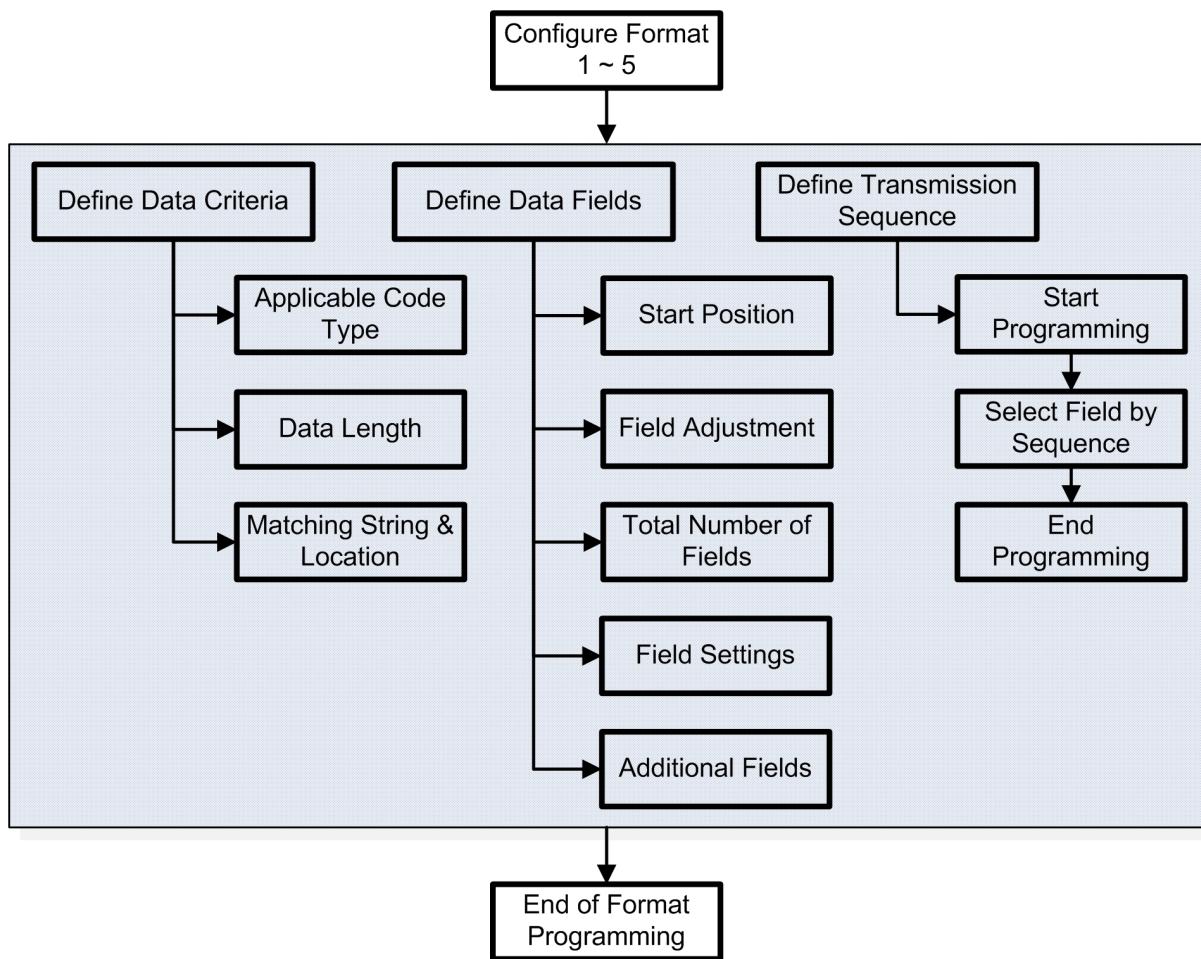

## 5.2.1 SELECT FORMAT TO CONFIGURE

### Start Programming Format

Select one editing format (Format 1~5) and the parameters pertaining to the editing format can then be configured – applicable code type, data length, matching string & location, start position, field adjustment, total number of fields, field settings (field-dividing rule), additional fields, and field transmission sequence.

- ▶ Up to five different formats can be specified.

Configure Format 1



109981

Configure Format 2



109982

Configure Format 3



109983

Configure Format 4



109984

Configure Format 5



109985

---

Note: Before completing the programming of an editing format, if having the scanner read any barcode for parameters other than those pertaining to the editing format; it will automatically abort the programming process.

---

### End Programming Format

After having configured all the desired parameters, have the scanner read the "End Programming Format" barcode, which can be located at the bottom of every even page in this chapter.

End Programming Format



109980



## 5.2.2 RESTORE DEFAULT FORMAT

Select an existing editing format and have the defaults restored. The default settings of an editing format are listed below.

| <b>Editing format</b>               | <b>Defaults</b>      |
|-------------------------------------|----------------------|
| Applicable Code Type                | All                  |
| Data Length                         | 0 (No qualification) |
| Matching String                     | Disable              |
| Matching String Location            | None                 |
| Start Position                      | From head            |
| Field Adjustment                    | No adjustment        |
| Total Number of Fields              | 1                    |
| Field Setting – field-dividing rule | Not configured       |
| Additional Fields                   | None                 |
| Field Transmission Sequence         | F1                   |

Restore Default Format



109990



## 5.3 CONFIGURING FORMAT – DEFINE DATA CRITERIA

Three applicable conditions can be configured to check whether the data read by the scanner can be processed by the particular editing format.

Note: Data editing cannot be performed unless the three conditions are all met.

### 5.3.1 APPLICABLE CODE TYPE

By default, barcodes of all the supported symbologies will be processed by any editing format, if having been configured and enabled. For quick configuration, first clear all, and then select the desired symbologies.

Note: It must have at least one symbology selected.

\***Apply to All**



109992

**Clear All**



109991



Update

**Editing Format for Codabar**

---

\*Apply



101513

Do Not Apply



101512

**Editing Format for Code 39**

---

\*Apply



101501

Do Not Apply



101500

**Editing Format for Trioptic Code 39**

---

\*Apply



101625

Do Not Apply



101624

**Editing Format for Code 93**

---

\*Apply



101515

Do Not Apply



101514

**Editing Format for Code 128**

---

\*Apply



101517

Do Not Apply



101516



**Editing Format for GS1-128 & GS1 DataBar**

---

\*Apply



101519

Do Not Apply



101518

**Editing Format for ISBT 128**

---

\*Apply



101553

Do Not Apply



101552

**Editing Format for EAN-8**

---

\*Apply



101527

Do Not Apply



101526

**Editing Format for EAN-8 Addon 2**

---

\*Apply



101529

Do Not Apply



101528

**Editing Format for EAN-8 Addon 5**

---

\*Apply



101531

Do Not Apply



101530



**Editing Format for EAN-13**

---

\*Apply



101533

Do Not Apply



101532

**Editing Format for EAN-13 Addon 2**

---

\*Apply



101535

Do Not Apply



101534

**Editing Format for EAN-13 Addon 5**

---

\*Apply



101537

Do Not Apply



101536

**Editing Format for Italian Pharmacode**

---

\*Apply



101503

Do Not Apply



101502

**Editing Format for Industrial 25**

---

\*Apply



101507

Do Not Apply



101506



**Editing Format for Interleaved 25**

---

\*Apply



101509

Do Not Apply



101508

**Editing Format for Matrix 25**

---

\*Apply



101511

Do Not Apply



101510

**Editing Format for Chinese 25**

---

\*Apply



101635

Do Not Apply



101634

**Editing Format for MSI**

---

\*Apply



101545

Do Not Apply



101544

**Editing Format for UPC-A**

---

\*Apply



101539

Do Not Apply



101538



**Editing Format for UPC-A Addon 2**

---

\*Apply



101541

Do Not Apply



101540

**Editing Format for UPC-A Addon 5**

---

\*Apply



101543

Do Not Apply



101542

**Editing Format for UPC-E**

---

\*Apply



101521

Do Not Apply



101520

**Editing Format for UPC-E Addon 2**

---

\*Apply



101523

Do Not Apply



101522

**Editing Format for UPC-E Addon 5**

---

\*Apply



101525

Do Not Apply



101524



**Editing Format for UCC Coupon Extended Code**

---

\*Apply



101623

Do Not Apply



101622

**Editing Format for Code 11**

---

\*Apply



101627

Do Not Apply



101626

**Editing Format for Composite CC-A/B**

---

\*Apply



101629

Do Not Apply



101628

**Editing Format for Composite CC-C**

---

\*Apply



101631

Do Not Apply



101630

**Editing Format for Composite TLC-39**

---

\*Apply



101633

Do Not Apply



101632



Update

**Editing Format for US Postnet**

---

\*Apply



101637

Do Not Apply



101636

**Editing Format for US Planet**

---

\*Apply



101639

Do Not Apply



101638

**Editing Format for UK Postal**

---

\*Apply



101641

Do Not Apply



101640

**Editing Format for Japan Postal**

---

\*Apply



101643

Do Not Apply



101642

**Editing Format for Australian Postal**

---

\*Apply



101645

Do Not Apply



101644



**Editing Format for Dutch Postal**

---

\*Apply



101647

Do Not Apply



101646

**Editing Format for USPS 4CB/One Code/Intelligent Mail**

---

\*Apply



101649

Do Not Apply



101648

**Editing Format for UPU FICS Postal**

---

\*Apply



101651

Do Not Apply



101650

**Editing Format for PDF417**

---

\*Apply



101653

Do Not Apply



101652

**Editing Format for MicroPDF417**

---

\*Apply



101655

Do Not Apply



101654



#### Editing Format for Data Matrix

\*Apply



101657

Do Not Apply



101656

#### Editing Format for Maxicode

\*Apply



101659

Do Not Apply



101658

#### Editing Format for QR Code

\*Apply



101661

Do Not Apply



101660

#### Editing Format for MicroQR

\*Apply



101663

Do Not Apply



101662

#### Editing Format for Aztec

\*Apply



101665

Do Not Apply



101664



### 5.3.2 DATA LENGTH

The length must include prefix, suffix (0x0d by default), length code, etc. By default, barcodes of any length (character count) are eligible for data editing.

- ▶ Specify a value.
  - ▶ When zero is given to both, the scanner will not perform the length qualification.
- I) Read the barcode below to specify Max. Length or Min. Length separately, and follow steps 2~3.

Max. Length



101561

Min. Length



101560

- 2) Read the “[Decimal Value](#)” barcode on page 193 for the desired length.  
3) Read the “Validate” barcode on the same page to complete this setting.



Update

### 5.3.3 MATCHING STRING & LOCATION

 
By default, no matching string is specified, and therefore, it is disabled. Enable this feature by specifying a matching string; up to four characters are allowed.

- ▶ When the Matching String Location is zero, the scanner will only check for the existence of the matching string in the barcode data.
- ▶ Specify a value to indicate where the matching string starts in the barcode data.

- I) Read the barcode to specify a matching string.



- 2) Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the barcode to specify the location of the matching string.



- 5) Read the "[Decimal Value](#)" barcode on page 193 for the desired location.
- 6) Read the "Validate" barcode on the same page to complete this setting.



## 5.4 CONFIGURING FORMAT – DEFINE DATA FIELD

### 5.4.1 START POSITION

Data can be divided into fields in one of the following direction –

- ▶ from head (F1) to tail (F5)
- ▶ from tail (F1) to head (F5)

\*From Head



101600

From Tail



101601

### 5.4.2 FIELD ADJUSTMENT

Apply equal length to all fields, if necessary. If data is found longer than specified, it will be truncated automatically. When data is found shorter, it will add "Space" (0x20) to field.

\*No adjustment



101602

Set length to adjust  
fields... (\*0)



101603

- 1) Read the barcode above to adjust field by length.
- 2) Read the "[Decimal Value](#)" barcode on page 193 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



Update

### 5.4.3 TOTAL NUMBER OF FIELDS

Data can be divided into at most 6 fields; each of them is numbered from F1 to F6 accordingly. However, only F1~F5 can be configured.

- ▶ The total number of fields must be specified correctly. If three fields are configured for the editing format, the data characters after F3 will be assigned to F4 automatically. This feature is quite useful especially when data of variable lengths is processed by editing formats.

**\*One Field**



101590

**Two Fields**



101591

**Three Fields**



101592

**Four Fields**



101593

**Five Fields**



101594

**Six Fields**



101595

Note: The number of configurable fields is always one less than the total number of fields specified. The extra data characters beyond the last field configured will be automatically assigned to the next field.



#### 5.4.4 FIELD SETTINGS

Data eligible for editing formats is divided into fields by user-specified rules – either using the field terminating string or specified field length.

##### By Terminating String

Specify the field terminating string. Up to two characters are allowed. The scanner will search for the occurrence of this particular string in the data.

- ▶ By default, this string will be included in the field.

##### By Length


Alternatively, Simply specify the field length. The scanner will assign the next specified number of characters into the field.

#### Field 1 Setting

1. Read the barcode below to divide field 1 by a specified terminating string.



2. Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string.
3. Read the "Validate" barcode to complete this setting.
4. Read the "Discard Separator" barcode if the field separator is not desired in the field.

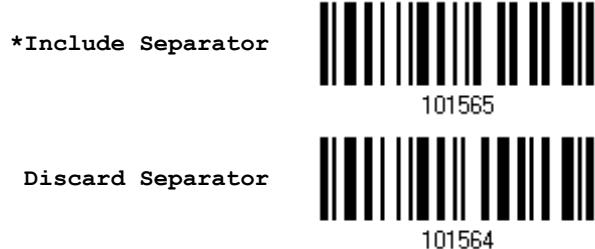

If not dividing the field by a specific separator, divide it by a specified length.

1. Read the barcode below to divide field 1 by length.




2. Read the "[Decimal Value](#)" barcode on page 193 for the desired field length.
3. Read the "Validate" barcode on the same page to complete this setting.



### Field 2 Setting

 1. Read the barcode below to divide field 2 by a specified terminating string.



2. Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string.
3. Read the "Validate" barcode to complete this setting.
4. Read the "Discard Separator" barcode if the field separator is not desired in the field.



If not dividing the field by a specific separator, divide it by a specified length.

1. Read the barcode below to divide field 2 by length.



2. Read the "[Decimal Value](#)" barcode on page 193 for the desired field length.
3. Read the "Validate" barcode on the same page to complete this setting.



**Field 3 Setting**

1. Read the barcode below to divide field 3 by a specified terminating string.



2. Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string.
3. Read the "Validate" barcode to complete this setting.
4. Read the "Discard Separator" barcode if the field separator is not desired in the field.



If not dividing the field by a specific separator, divide it by a specified length.

1. Read the barcode below to divide field 3 by length.

 


2. Read the "[Decimal Value](#)" barcode on page 193 for the desired field length.
3. Read the "Validate" barcode on the same page to complete this setting.



#### Field 4 Setting

1. Read the barcode below to divide field 4 by a specified terminating string.



2. Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string.
3. Read the "Validate" barcode to complete this setting.
4. Read the "Discard Separator" barcode if the field separator is not desired in the field.



If not dividing the field by a specific separator, divide it by a specified length.

1. Read the barcode below to divide field 4 by length.



2. Read the "[Decimal Value](#)" barcode on page 193 for the desired field length.
3. Read the "Validate" barcode on the same page to complete this setting.



**Field 5 Setting**

1. Read the barcode below to divide field 5 by a specified terminating string.



2. Read the "[Hexadecimal Value](#)" barcode on page 194 for the desired character string.
3. Read the "Validate" barcode to complete this setting.
4. Read the "Discard Separator" barcode if the field separator is not desired in the field.



If not dividing the field by a specific separator, divide it by a specified length.

1. Read the barcode below to divide field 5 by length.



2. Read the "[Decimal Value](#)" barcode on page 193 for the desired field length.
3. Read the "Validate" barcode on the same page to complete this setting.



### Additional Fields

Up to five additional fields can be created for each editing format; each of them is numbered from AF1 to AF5 accordingly.

- ▶ If “Keyboard Wedge” or “USB HID” is configured for interface, Key Type and Key Status will then become applicable. Decide whether to apply Key Status when “Normal Key” is selected for Key Type.

| Key Type   | Key Status  |
|------------|---|
| Scan Code  | Up to 2 scan code values are allowed.<br>N/A  |
| Normal Key | Up to 4 character strings are allowed.<br><ul style="list-style-type: none"> <li>▶ Add Shift</li> <li>▶ Add Left Ctrl</li> <li>▶ Add Left Alt</li> <li>▶ Add Right Ctrl</li> <li>▶ Add Right Alt</li> </ul> Refer to <a href="#">Keyboard Wedge Table</a> . |

1. Read the barcode below to specify an additional field, one at a time.

Additional Field 1...



101584

Additional Field 2...



101585

Additional Field 3...



101586

Additional Field 4...



101587

Additional Field 5...



101588

2. Read the “[Hexadecimal Value](#)” barcode on page 194 for the desired additional field.
3. Read the “Validate” barcode to complete this setting.



## 5.4.5 PAUSE FIELD SETTING

### Pause Field Time

Limit the pause time interval (1~16). By default, it is set to 1 second.

Pause Field Time  
1~16 sec.  
(\*1)



101604

1. Read the barcode above to specify the time interval for the Pause Field. (It is set to 1 by default.)
2. Read the “[Decimal Value](#)” barcode on page 193. For example, read “1” and “0” for setting the Pause Field Time to 10 seconds.
3. Read the “Validate” barcode on the same page to complete this setting.



Update

## 5.5 CONFIGURING FORMAT – DEFINE TRANSMISSION SEQUENCE

After configuring the data fields and additional fields, it must now program the transmission sequence of these fields that comprise the final data. This field transmission sequence can be assigned in any desired order and fields can be assigned multiple times as well.

Note: Up to twelve fields can be assigned.

- 4) Read the "Start" barcode to begin with programming the field transmission sequence.

Start Programming...



101589

- 5) Program the transmission sequence by reading the desired fields as well as additional fields.

Field 1



109901

Field 2



109902

Field 3



109903

Field 4



109904

Field 5



109905

Field 6



109906

Additional Field 1



109907



Additional Field 2



109908

Additional Field 3



109909

Additional Field 4



109910

Additional Field 5



109911

Pause Field



109912

Null Character Field



109913

- 6) Read the "End" barcode to complete this setting.

End Programming...



109994



Update

## 5.6 PROGRAMMING EXAMPLES

### 5.6.1 EXAMPLE I

**Extract data from the 10th character to the 19th character...**

---

The editing format should be configured as follows:

1. Read the "Enter Setup" barcode to enter the Configuration Mode.
2. Read the "Configure Format 1" barcode.
3. Read the "Clear All" and "Code 128" barcodes for applicable code type.
4. Read the "Three Fields" barcode.
5. Read the "Divide Field 1 by Length" barcode, and set length to 9.  
Field 1 data starts from the 1<sup>st</sup> character to the 9<sup>th</sup> character.
6. Read the "Divide Field 2 by Length" barcode, and set length to 10.  
Field 2 data starts from the 10<sup>th</sup> character to the 19<sup>th</sup> character.
7. Read the "Start (Programming)" barcode to program the transmission sequence.
8. Read the "Field 2" barcode.
9. Read the "End" barcode to complete the transmission sequence setting.
10. Read the "End Programming Format" barcode to complete the setting of Editing Format 1.
11. Read the "Enable Format 1" barcode to apply Editing Format 1 to Code 128.
12. Read the "Update" barcode to exit the Configuration Mode.



## 5.6.2 EXAMPLE II

**Extract the date code, item number, and quantity information from barcodes.**

Data in a barcode is encoded like this:

- ▶ From the 1<sup>st</sup> character to the 6<sup>th</sup> character is the date code.
- ▶ From the 7<sup>th</sup> character to the dash '-' character is the item number.
- ▶ After the dash '-' character is the quantity information.

Data will be transmitted like this:

- ▶ The item number goes first, then a TAB character, followed by the date code, then another TAB character, and finally the quantity information.

The editing format should be configured as follows:


1. Read the "Enter Setup" barcode to enter the Configuration Mode.
2. Read the "Configure Format 2" barcode.
3. Read the "Three Fields" barcode.
4. Read the "Divide Field 1 by Length" barcode, and set length to 6.  
Field 1 data starts from the 1<sup>st</sup> character to the 6<sup>th</sup> character.
5. Read the "Select Field Separator to Divide Field 2" barcode, and use a dash '-' character.  
Field 2 data starts from the 7<sup>th</sup> character until the dash '-' character is met.
6. Read the "Additional Field 1" barcode, and use a tab character for the field.
7. Read the "Start (Programming)" barcode to program the transmission sequence.
8. Read the "Field 2", "Additional Field 1", "Field 1", "Additional Field 1", "Field 3" barcodes.
9. Read the "End" barcode to complete the transmission sequence (F2 A1 F1 A1 F3) setting.
10. Read the "End Programming Format" barcode to complete the setting of Editing Format 1.
11. Read the "Enable Format 2" barcode to apply Editing Format 2 to all code types.
12. Read the "Update" barcode to exit the Configuration Mode.





## SPECIFICATIONS

---

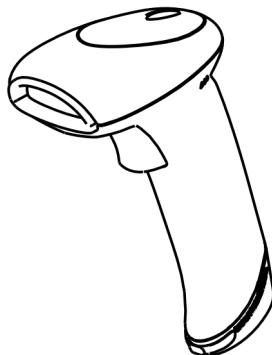

|                                      |           |  |
|--------------------------------------|-----------|--|
| <b>Optical Characteristics</b>       |           | <u>1504</u>                                      |
| Scan Engine                          |           | 2D Imager  |
| Light Source                         |           | Visible red LED                                  |
| <b>Physical Characteristics</b>      |           |  |
| Switch                               |           | Tactile switch                                   |
| Indication                           |           | Dual-color LED (Red/Green) and beeper            |
| Interface Options                    |           | Keyboard Wedge, RS-232, USB HID, USB Virtual COM |
| Weight                               |           | Approx. 154 g                                    |
| <b>Power Adaptor</b>                 |           |  |
| Input                                |           | AC 100~240 V, 50/60 Hz                           |
| Output                               |           | DC 5V, 1A  |
| Power Consumption                    | Standby   | 30 mA  |
|                                      | Operating | 280 mA   |
| Operating Temperature                |           | 0 °C to 40 °C                                    |
| <b>Environmental Characteristics</b> |           |  |
| Temperature                          | Operating | 0 °C to 50 °C                                    |
|                                      | Storage   | -20 °C to 60 °C                                  |
| Humidity<br>(Non-condensing)         | Operating | 10% to 90%                                       |
|                                      | Storage   | 5% to 95%  |



| <b>Resistance</b>                        |   |
|--|---|
| Impact Resistance                        | 1.2 m, 5 drops per 6 sides                          |
| Splash / Dust Resistance                 | IP 30   |
| Electrostatic Discharge                  | ± 15 kV air discharge, ± 8 kV contact discharge     |
| <b>Programming Support</b>               |   |
| Configuration via Setup Barcodes         | Use setup barcodes or host serial commands.         |
| Software                                 | Windows®-based ScanMaster                           |
| Firmware upgradeable                     | Download firmware updates via the download utility. |
| <b>Accessories (✓ means “supported”)</b> |   |
| Auto-Sense Stand                         | ✓   |
| RS-232 Cable                             | ✓   |
| Keyboard Wedge Cable                     | ✓   |
| USB Cable                                | ✓   |




# Appendix I

## FIRMWARE UPGRADE

---

### USING RS-232


- 1) Connect the RS-232 cable between the scanner and the computer, and join the power supply cord.
- 2) Read the following barcodes in sequence to configure the scanner to use RS-232 as download interface.

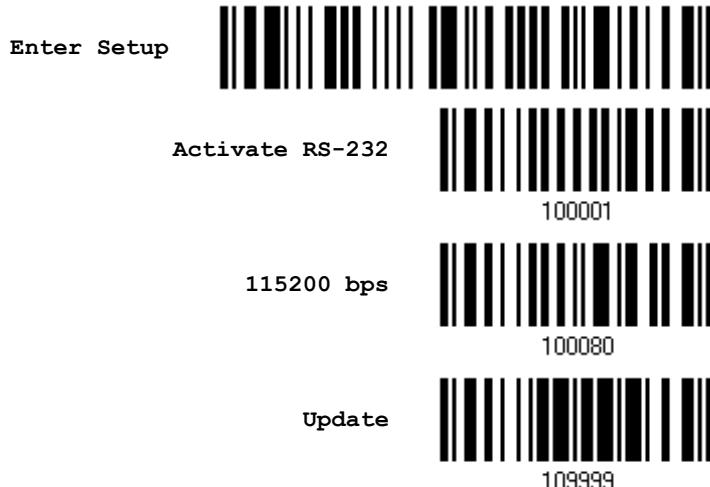

- 3) Read the following barcodes in sequence for the scanner to enter the download mode. The scanner will respond with beeps to indicate it is ready for downloading.



- 4) Run the download utility "ProgLoad.exe" on the computer.

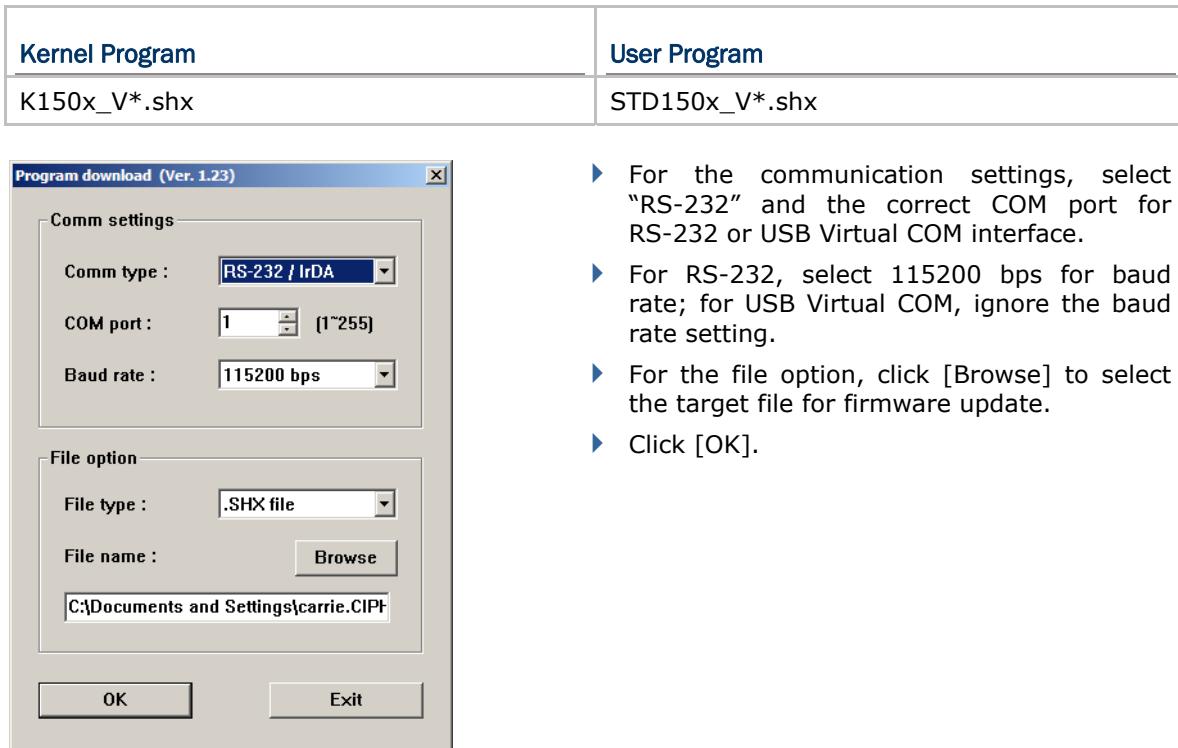

- ▶ For the communication settings, select "RS-232" and the correct COM port for RS-232 or USB Virtual COM interface.
- ▶ For RS-232, select 115200 bps for baud rate; for USB Virtual COM, ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

- 5) After upgrading kernel, it will need to restart the scanner manually.

After upgrading the user program, the scanner will automatically restart itself once the download is completed successfully.

---


Note: The output interface remains unchanged as specified in step 2 (= RS-232 or USB Virtual COM). For RS-232, the baud rate setting is still 115200 bps!

---




## USING USB VIRTUAL COM

- I) Connect the USB cable between the scanner and the computer.
  - ▶ If using USB Virtual COM for the first time, it must install its driver from the CD-ROM.
- 2) For Windows platform, read the following barcodes in sequence to configure the scanner to use USB VCOM\_CDC as download interface.

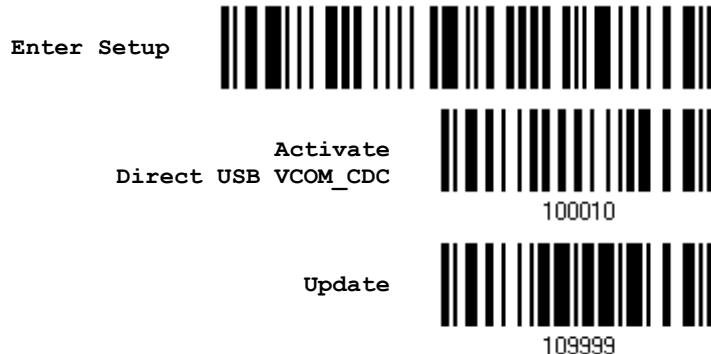


For non-Windows platform, read the following barcodes in sequence to configure the scanner to use USB Virtual COM as download interface.

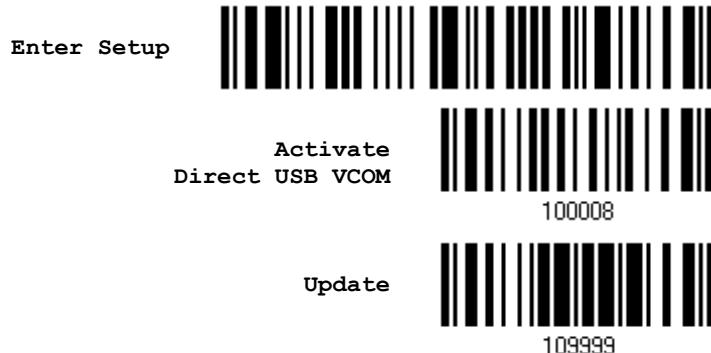

- 3) Read the following barcodes in sequence for the scanner to enter the download mode. The scanner will respond with beeps to indicate it is ready for downloading.



- 4) Run the download utility "ProgLoad.exe" on the computer.

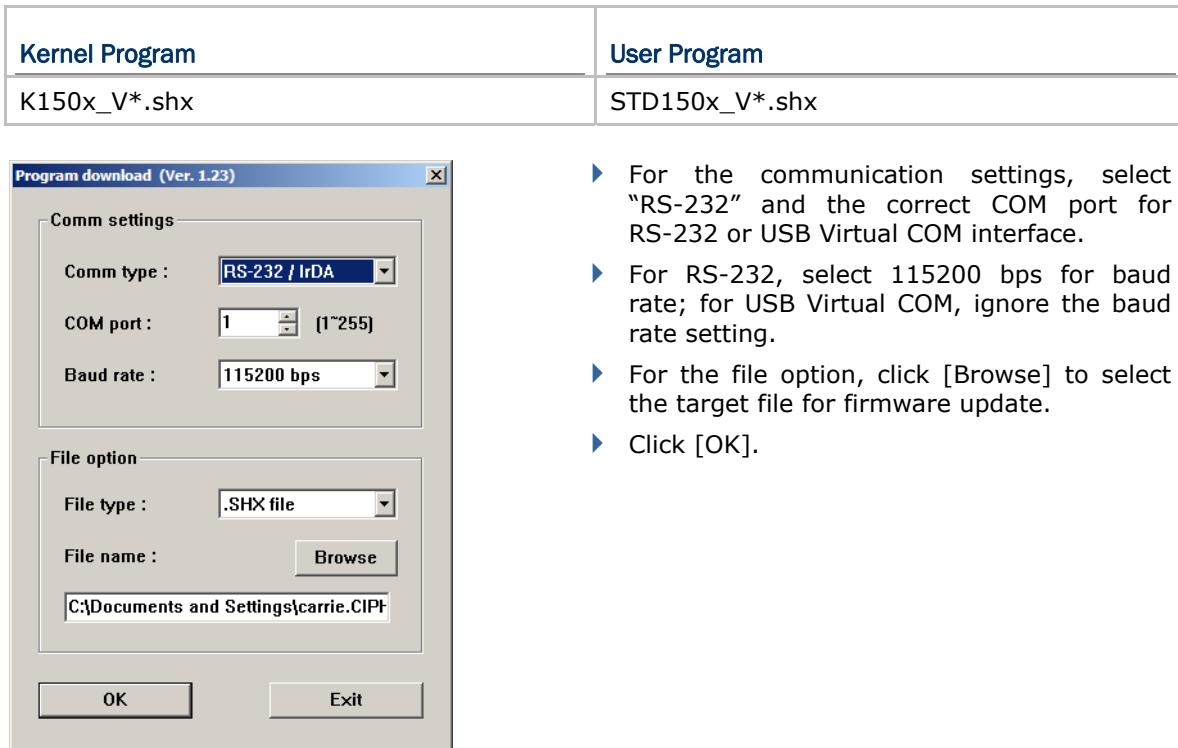

- ▶ For the communication settings, select "RS-232" and the correct COM port for RS-232 or USB Virtual COM interface.
- ▶ For RS-232, select 115200 bps for baud rate; for USB Virtual COM, ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

- 5) After upgrading kernel, it will need to restart the scanner manually.

After upgrading the user program, the scanner will automatically restart itself once the download is completed successfully.

---

Note: The output interface remains unchanged as specified in step 2 (= RS-232 or USB Virtual COM). For RS-232, the baud rate setting is still 115200 bps!

---



## Appendix II

### HOST SERIAL COMMANDS

---

#### SERIAL COMMANDS

##### D

Purpose To disable the scanner.

Remarks "D"

##### E

Purpose To enable the scanner.

Remarks "E"

#### #@ nnnnnn <CR>

Purpose To configure the scanner.

Remarks nnnnnn – the six digits of command parameters.

For example, "109952" is to list the current Code ID settings.

List Page 3



109952

Serial Command

"0x23" + "0x40" + "0x31" + "0x30" + "0x39" + "0x39" + "0x35" + "0x32" + "0x0d"

Note: After configuring the scanner, send the serial command "#@109999" to save the settings.

---

#### #@ ---<CR>

Purpose To halt the scanner.

Remarks "0x23" + "0x40" + "0x2d" + "0x2d" + "0x2d" + "0x2d" + "0x0d"

#### #@ . . . <CR>

Purpose To resume operation.

Remarks "0x23" + "0x40" + "0x2e" + "0x2e" + "0x2e" + "0x2e" + "0x0d"

#### #@///<CR>

Purpose To respond with a beep.

Remarks "0x23" + "0x40" + "0x2f" + "0x2f" + "0x2f" + "0x2f" + "0x0d"



#### #@TRIGOFF<CR>

Purpose      Disable software trigger  
Remarks     “0x23” + “0x40” + “0x54” + “0x52” + “0x49” + “0x47” + “0x4f” + “0x46” + “0x46” + “0x0d”

#### #@TRIGON<CR>

Purpose      Enable software trigger  
Remarks     “0x23” + “0x40” + “0x54” + “0x52” + “0x49” + “0x47” + “0x4f” + “0x4e” + “0x0d”

### EXAMPLE

Run HyperTerminal.exe on the host computer to send serial commands to the scanner via RS-232 or USB Virtual COM.

- ▶ For the scanner to stop immediately -  
D
- ▶ For the scanner to resume working -  
E
- ▶ For the scanner to change the beeper to medium volume and beep -  
#@101011<CR>  
#@///<CR>
- ▶ For the scanner to change the beeper to minimal volume and beep -  
#@101010<CR>  
#@///<CR>
- ▶ For the scanner to change the beeper frequency to 8 kHz (for Good Read Beep only) and beep -  
#@101001<CR>  
#@///<CR>
- ▶ For the scanner to change the beeper length to longest (for Good Read Beep only) and beep -  
#@101008<CR>  
#@///<CR>
- ▶ For the scanner to save the settings, send the serial command “#@109999” -  
#@101011<CR>  
#@109999<CR>

---

Note: Configure more than one scanner connected to the host via RS-232 or USB Virtual COM. To identify the scanner, please end the serial command to have it respond with a beep.

---



## Appendix III

### KEYBOARD WEDGE TABLE

| "Apply" Special Keyboard |          |          |          |          |          |          |          |          |          |  |
|--------------------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|--|
|                          | <b>0</b> | <b>1</b> | <b>2</b> | <b>3</b> | <b>4</b> | <b>5</b> | <b>6</b> | <b>7</b> | <b>8</b> |  |
| <b>0</b>                 |          | F2       | SP       | 0        | @        | P        | `        | p        | ①        |  |
| <b>1</b>                 | INS      | F3       | !        | 1        | A        | Q        | a        | q        | ②        |  |
| <b>2</b>                 | DLT      | F4       | "        | 2        | B        | R        | b        | r        | ③        |  |
| <b>3</b>                 | Home     | F5       | #        | 3        | C        | S        | c        | s        | ④        |  |
| <b>4</b>                 | End      | F6       | \$       | 4        | D        | T        | d        | t        | ⑤        |  |
| <b>5</b>                 | Up       | F7       | %        | 5        | E        | U        | e        | u        | ⑥        |  |
| <b>6</b>                 | Down     | F8       | &        | 6        | F        | V        | f        | v        | ⑦        |  |
| <b>7</b>                 | Left     | F9       | '        | 7        | G        | W        | g        | w        | ⑧        |  |
| <b>8</b>                 | BS       | F10      | (        | 8        | H        | X        | h        | x        | ⑨        |  |
| <b>9</b>                 | HT       | F11      | )        | 9        | I        | Y        | i        | y        |          |  |
| <b>A</b>                 | LF       | F12      | *        | :        | J        | Z        | j        | z        |          |  |
| <b>B</b>                 | Right    | ESC      | +        | ;        | K        | [        | k        | {        |          |  |
| <b>C</b>                 | PgUp     | Exec     | ,        | <        | L        | \        | l        |          |          |  |
| <b>D</b>                 | CR       | CR*      | -        | =        | M        | ]        | m        | }        |          |  |
| <b>E</b>                 | PgDn     |          | .        | >        | N        | ^        | n        | ~        |          |  |
| <b>F</b>                 | F1       |          | /        | ?        | O        | _        | o        | Dly      | ENTER*   |  |

Note: (1) ①~⑨: Digits of numeric keypad.

(2) CR\*/Send/ENTER\*: ENTER key on the numeric keypad.



| <b>"Bypass" Special Keyboard</b> |          |          |          |          |          |          |          |          |          |  |
|----------------------------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|--|
|                                  | <b>0</b> | <b>1</b> | <b>2</b> | <b>3</b> | <b>4</b> | <b>5</b> | <b>6</b> | <b>7</b> | <b>8</b> |  |
| <b>0</b>                         |          |          | SP       | 0        | @        | P        | `        | p        | ①        |  |
| <b>1</b>                         |          | !        | 1        | A        | Q        | a        | q        | ②        |          |  |
| <b>2</b>                         |          | "        | 2        | B        | R        | b        | r        | ③        |          |  |
| <b>3</b>                         |          | #        | 3        | C        | S        | c        | s        | ④        |          |  |
| <b>4</b>                         |          | \$       | 4        | D        | T        | d        | t        | ⑤        |          |  |
| <b>5</b>                         |          | %        | 5        | E        | U        | e        | u        | ⑥        |          |  |
| <b>6</b>                         |          | &        | 6        | F        | V        | f        | v        | ⑦        |          |  |
| <b>7</b>                         |          | '        | 7        | G        | W        | g        | w        | ⑧        |          |  |
| <b>8</b>                         | BS       | (        | 8        | H        | X        | h        | x        | ⑨        |          |  |
| <b>9</b>                         | HT       | )        | 9        | I        | Y        | i        | y        |          |          |  |
| <b>A</b>                         | LF       | *        | :        | J        | Z        | j        | z        |          |          |  |
| <b>B</b>                         |          | ESC      | +        | K        | [        | k        | {        |          |          |  |
| <b>C</b>                         |          | ,        | <        | L        | \        | l        |          |          |          |  |
| <b>D</b>                         | CR       | -        | =        | M        | ]        | m        | }        |          |          |  |
| <b>E</b>                         |          | .        | >        | N        | ^        | n        | ~        |          |          |  |
| <b>F</b>                         |          | /        | ?        | O        | _        | o        | Dly      | ENTER*   |          |  |

Note: (1) ①~⑨: Digits of numeric keypad.  
(2) CR\*/Send/ENTER\*: ENTER key on the numeric keypad.



**KEY TYPE & STATUS****KEY TYPE**

If “Keyboard Wedge” or “USB HID” is configured for interface, Key Type and Key Status will then become applicable.

**\*Normal**

109926

**Scan Code**

109936

**KEY STATUS**

Decide whether or not to change key status when “Normal Key” is selected for Key Type.

**Add Shift**

109930

**Add Left Ctrl**

109931

**Add Right Ctrl**

109933

**Add Left Alt**

109932

**Add Right Alt**

109934



## EXAMPLE

### KEY TYPE = NORMAL

For example, if want to program the character “!” as the prefix code:

1. Read the “Configure Prefix” barcode.
2. Read the “[Hexadecimal Value](#)” barcode on page 194 for “2” and “1”.
3. Read the “Validate” barcode to complete this setting.

### KEY TYPE = SCAN CODE

For example, if want to program the character “a” (= “1C” on the scan code table) as the prefix code:

1. Read the “Configure Prefix” barcode.
2. Read the “Scan Code” barcode.
3. Read the “[Hexadecimal Value](#)” barcode on page 194 for “1” and “C”.
4. Read the “Validate” barcode to complete this setting.

### KEY TYPE = NORMAL + KEY STATUS = SHIFT

For example, if want to program the character “!” (= “Shift” + “1” on keyboard) as the prefix code:

1. Read the “Configure Prefix” barcode.
2. Read the “Add Shift” barcode.
3. Read the “[Hexadecimal Value](#)” barcode on page 194 for “3” and “1”.
4. Read the “Validate” barcode to complete this setting.

### KEY TYPE = NORMAL + KEY STATUS = CTRL

For example, if want to program “Ctrl+A” and “Ctrl+\$” as the prefix code:

1. Read the “Configure Prefix” barcode.
2. Read the “Add Left Ctrl” barcode.
3. Read the “[Hexadecimal Value](#)” barcode on page 194 for “4”, “1” (= “A”).
4. Read the “Add Left Ctrl” barcode.
5. Read the “[Hexadecimal Value](#)” barcode on page 194 for “2”, “4” (= “\$”).
6. Read the “Validate” barcode to complete this setting.



## Appendix IV

### NUMERAL SYSTEMS

---

#### DECIMAL SYSTEM

##### Decimal

---

0



109900

1



109901

2



109902

3



109903

4



109904

5



109905

6



109906

7



109907

8



109908

9



109909

##### Validate the Values

---

Validate



109994

---

Update

Abort

193



## HEXADECIMAL SYSTEM

### Hexadecimal

---

0



109900

1



109901

2



109902

3



109903

4



109904

5



109905

6



109906

7



109907

8



109908

9



109909

A



109910

B



109911

C



109912

D



109913

E



109914

F



109915



**Validate the Values****ASCII TABLE**

|   | <b>0</b> | <b>1</b> | <b>2</b> | <b>3</b> | <b>4</b> | <b>5</b> | <b>6</b> | <b>7</b> |  |
|---|----------|----------|----------|----------|----------|----------|----------|----------|--|
| 0 |          | DLE      | SP       | 0        | @        | P        | `        | p        |  |
| 1 | SOH      | DC1      | !        | 1        | A        | Q        | a        | q        |  |
| 2 | STX      | DC2      | "        | 2        | B        | R        | b        | r        |  |
| 3 | ETX      | DC3      | #        | 3        | C        | S        | c        | s        |  |
| 4 | EOT      | DC4      | \$       | 4        | D        | T        | d        | t        |  |
| 5 | ENQ      | NAK      | %        | 5        | E        | U        | e        | u        |  |
| 6 | ACK      | SYN      | &        | 6        | F        | V        | f        | v        |  |
| 7 | BEL      | ETB      | '        | 7        | G        | W        | g        | w        |  |
| 8 | BS       | CAN      | (        | 8        | H        | X        | h        | x        |  |
| 9 | HT       | EM       | )        | 9        | I        | Y        | i        | y        |  |
| A | LF       | SUB      | *        | :        | J        | Z        | j        | z        |  |
| B | VT       | ESC      | +        | ;        | K        | [        | k        | {        |  |
| C | FF       | FS       | ,        | <        | L        | \        | l        |          |  |
| D | CR       | GS       | -        | =        | M        | ]        | m        | }        |  |
| E | SO       | RS       | .        | >        | N        | ^        | n        | ~        |  |
| F | SI       | US       | /        | ?        | O        | _        | o        | DEL      |  |

Update

Abort

195



## READING DRIVER LICENSES

# Appendix V

1504 is capable of reading 2D driver's licenses and other American Association of Motor Vehicle Administrators (AAMVA) compliant ID cards. For compliant 2D licensed card scanning, it decodes the information embedded in the ID cards to a formatted data. This appendix provides the setup barcodes required while ScanMaster utility provides GUI setup that is organized and easy-to-use.

Note: The configured settings are saved in flash memory for access once a driver's license is read.

### LICENSE PARSING SETUP

\*License Parse Disable



103000

License Parse Enable



103001

Parse Field Clear



103002

Update



Abort



196

## OUTPUT SEQUENCE SETUP

1504 supports arranging the sequences of license embedded data via separators and fields. In order to present data in a consistent format, some barcodes (ex. First Name, Middle Name/Initial, Last Name, Name suffix, Name Prefix, Birth Date and so on) will return data based on the calculated actual data contained in the ID barcode.

**Full Name**



103011

**Last Name**



103012

**First Name**



103013

**Middle Name/Initial**



103014

**Name Suffix**



103015

**Name Prefix**



103016

**Mailing Address Line1**



103017

**Mailing Address Line2**



103018

**Mailing Address City**



103019

**Mailing Address State**



103020

Update

Abort

197



Mailing Address  
Postal Code



103021

Home Address Line1



103022

Home Address Line2



103023

Home Address City



103024

Home Address State



103025

Home Address Postal  
Code



103026

License ID Number



103027

License Class



103028

License  
Restrictions



103029

License  
Endorsements



103030

Height  
(Feet and/or Inches)



103031

Height  
(Centimeters)



103032



Weight  
(Pounds)



Weight  
(Kilograms)



Eye Color



Hair Color



License Expiration  
Date



Birth Date



Gender



License Issue Date



Issue Timestamp



Number of Duplicates



Medical Codes



Organ Donor



Nonresident



103045

Customer ID



103046

Social Security  
Number



103047

AKA Birth Date



103048

AKA Social Security  
Name



103049

AKA Full Name



103050

AKA Last Name



103051

AKA First Name



103052

AKA Middle  
Name/Initial



103053

AKA Name Suffix



103054

AKA Name Prefix



103055

Weight Range



103056



Document  
Discriminator



103057

Country



103058

Federal Commission  
Codes



103059

Place of Birth



103060

Audit Information



103061

Inventory Control



103062

Race/Ethnicity



103063

Std Vehicle Class



103064

Std Restrictions



103065

Std Endorsements



103066

Class Description



103067

Endorsement  
Description



103068



Restrictions  
Description



103069

Permit Class



103070

Permit Expiration  
Date



103071

Permit ID Number



103072

Permit Issue Date



103073

Permit Restrictions



103074

Permit endorsements



103075

Issuer ID Number



103076



## SEPARATORS AND FIELDS

Define the separators that separate fields during the transmission sequence of data scanning. In addition to the built-in data elements, you can also specify up to 5 Additional Fields with 4 bytes characters. Program the transmission sequence by reading the desired fields as additional fields.

Note: Up to 5 separators can be assigned.

|   |   |        |
|---|---|--------|
| <b>Separator 1</b><br>(1 byte)<br>* "Space" |    | 103128 |
| <b>Separator 2</b><br>(1 byte)<br>* "Enter" |    | 103129 |
| <b>Separator 3</b><br>(1 byte)<br>* " , "   |    | 103130 |
| <b>Separator 4</b><br>(1 byte)<br>* " . "   |   | 103131 |
| <b>Separator 5</b><br>(1 byte)<br>* " - "   |  | 103132 |
| <b>Additional Field 1</b><br>(4 bytes)      |  | 103133 |
| <b>Additional Field 2</b><br>(4 bytes)      |  | 103134 |
| <b>Additional Field 3</b><br>(4 bytes)      |  | 103135 |
| <b>Additional Field 4</b><br>(4 bytes)      |  | 103136 |
| <b>Additional Field 5</b><br>(4 bytes)      |  | 103137 |



## EDIT SEPARATORS

All the driver license fields can be split with a pre-selected separator, for example, “-” as First Name-Last Name or “:” as First Name:Last Name.

Edit Separator 1



103138

Edit Separator 2



103139

Edit Separator 3



103140

Edit Separator 4



103141

Edit Separator 5



103142

- 1) Read the barcode above to apply separator to driver license information separately, and follow steps 2~3.
- 2) Read the “[Hexadecimal Value](#)” barcode for the desired character string. For example, read “3” and “A” for the separator to split the data with character [:].
- 3) Read the “Validate” barcode on the same page to complete this setting.



## EDIT FIELDS

Up to five additional fields can be created for each editing format; each of them is numbered from Additional 1 to Additional 5 accordingly.

- ▶ If "Bluetooth® HID" or "USB HID" is configured for interface, Key Type and Key Status will then become applicable. You may decide whether or not to apply Key Status when "Normal Key" is selected for Key Type.

| Key Type   | Key Status  |
|------------|---|
| Scan Code  | Up to 2 scan code values are allowed.<br>N/A  |
| Normal Key | Up to 4 character strings are allowed.<br><ul style="list-style-type: none"> <li>▶ Add Shift</li> <li>▶ Add Left Ctrl</li> <li>▶ Add Left Alt</li> <li>▶ Add Right Ctrl</li> <li>▶ Add Right Alt</li> </ul> Refer to <a href="#">Keyboard Wedge Table</a> . |

Edit Additional  
Field 1



103143

Edit Additional  
Field 2



103144

Edit Additional  
Field 3



103145

Edit Additional  
Field 4



103146

Edit Additional  
Field 5



103147

- 1) Read the barcode above to specify an additional field, one at a time.
- 2) Read the "[Hexadecimal Value](#)" barcode for the desired additional field.
- 3) Read the "Validate" barcode on the same page to complete this setting.

