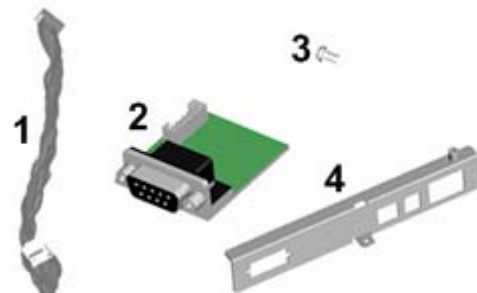


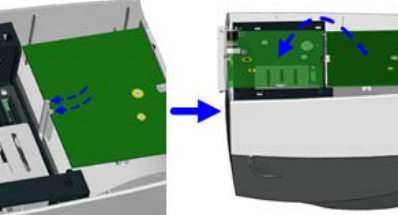
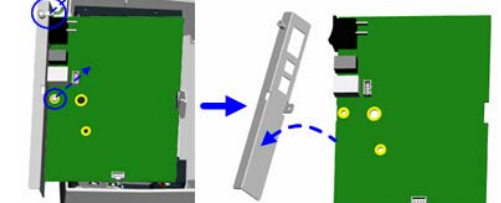
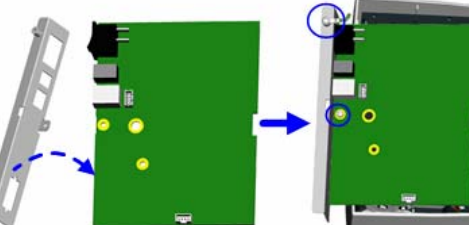
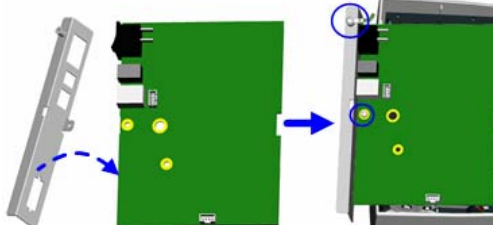
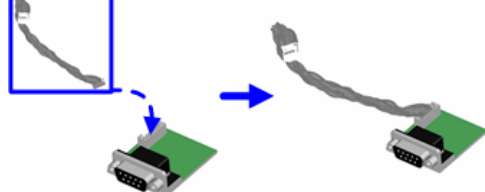
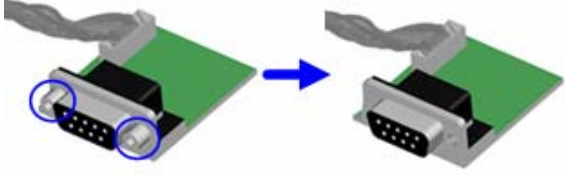
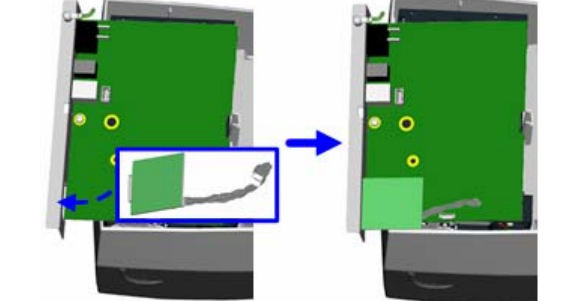
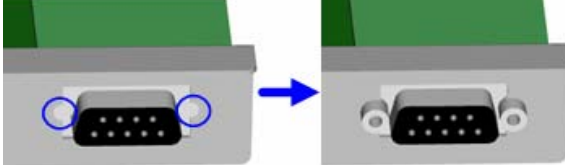
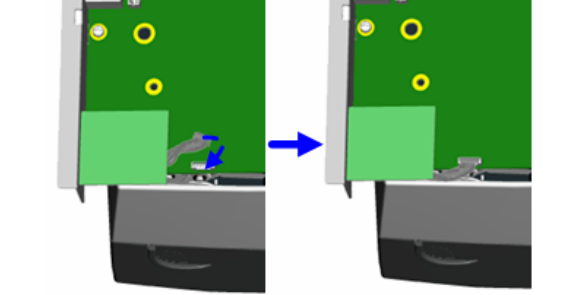

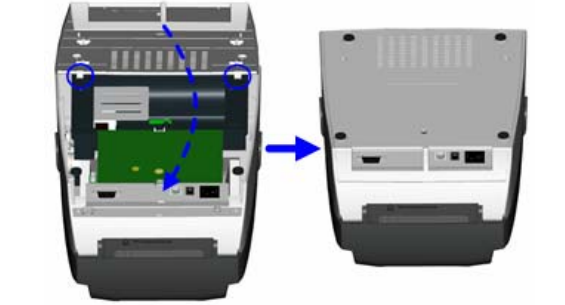


RS-232 Module Installation for EZ-1105 / EZ-1305

1	Module Connection Wire 模組連接線	
2	RS-232 module RS-232連接埠模組	
3	Secure Screw 模組固定螺絲	
4	RS-232 Back Panel RS-232連接埠蓋板	
<p>Note: Please make sure that anti-static precautions are adopted during the installation.</p> <p>注意： 安裝模組時請務必做好防靜電措施。</p>		
<p>1. Make sure the power is off and the power cable is unplugged. Place the printer onto a smooth surface and flip the whole printer unit upside down.</p> <p>確定電源已關閉且將電源線自機器端拔除後，將機器底部翻轉至正面。</p>		
<p>2. Unscrew bottom case screws as indicated in figure.</p> <p>卸下底部的 3 個固定螺絲。</p>		
<p>3. Push the places as the arrow pointed in figure with both hands. Then move the Bottom Cover upward and remove it.</p> <p>以兩手按住圖示箭頭所指處往上推以打開機器底蓋。</p>		
<p>4. Push the Mainboard Hooks to release the mainboard and then turn over it to opposite side.</p> <p>推開主板卡鉤後把主板翻轉至反方向。</p>		
<p>5. Unscrew the Ground Wire Screw and Mainboard Screw to remove the Connection Port Panel.</p> <p>移除地線螺絲以及背板固定螺絲後取下連接埠背板。</p>		
<p>6. Align the RS-232 Back Panel to connection ports and fix it with Ground Wire Screw and Mainboard Screw.</p> <p>換上 RS-232 連接埠蓋板後再鎖回地線螺絲及背板固定螺絲。</p>		
<p>7. Plug one end of the Module Connection Wire on into the socket on RS-232 module.</p> <p>將模組連接線的一端先插在 RS-232 模組上。</p>		

<p>8. Use long-nose pliers to loosen and remove the hexagonal screws on both sides of RS-232 module. 將 RS-232 模組兩端的六角螺絲以尖嘴鉗轉鬆後拆下。</p>	
<p>9. Align the RS-232 module to the RS-232 port and plug into it. 將 RS-232 模組對準網路埠插孔安裝在機器上。</p>	
<p>10. Tighten the hexagonal screws to fix the RS-232 module. 將 RS-232 模組的六角螺絲鎖回以固定 RS-232 模組。</p>	
<p>11. Plug the other end of Module Connection Wire into the socket on mainboard. 將模組連接線的另一端插入主板上的插座。</p>	
<p>12. Align the hole of mainboard to the pillar and then turn the mainboard back to original position. Push the mainboard downward slightly to fix the mainboard with the hooks. 將主板上的圓孔對準機器上的螺絲柱後把主板翻回原來的位置，再稍微把主板下壓以扣回主板卡鉤。</p>	
<p>13. Align the Bottom Cover to the hooks and reassemble it. 對準機器底蓋兩邊的卡鉤後再裝回機器底蓋。</p>	
<p>14. Tighten bottom case screws to complete the installation. 將機器底部的固定螺絲鎖上後，即可完成安裝。</p>	