

# CipherLab User Guide

## 1663 Barcode Scanner

Setup barcodes included.

Version 1.01



Copyright © 2012~2013 CIPHERLAB CO., LTD.  
All rights reserved

The software contains proprietary information of CIPHERLAB CO., LTD.; it is provided under a license agreement containing restrictions on use and disclosure and is also protected by copyright law. Reverse engineering of the software is prohibited.

Due to continued product development this information may change without notice. The information and intellectual property contained herein is confidential between CIPHERLAB and the client and remains the exclusive property of CIPHERLAB CO., LTD. If you find any problems in the documentation, please report them to us in writing. CIPHERLAB does not warrant that this document is error-free.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written permission of CIPHERLAB CO., LTD.

For product consultancy and technical support, please contact your local sales representative. Also, you may visit our web site for more information.

The CipherLab logo is a registered trademark of CIPHERLAB CO., LTD.

All brand, product and service, and trademark names are the property of their registered owners.

The editorial use of these names is for identification as well as to the benefit of the owners, with no intention of infringement.

**CIPHERLAB CO., LTD.**

Website: <http://www.cipherlab.com>

# IMPORTANT NOTICES

---

## FOR USA

This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## FOR CANADA

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par l'Industrie.

## FOR HAND-HELD PRODUCT WITH RF FUNCTIONS

The 1663 unit (FCC ID: Q3N-1663) complies with FCC radiation exposure limits set forth for uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. The unit has very low level of RF energy that it is deemed to comply without testing of specific absorption ratio (SAR).

The 3610 unit (FCC ID: Q3N-3610) complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & body. It only operated in hand-held used. If only transfer data to the host cordless, please keep the minimum distance 20 cm between machine & body.

## SAFETY PRECAUTIONS

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

- ▶ The use of any batteries or charging devices, which are not originally sold or manufactured by CipherLab, will void your warranty and may cause damage to human body or the product itself.
- ▶ DO NOT disassemble, incinerate or short circuit the battery.
- ▶ DO NOT expose the scanner or the battery to any flammable sources.
- ▶ For green-environment issue, it's important that batteries should be recycled in a proper way.
- ▶ Under no circumstances, internal components are self-serviceable.

## CARE & MAINTENANCE

- ▶ Use a clean cloth to wipe dust off the scanning window and the body of the scanner as well as the charging device. DO NOT use/mix any bleach or cleaner.
- ▶ If you want to put away the scanner for a period of time, download the collected data to a host computer when in the memory mode, and then take out the battery. Store the scanner and battery separately.
- ▶ When the scanner resumes its work, make sure the battery is fully charged before use.
- ▶ If you shall find the scanner malfunctioning, write down the specific scenario and consult your local sales representative.

# RELEASE NOTES

---

| Version | Date          | Notes   |
|---------|---------------|---|
| 1.01    | Apr. 17, 2013 | New: <b>2.1.10 – Transmit Speed</b> setup barcodes (BT HID)<br>Modification: <b>Specifications</b> – Scan Rate (scans/second) added |
| 1.00    | Dec. 25, 2012 | Initial release   |



# CONTENTS

---

- IMPORTANT NOTICES ..... - 3 -**
  - For USA ..... - 3 -
  - For Canada ..... - 3 -
  - For Hand-held Product with RF Functions ..... - 4 -
  - Safety Precautions ..... - 4 -
  - Care & Maintenance ..... - 4 -
  
- RELEASE NOTES ..... - 5 -**
  
- INTRODUCTION ..... 1**
  - Get Familiarized with 1663 and 3610 ..... 2
    - Install the Battery into 1663 ..... 2
    - Charge the Battery ..... 3
    - Charge the Battery via Charger ..... 4
    - Use 3610 ..... 5
  - Inside the Package ..... 6
  - Product Highlights ..... 6
  - Symbologies Supported ..... 7
  
- QUICK START ..... 9**
  - Enter Configuration Mode ..... 11
  - Exit Configuration Mode ..... 11
  - Default Settings ..... 12
    - Save User Settings as Defaults ..... 12
    - Restore User Defaults ..... 12
    - Restore System Defaults ..... 12
  - Read a Setup Barcode ..... 13
    - Configure Parameters ..... 13
    - List the Current Settings ..... 17
  - Create One-Scan Setup Barcodes ..... 19
  
- UNDERSTANDING THE BARCODE SCANNER ..... 21**
  - 1.1 Battery ..... 21
    - 1.1.1 Power Level ..... 22
    - 1.1.2 How to Operate the Scanner ..... 22
    - 1.1.3 Auto Power Off & Power-Saving ..... 23
  - 1.2 Memory ..... 26
    - 1.2.1 Transmit Buffer ..... 26
    - 1.2.2 Memory Mode ..... 26
    - 1.2.3 Free Memory ..... 28
  - 1.3 LED Indicator ..... 29
    - 1.3.1 Good Read LED ..... 30
    - 1.3.2 Good Read LED Duration ..... 30
  - 1.4 Beeper ..... 31

|  |           |
|--|-----------|
| 1.4.1 Beeper Volume .....  | 32        |
| 1.4.2 Good Read Beep .....   | 33        |
| 1.4.3 Low Battery Alarm .....                                      | 34        |
| 1.5 Vibrator.....  | 34        |
| 1.5.1 Good Read Vibrator.....                                      | 34        |
| 1.5.2 Good Read Vibrator Duration .....                            | 34        |
| 1.6 Send “NR” to Host .....  | 35        |
| 1.7 Scan Modes .....   | 36        |
| 1.7.1 Continuous Mode .....  | 37        |
| 1.7.2 Test Mode.....   | 37        |
| 1.7.3 Laser Mode.....  | 38        |
| 1.7.4 Auto Off Mode.....   | 38        |
| 1.7.5 Auto Power Off Mode .....                                    | 38        |
| 1.7.6 Alternate Mode.....  | 39        |
| 1.7.7 Aiming Mode.....   | 39        |
| 1.7.8 Multi-Barcode Mode.....                                      | 40        |
| 1.8 Scanning Timeout.....  | 41        |
| 1.9 Delay between Re-read .....                                    | 42        |
| 1.10 Read Redundancy for All Symbologies .....                     | 43        |
| 1.11 Addon Security for UPC/EAN Barcodes .....                     | 44        |
| 1.12 Negative Barcodes .....                                       | 44        |
| 1.13 Effective Decoding Area.....                                  | 45        |
| 1.13.1 Positioning Window.....                                     | 45        |
| 1.13.2 Adjusting Window.....                                       | 46        |
| 1.14 Use Direct USB Cable.....                                     | 47        |
| 1.14.1 Direct USB Interface .....                                  | 47        |
| 1.14.2 Disable Direct USB Interface.....                           | 47        |
| 1.15 Pager Beep Duration.....                                      | 48        |
| 1.16 Time Stamp.....   | 49        |
| 1.16.1 DATE AND TIME SETTINGS .....                                | 49        |
| 1.16.2 SEPARATOR FOR DATE AND TIME .....                           | 51        |
| 1.16.3 DATE FORMAT .....   | 52        |
| 1.17 Hardware Reset.....   | 53        |
| 1.17.1 Restore System Defaults.....                                | 53        |
| 1.17.2 Reset Connection.....                                       | 53        |
| <b>SELECTING OUTPUT INTERFACE .....</b>                            | <b>55</b> |
| 2.1 <i>Bluetooth</i> ® HID.....                                    | 56        |
| 2.1.1 Activate <i>Bluetooth</i> ® HID & Select Keyboard Type ..... | 57        |
| 2.1.2 Reset Connection .....                                       | 58        |
| 2.1.3 Keyboard Settings.....                                       | 59        |
| 2.1.4 Inter-Character Delay .....                                  | 64        |
| 2.1.5 Inter-Function Delay .....                                   | 65        |
| 2.1.6 HID Character Transmit Mode.....                             | 65        |
| 2.1.7 Special Keyboard Feature .....                               | 66        |
| 2.1.8 Keypad Support for iPhone/iPad .....                         | 66        |
| 2.1.9 Simple Pairing for iPhone/iPad .....                         | 67        |
| 2.1.10 Transmit Speed.....   | 67        |
| 2.2 <i>Bluetooth</i> ® SPP Slave.....                              | 68        |



|   |            |
|---|------------|
| 2.2.1 Activate <i>Bluetooth</i> ® SPP Slave Mode .....  | 68         |
| 2.2.2 Inter-Function Delay .....                        | 68         |
| 2.2.3 ACK/NAK Timeout .....                             | 69         |
| 2.3 <i>Bluetooth</i> ® SPP Master .....                 | 70         |
| 2.3.1 Activate <i>Bluetooth</i> ® SPP Master Mode ..... | 70         |
| 2.3.2 Inter-Function Delay .....                        | 71         |
| 2.3.3 ACK/NAK Timeout .....                             | 72         |
| 2.3.4 Switch between Master/Slave Mode .....            | 72         |
| 2.4 USB HID via 3610 .....                              | 73         |
| 2.4.1 Activate USB HID & Select Keyboard Type .....     | 74         |
| 2.4.2 Keyboard Settings .....                           | 75         |
| 2.4.3 Inter-Character Delay .....                       | 81         |
| 2.4.4 Inter-Function Delay .....                        | 82         |
| 2.4.5 HID Character Transmit Mode .....                 | 82         |
| 2.4.6 Special Keyboard Feature .....                    | 82         |
| 2.5 USB Virtual COM via 3610 .....                      | 83         |
| 2.5.1 Activate USB Virtual COM .....                    | 83         |
| 2.5.2 Inter-Function Delay .....                        | 83         |
| 2.5.3 ACK/NAK Timeout .....                             | 84         |
| 2.6 Direct USB HID .....                                | 85         |
| 2.6.1 Activate USB HID & Select Keyboard Type .....     | 86         |
| 2.6.2 Keyboard Settings .....                           | 87         |
| 2.6.3 Inter-Character Delay .....                       | 93         |
| 2.6.4 Inter-Function Delay .....                        | 94         |
| 2.6.5 HID Character Transmit Mode .....                 | 94         |
| 2.6.6 Special Keyboard Feature .....                    | 94         |
| 2.7 Direct USB Virtual COM .....                        | 95         |
| 2.7.1 Activate USB Virtual COM .....                    | 95         |
| 2.7.2 Activate USB Virtual COM_CDC .....                | 95         |
| 2.7.3 Inter-Function Delay .....                        | 95         |
| 2.7.3 ACK/NAK Timeout .....                             | 96         |
| <b>SET UP A WPAN CONNECTION .....</b>                   | <b>97</b>  |
| 3.1 Connecting via 3610 .....                           | 98         |
| 3.1.1 Connect to 3610 .....                             | 98         |
| 3.1.2 Change Interface .....                            | 99         |
| 3.2 Connecting via <i>Bluetooth</i> ® Dongle .....      | 100        |
| 3.2.1 Change Interface .....                            | 100        |
| 3.2.2 Configure Related Settings .....                  | 101        |
| 3.2.3 Connect to Dongle .....                           | 104        |
| <b>CHANGE SYMBOLOGY SETTINGS .....</b>                  | <b>111</b> |
| 4.1 Codabar .....                                       | 112        |
| 4.1.1 Security Level .....                              | 112        |
| 4.1.2 Start/Stop Characters Selection .....             | 112        |
| 4.1.3 Start/Stop Transmission .....                     | 113        |
| 4.1.4 CLSI Conversion .....                             | 113        |
| 4.2 Code 25 – Industrial 25 .....                       | 114        |
| 4.2.1 Start/Stop Pattern Selection .....                | 114        |
| 4.2.2 Verify Check Digit .....                          | 115        |
| 4.2.3 Transmit Check Digit .....                        | 115        |

---

|  |     |
|--|-----|
| 4.2.4 Code Length Qualification .....            | 116 |
| 4.3 Code 25 - Interleaved 25 .....               | 117 |
| 4.3.1 Start/Stop Pattern Selection .....         | 117 |
| 4.3.2 Verify Check Digit .....                   | 118 |
| 4.3.3 Transmit Check Digit.....                  | 118 |
| 4.3.4 Code Length Qualification .....            | 119 |
| 4.4 Code 25 - Matrix 25 .....                    | 120 |
| 4.4.1 Start/Stop Pattern Selection .....         | 120 |
| 4.4.2 Verify Check Digit .....                   | 121 |
| 4.4.3 Transmit Check Digit.....                  | 121 |
| 4.4.4 Code Length Qualification .....            | 122 |
| 4.5 Code 39.....                                 | 123 |
| 4.5.1 Start/Stop Transmission.....               | 123 |
| 4.5.2 Verify Check Digit .....                   | 123 |
| 4.5.3 Transmit Check Digit.....                  | 124 |
| 4.5.4 Standard/Full ASCII Code 39 .....          | 124 |
| 4.5.5 Security Level .....                       | 124 |
| 4.6 Code 93.....                                 | 125 |
| 4.7 Code 128 .....                               | 125 |
| 4.7.1 Security Level .....                       | 125 |
| 4.8 EAN-8.....                                   | 126 |
| 4.8.1 Convert to EAN-13.....                     | 127 |
| 4.8.2 Transmit Check Digit.....                  | 127 |
| 4.9 EAN-13 .....                                 | 128 |
| 4.9.1 ISBN Conversion.....                       | 129 |
| 4.9.2 ISSN Conversion.....                       | 129 |
| 4.9.3 Transmit Check Digit.....                  | 129 |
| 4.9.4 Security Level .....                       | 130 |
| 4.10 GS1-128 (EAN-128) .....                     | 131 |
| 4.10.1 Code ID Transmission.....                 | 131 |
| 4.10.2 Field Separator (GS Character).....       | 131 |
| 4.11 ISBT 128 .....                              | 132 |
| 4.12 MSI .....                                   | 133 |
| 4.12.1 Verify Check Digit.....                   | 133 |
| 4.12.2 Transmit Check Digit .....                | 133 |
| 4.12.3 Code Length Qualification .....           | 134 |
| 4.13 French Pharmacode.....                      | 135 |
| 4.13.1 Transmit Check Digit .....                | 135 |
| 4.14 Italian Pharmacode .....                    | 136 |
| 4.14.1 Transmit Check Digit .....                | 136 |
| 4.15 Plessey .....                               | 137 |
| 4.15.1 Convert to UK Plessey .....               | 137 |
| 4.15.2 Transmit Check Digit .....                | 137 |
| 4.16 GS1 DataBar (RSS Family) .....              | 138 |
| 4.16.1 Code ID Selection .....                   | 138 |
| 4.16.2 GS1 DataBar Omnidirectional (RSS-14)..... | 139 |
| 4.16.3 GS1 DataBar Expanded (RSS Expanded).....  | 141 |
| 4.16.4 GS1 DataBar Limited (RSS Limited).....    | 142 |
| 4.17 Telepen .....                               | 143 |

|   |            |
|---|------------|
| 4.17.1 Telepen Output – Full ASCII/Numeric .....                  | 143        |
| 4.18 UPC-A.....   | 144        |
| 4.18.1 Convert to EAN-13 .....                                    | 145        |
| 4.18.2 System Number Transmission .....                           | 145        |
| 4.18.3 Transmit Check Digit .....                                 | 145        |
| 4.19 UPC-E.....   | 146        |
| 4.19.1 System Number Selection.....                               | 147        |
| 4.19.2 Convert to UPC-A.....                                      | 147        |
| 4.19.3 System Number Transmission .....                           | 148        |
| 4.19.4 Transmit Check Digit .....                                 | 148        |
| <b>DEFINING OUTPUT FORMAT .....</b>                               | <b>149</b> |
| 5.1 Letter Case.....  | 149        |
| 5.2 Character Substitution .....                                  | 150        |
| 5.2.1 Select a Set for Character Substituion .....                | 151        |
| 5.2.2 Symbolologies for Character Substitution (All 3 Sets) ..... | 152        |
| 5.3 Prefix/Suffix Code.....                                       | 158        |
| 5.4 Code ID.....  | 159        |
| 5.4.1 Select Pre-defined Code ID.....                             | 159        |
| 5.4.2 Change Code ID.....   | 161        |
| 5.4.3 Clear Code ID Settings.....                                 | 162        |
| 5.5 Length Code.....  | 163        |
| 5.6 Multi-Barcode Editor.....                                     | 167        |
| 5.6.1 Edit a Concatenation of Barcodes .....                      | 168        |
| 5.6.2 Activate the Concatenation of Barcodes .....                | 169        |
| 5.7 Removal of Special Character .....                            | 170        |
| <b>APPLYING FORMATS FOR DATA EDITING.....</b>                     | <b>171</b> |
| 6.1 Activating Editing Formats .....                              | 172        |
| 6.1.1 Activate Editing Formats.....                               | 172        |
| 6.1.2 Exclusive Data Editing.....                                 | 173        |
| 6.2 How to Configure Editing Formats.....                         | 174        |
| 6.2.1 Select Format to Configure.....                             | 175        |
| 6.2.2 Restore Default Format .....                                | 176        |
| 6.3 Configure Format – Define Data Criteria .....                 | 177        |
| 6.3.1 Applicable Code Type.....                                   | 177        |
| 6.3.2 Data Length .....   | 184        |
| 6.3.3 Matching String & Location .....                            | 185        |
| 6.4 Configure Format – Define Data Field .....                    | 186        |
| 6.4.1 Start Position .....  | 186        |
| 6.4.2 Field Adjustment .....                                      | 186        |
| 6.4.3 Total Number of Fields.....                                 | 187        |
| 6.4.4 Field Settings.....   | 188        |
| 6.4.5 Pause Field Setting .....                                   | 194        |
| 6.5 Configure Format – Define Transmission Sequence .....         | 195        |
| 6.6 Programming Examples .....                                    | 197        |
| 6.6.1 Example I .....   | 197        |
| 6.6.2 Example II .....  | 198        |

|   |            |
|---|------------|
| <b>SPECIFICATIONS .....</b>                   | <b>199</b> |
| <b>FIRMWARE UPGRADE.....</b>                  | <b>201</b> |
| How to Upgrade 1663 Firmware .....            | 201        |
| Using 3610.....                               | 201        |
| Use Direct USB Virtual COM .....              | 203        |
| Use <i>Bluetooth</i> ® Dongle .....           | 204        |
| How to Upgrade 3610 Firmware .....            | 206        |
| Upgrade 3610 CPU Firmware .....               | 206        |
| Upgrade 3610 USB Bridge Firmware.....         | 207        |
| <b>HOST SERIAL COMMANDS .....</b>             | <b>209</b> |
| Serial Commands .....                         | 209        |
| Example .....                                 | 210        |
| 3610 Setup Barcodes & Serial Commands .....   | 211        |
| 3610 Serial Command Table .....               | 212        |
| Example .....                                 | 214        |
| <b>KEYBOARD WEDGE TABLE .....</b>             | <b>215</b> |
| Key Type & Status .....                       | 216        |
| Key Type.....                                 | 216        |
| Key Status .....                              | 216        |
| Example .....                                 | 217        |
| <b>NUMERAL SYSTEMS.....</b>                   | <b>219</b> |
| Decimal System.....                           | 219        |
| Hexadecimal System.....                       | 220        |
| ASCII Table.....                              | 221        |
| Entering PIN Code for Authentication .....    | 222        |
| Use Preset PIN.....                           | 222        |
| Disable Authentication or Use Random PIN..... | 223        |

# INTRODUCTION

---

CipherLab's small-form-factor 1600 Series Barcode Scanners are specifically designed to answer the mobile demands. The palm-sized scanners are designed to help accelerate productivity while lowering the total cost of ownership. Intensive data collection jobs are made easier with fast, accurate barcode scanning in various working environments, especially in small businesses. Integrated with short-distance cordless technology, the small-form-factor scanners are ideal for carrying in pocket, and thus give workers tether-free mobility anytime anywhere and get job done more efficiently. This line of scanners deliver data over a cordless personal network at a range of up to 10 meters and a prolonged battery life to keep business running.

Owing to the compact design, extremely low power consumption, and powerful decoding capability, the 1600 Series Barcode Scanners are the best choice for the following applications –

- ▶ Receiving in Retail
- ▶ Product labeling & Tracking
- ▶ Shelf Product Replenishment
- ▶ Mobile Point of Sale (POS)
- ▶ Mobile Inventory Management
- ▶ Order Picking & Staging
- ▶ Work-In-Process Tracking
- ▶ Material Flow Control
- ▶ Transportation & Distribution
- ▶ Warehousing
- ▶ Asset Management

This manual contains information on operating the scanner and using its features. We recommend you keep one copy of the manual at hand for quick reference or maintenance purposes. To avoid any improper disposal or operation, please read the manual thoroughly before use.


Thank you for choosing CipherLab products!



## GET FAMILIARIZED WITH 1663 AND 3610

### INSTALL THE BATTERY INTO 1663

- 1) Hold the scanner face down in one hand, press the battery cover, and slide the battery cover.
- 2) Remove the battery cover.
- 3) Push battery lock to unlocked position.

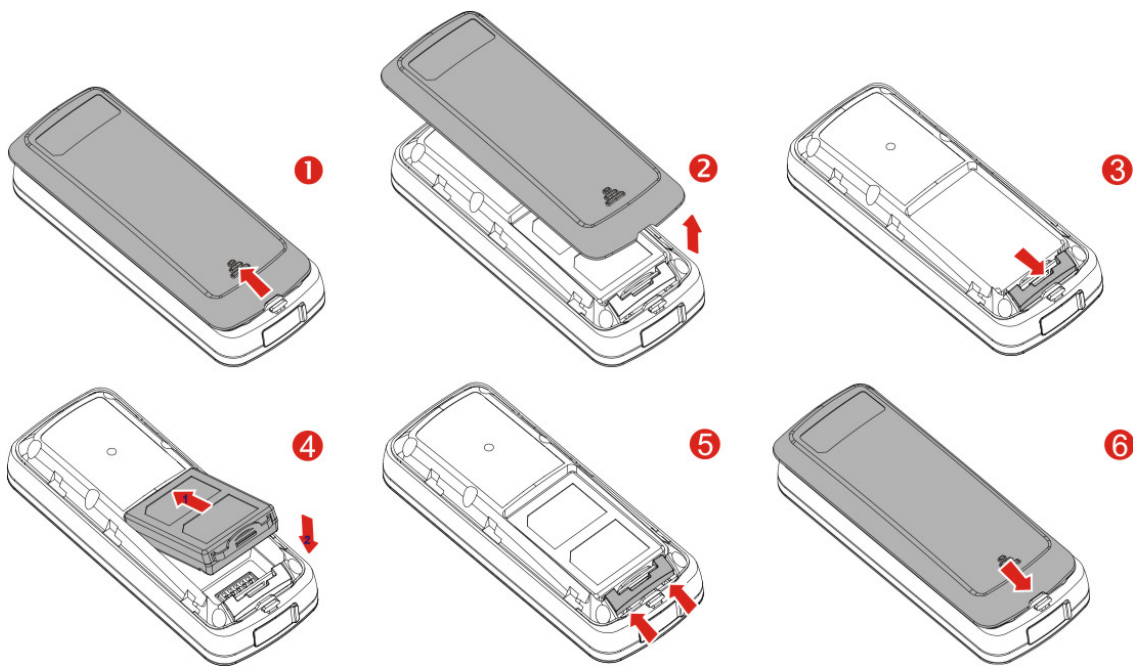

- 4) Insert the battery into the battery compartment.
  - ▶ Install the supplied 3.7V/850mAh Li-ion battery into the battery compartment.
- 5) Push battery lock to lock the battery firmly.
- 6) Replace the battery cover.
- 7) Hold down the [Power/Delete] key for about 2 seconds to turn on the scanner.  
The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off.





Note: (1) To turn off the scanner, press the [Power/Delete] key for 2 seconds. The scanner will respond with two short beeps (high tone) and the LED will become solid red. Release the key. Otherwise, let the scanner turn off automatically in specific circumstances. Refer to settings of "[Auto Power Off](#)".  
(2) For shipping and storage purposes, remove the battery from the scanner. This will keep the batteries in good condition for future use.

## CHARGE THE BATTERY

The battery may not be fully charged for shipment. For initial use, it is recommended to fully charge the battery before using the scanner. You can use the Direct USB cable to connect the scanner to PC for charging. It takes approximately 4 hours to fully charge the battery. Refer to [1.14 Use Direct USB Cable](#).

Note: Battery charging stops when the temperature drops below 0°C or exceeds 40°C. It is recommended to charge the battery at room temperature (18°C to 25°C) for optimal performance.

- 1) Install the battery to 1663.
- 2) Connect 1663 to host computer or notebook via the USB cable.
- 3) The scanner LED will flash red during charging.

When the charging is complete, the LED will turn off.

When charging errors occur, the LED will turn solid red.




## CHARGE THE BATTERY VIA CHARGER

The battery charger is provided for charging the battery outside of the scanner. You may purchase the charger separately. It takes approximately 3 hours to charge the battery to full.

Note: Battery charging stops when the temperature drops below 0°C or exceeds 40°C. It is recommended to charge the battery at room temperature (18°C to 25°C) for optimal performance.

- 1) Insert the battery.
- 2) Connect the power supply cord to the charger.
- 3) Connect the other end of the power cord to a suitable power outlet.

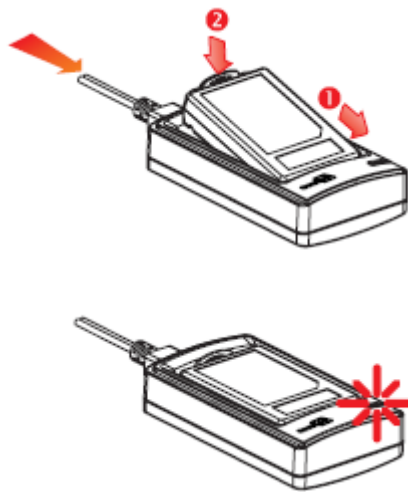


| Status LED |              | Meaning                                  |
|------------|--------------|--|
| Red, solid | ---          | Charger power ON (LED on for 0.5 second) |
| Red, solid | ---          | Charging battery                         |
| ---        | Green, solid | Charging done                            |
| ---        | ---          | Power or battery not ready               |





## USE 3610

The CipherLab Dongle (3610) is specifically designed for the scanner to communicate with a host computer cordless. The connection between the scanners and 3610 is made easy and reliable. Refer to [3.1.1 Connect to 3610](#).

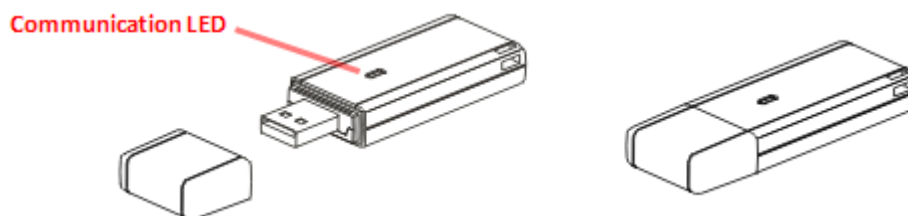

There is one LED indicator provided for communications status.

| Communication LED |                | Meaning  |
|-------------------|----------------|--|
| ---               | Blue, solid    | Initialize   |
| Red, solid        | ---            | Failed to establish a USB connection   |
| Red, solid        | Blue, flashing | Serial command mode with USB Virtual COM: wait 3 seconds for starting a serial command                       |
| Red, flashing     | Blue, flashing | Serial command mode with USB HID: wait 3 seconds for pressing [Num Lock] or [Caps Lock] 5 times via keyboard |
| ---               | Blue, flashing | Wait for connection request from the scanner (Slow flash at 0.5 Hz)  |
| ---               | Blue, flashing | Connected with the scanner (Fast flash at 1 Hz)  |
| Red, solid        | Blue, flashing | Failed to send data to host via USB Virtual COM (Fast flash at 1 Hz)   |
| Red, flashing     | ---            | Enter Download Mode  |



## INSIDE THE PACKAGE

The items included in the package may be different, depending on your order. Save the box and packaging material for future use in case you need to store or ship the scanner.

- ▶ 1663 Scanner
- ▶ CipherLab Dongle (3610) Optional
- ▶ Rechargeable Li-ion Battery Pack
- ▶ Direct USB Cable
- ▶ Wristband
- ▶ Setup Cards
- ▶ Quick Start Guide
- ▶ Product CD

---

Note: The CD-ROM includes this manual and Windows-based *ScanMaster* software for configuration, as well as the USB Virtual COM driver.

---

## PRODUCT HIGHLIGHTS

- ▶ Small-form-factor and built tough to survive drop test.
- ▶ Extremely low power consumption.
- ▶ Firmware upgradeable.
- ▶ Support most popular barcode symbologies, including GS1-128 (EAN-128), GS1 DataBar (RSS) etc.
- ▶ Support Time Stamp and Paging functions.
- ▶ Support negative barcodes.
- ▶ Support different scan modes, including Aiming Mode and Multi-Barcode Mode.
- ▶ LED indicator, beeper and vibrator for status verification or warning.
- ▶ Beeping tone and duration programmable for Good Read.
- ▶ 4MB flash memory for Memory Mode operation, storing over 240,000 scans based on EAN-13 barcodes.
- ▶ Provides up to 2 KB SDRAM for reserve buffer while getting out of range over a wireless personal area network (WPAN), storing up to 128 scans based on EAN-13 barcodes.
- ▶ Capable of transmitting scanned data, emulating a serial cable (*Bluetooth*<sup>®</sup> SPP) or as keyboard input (*Bluetooth*<sup>®</sup> HID), to a notebook computer or PDA with *Bluetooth*<sup>®</sup> wireless technology.
- ▶ Programmable parameters including data output format, editing format, symbologies.
- ▶ Easy configuration through ScanMaster.
- ▶ Easy connection through CipherConnect, readily available via online marketplace for mobile devices running on Android 2.x, BlackBerry 5.x, or Windows Mobile 6.x.



## SYMBOLOGIES SUPPORTED

Most of the popular barcode symbologies are supported, as listed below. Each can be individually enabled or disabled. The scanner will automatically discriminate and recognize all the symbologies that are enabled. Refer to [Chapter 4 Change Symbology Settings](#) for details of each symbology.

| Symbologies Supported: Enable/Disable |                        | Default |          |
|---------------------------------------|------------------------|---------|----------|
| <b>Codabar</b>                        |                        | Enabled |          |
| <b>Code 93</b>                        |                        | Enabled |          |
| <b>MSI</b>                            |                        |         | Disabled |
| <b>Plessey</b>                        |                        |         | Disabled |
| <b>Telepen</b>                        |                        |         | Disabled |
| <b>Code 128</b>                       | Code 128               | Enabled |          |
|                                       | GS1-128 (EAN-128)      | Enabled |          |
|                                       | ISBT 128               | Enabled |          |
| <b>Code 2 of 5</b>                    | Industrial 25          | Enabled |          |
|                                       | Interleaved 25         | Enabled |          |
|                                       | Matrix 25              |         | Disabled |
| <b>Code 3 of 9</b>                    | Code 39                | Enabled |          |
|                                       | Italian Pharmacode     |         | Disabled |
|                                       | French Pharmacode      |         | Disabled |
| <b>EAN/UPC</b>                        | EAN-8                  | Enabled |          |
|                                       | EAN-8 Addon 2          |         | Disabled |
|                                       | EAN-8 Addon 5          |         | Disabled |
|                                       | EAN-13                 | Enabled |          |
|                                       | EAN-13 & UPC-A Addon 2 |         | Disabled |
|                                       | EAN-13 & UPC-A Addon 5 |         | Disabled |
|                                       | ISBN                   |         | Disabled |
|                                       | UPC-E0                 | Enabled |          |
|                                       | UPC-E1                 |         | Disabled |
|                                       | UPC-E Addon 2          |         | Disabled |
|                                       | UPC-E Addon 5          |         | Disabled |
| UPC-A                                 | Enabled                |         |          |



|                          |                                      |  |          |
|--------------------------|--------------------------------------|--|----------|
| <b>GS1 DataBar (RSS)</b> | GS1 DataBar Omnidirectional (RSS-14) |  | Disabled |
|                          | GS1 DataBar Truncated                |  | Disabled |
|                          | GS1 DataBar Stacked                  |  | Disabled |
|                          | GS1 DataBar Stacked Omnidirectional  |  | Disabled |
|                          | GS1 DataBar Limited (RSS Limited)    |  | Disabled |
|                          | GS1 DataBar Expanded (RSS Expanded)  |  | Disabled |
|                          | GS1 DataBar Expanded Stacked         |  | Disabled |



# QUICK START

---

The configuration of the scanner can be done by reading the setup barcodes contained in this manual or via the *ScanMaster* software.

This section describes the procedure of configuring the scanner by reading the setup barcodes and provides some examples for demonstration.

## Configuration Mode

---

- 1) Hold down the [Power/Delete] key for 2 seconds to turn on the scanner. It will respond with a long beep and its LED will come on-off.
- 2) Read the "Enter Setup" barcode. It will respond with six beeps and its LED indicator will become flashing red after reading the barcode.
- 3) Read more setup barcodes... Most of the setup barcodes are normal, and the scanner will respond with two beeps (low-high tone). For special setup barcodes, it requires reading more than one setup barcode to complete the setting.
- 4) Read the "Update" or "Abort" barcode. It will respond with six beeps and its LED indicator will become flashing red after reading the barcode.
- 5) The scanner will restart automatically upon reading the "Update" or "Abort" barcode. It will respond with a long beep and its LED will come on-off.




Note: Refer to [Appendix II Host Serial Commands](#) for how to configure the 3610 dongle by having the scanner read 3610-related setup barcodes or using serial commands.

---



### Working Mode

Upon powering up, the scanner will try to establish a connection with 3610 or a computer with *Bluetooth*<sup>®</sup> wireless technology. Refer to [Chapter 3 - Set up a WPAN Connection](#) for details. The connection between the scanners and 3610 is made easy and reliable. Now, it also supports *Bluetooth*<sup>®</sup> SPP Master Mode as an alternative. Refer to [2.3 Bluetooth<sup>®</sup> SPP Master](#).

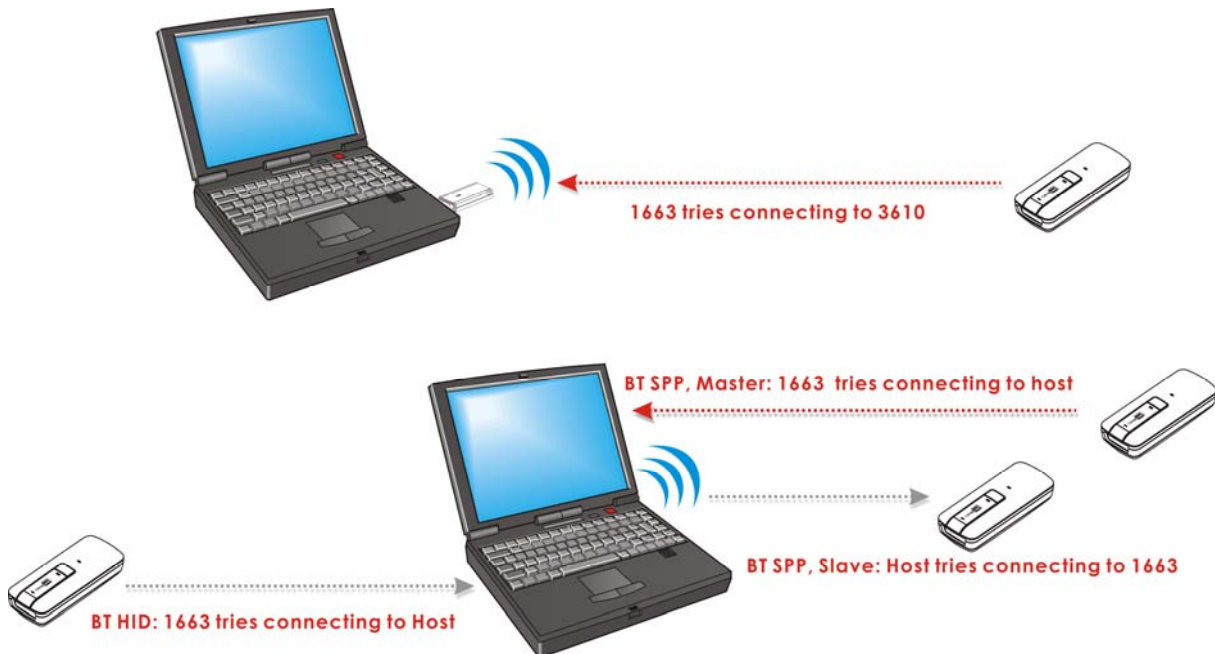

---

Note: If USB Virtual COM or *Bluetooth*<sup>®</sup> SPP is selected for output interface, the host can directly send serial commands to configure the scanner. For example, run HyperTerminal.exe and type the 6-digit command located under each setup barcode. Refer to [Appendix II Host Serial Commands](#).

---



## ENTER CONFIGURATION MODE

For the scanner to enter the configuration mode, read the "Enter Setup" barcode, which can be located at the bottom of almost every even page of this manual.

- ▶ The scanner will respond with six beeps and its LED indicator will become flashing red after reading the barcode.

Enter Setup



For configuring scanner parameters, see "Read a Setup Barcode" below.

## EXIT CONFIGURATION MODE

For the scanner to save settings and exit the configuration mode, read the "Update" barcode, which can be located at the bottom of almost every odd page of this manual. Exit the configuration mode without saving any changes; read the "Abort" barcode instead.

- ▶ Just like reading the "Enter Setup" barcode, the scanner will respond with six beeps and its LED indicator will become flashing red after reading the barcode. Wait for a few seconds for the scanner to restart itself.

Update



109999

Abort



109998



## DEFAULT SETTINGS

### SAVE USER SETTINGS AS DEFAULTS

For the scanner to keep the customized settings as user defaults, you must read the “Save as User Defaults” barcode. This is a normal setup barcode, and the scanner will respond with two beeps (low-high tone).

- ▶ After reading the “Update” barcode, the current settings will be saved as user defaults.

Save as User  
Defaults



### RESTORE USER DEFAULTS

For the scanner to restore the user defaults, which you have saved earlier, you must read the “Restore User Defaults” barcode. This is a normal setup barcode, and the scanner will respond with two beeps (low-high tone).

- ▶ After reading the “Update” barcode, all the parameters of the scanner will return to their customized values.

Restore User  
Defaults



### RESTORE SYSTEM DEFAULTS

For the scanner to restore the factory defaults, read the “Restore System Defaults” barcode. This is a normal setup barcode, and the scanner will respond with two beeps (low-high tone). After reading the “Update” barcode, all the parameters of the scanner will return to their default values. The current connection record will be cleared as well. Refer to [1.17.1 Restore System Defaults](#) for the key combination used to restore defaults during operation.

For 3610 to restore factory defaults, refer to [3610 Setup Barcodes](#) & Serial Commands.

Restore System  
Defaults



Note: The system default value (if there is one) for each setting is indicated by an asterisk “\*”.





## READ A SETUP BARCODE


### CONFIGURE PARAMETERS

For most of the scanner parameters, only one read is required to set them to new values. The scanner will respond with two beeps (low-high tone) when each parameter is set successfully. Refer to [Create One-Scan Setup Barcodes](#).






But for a number of special parameters, multiple reads are required to complete the setting. In this case, the scanner will respond with a short beep to indicate it needs to read more setup barcodes. These special parameters may require reading one or more setup barcodes, such as:

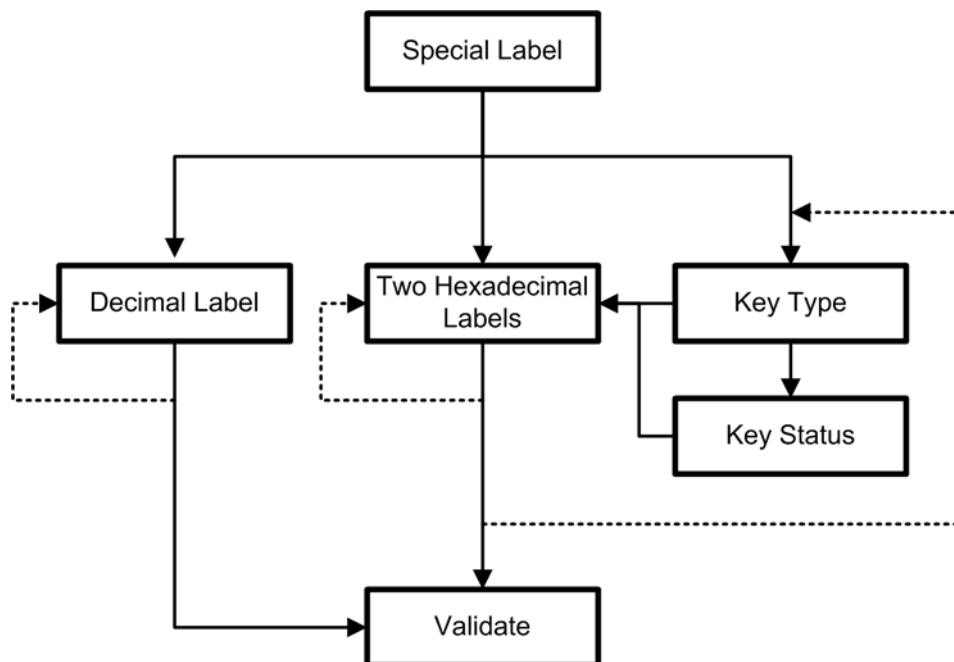- ▶ Numeric barcodes, say, for keyboard type, inter-character delay, length qualification
- ▶ Hexadecimal barcodes, say, for character strings as prefix, suffix, etc.
- ▶ When "Bluetooth® HID" or "USB HID" is configured for interface, Key Type and Key Status will then become applicable. Decide whether to change key status when "Normal Key" is selected for Key Type.

To complete the configuration of these special parameters, it requires reading the "Validate" barcode, and the scanner will respond with two beeps (low-high tone) to indicate the input values are validated.











The example below shows how to save your settings as "User Default" so that you may restore user defaults at a later time:

| Steps   | Action   | LED/Beeper Response when Successful  |
|---|--|--|
| 1)  | Power on the scanner...                          | The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off.            |
| 2)  | Enter the Configuration Mode...                  | The scanner will respond with six beeps (high-low tone repeats three times), and its LED indicator will be flashing red. |
| 3)  | Read a Setup barcode...<br>For example,          | The scanner will respond with two beeps (low-high tone) if reading a normal setup barcode.                               |
| <p style="text-align: center;">Enter Setup</p>  <p style="text-align: center;">*Enable Industrial 25</p>  <p style="text-align: center;">100307</p> <p style="text-align: center;">Save as User Default</p>  <p style="text-align: center;">109986</p> |  |  |
| 4)  | Exit the Configuration Mode...                   | Same as for <i>Enter the Configuration Mode</i> .  |
| <p style="text-align: center;">Update                      Abort</p>  <p style="text-align: center;">109999                      OR                      109998</p>   |  |  |
| 5)  | The scanner will automatically restart itself... | Same as for <i>Power on the scanner</i> .  |
| *   | When any configuration error occurs...           | The scanner will respond with one long beep (low tone).  |



The example below shows how to set numeric parameters:

| Steps | Action   | LED/Beeper Response when Successful  |
|-------|--|--|
| 1)    | Power on the scanner...  | The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off.  |
| 2)    | Enter the Configuration Mode...  | The scanner will respond with six beeps (high-low tone repeats three times), and its LED indicator will become flashing red.   |
| 3)    | Read a Setup barcode...  | The scanner will respond with two beeps (low-high tone) if reading a normal setup barcode.   |
|       | For example,   |  |
|       | <div style="border: 1px solid red; padding: 2px; display: inline-block;">Normal setup barcode</div>  | <p style="text-align: center;">*Enable Interleaved 25</p> <p style="text-align: center;">Enter Setup</p>  <p style="text-align: center;">100309</p> |
|       | <div style="border: 1px solid red; padding: 2px; display: inline-block;">Normal setup barcode</div>  | <p style="text-align: center;">Enable Fixed Length(s) ...</p>  <p style="text-align: center;">100604</p>  |
|       | <div style="border: 1px solid red; padding: 2px; display: inline-block;">Special setup barcode</div>   | <p style="text-align: center;">Max. Length (*126)<br/>Or Fixed Length 1</p>  <p style="text-align: center;">100606</p>                            |
|       | <div style="border: 1px solid red; padding: 2px; display: inline-block;">Decimal barcodes</div>  | <p style="text-align: center;">1</p>  <p style="text-align: center;">103901</p>   |
|       |  | <p style="text-align: center;">5</p>  <p style="text-align: center;">103905</p>   |
|       |  | <p style="text-align: center;">Validate</p>  <p style="text-align: center;">103994</p>  |
| 4)    | Exit the Configuration Mode...   | Same as for <i>Enter the Configuration Mode</i> .  |
|       | <p style="text-align: center;">Update                      Abort</p>  <p style="text-align: center;">103999</p> <p style="text-align: center;">OR</p>  <p style="text-align: center;">103998</p> |  |
| 5)    | The scanner will automatically restart itself...   | Same as for <i>Power on the scanner</i> .  |



Update

The example below shows how to set string parameters:

| Steps | Action   | LED/Beeper Response when Successful   |
|-------|--|---|
| 1)    | Power on the scanner...  | The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off.   |
| 2)    | Enter the Configuration Mode...  | The scanner will respond with six beeps (high-low tone repeats three times), and its LED indicator will become flashing red.  |
| 3)    | Read a Setup barcode...  | The scanner will respond with one short beep if reading a special setup barcode such as "Prefix Code", indicating the setup requires reading more barcodes.   |
|       | For example,   |   |
|       | <div style="border: 1px solid red; padding: 2px; display: inline-block;">Special setup barcodes</div>  |   |
|       | <p style="text-align: center;">Configure Prefix</p>  <p style="text-align: center;">101230</p>  |   |
|       | <p style="text-align: center;">+Normal</p>  <p style="text-align: center;">109926</p>   | When "Bluetooth® HID" or "USB HID" is configured for interface, Key Type and Key Status will then become applicable. You may decide whether or not to change key status when "Normal Key" is selected for Key Type. |
|       | <p style="text-align: center;">Add Left Alt</p>  <p style="text-align: center;">109932</p>  | ▶ Refer to Appendix III   |
|       | <div style="border: 1px solid red; padding: 2px; display: inline-block;">Hexadecimal barcodes</div>  |   |
|       | <p style="text-align: center;">2</p>  <p style="text-align: center;">109902</p>   | Read the "Hexadecimal Value" barcodes for the desired character string. For example, read "2" and "B" for the scanner to prefix the character "+".  |
|       | <p style="text-align: center;">B</p>  <p style="text-align: center;">109911</p>   | ▶ Refer to Appendix IV "Hexadecimal System"   |
|       | <p style="text-align: center;">Validate</p>  <p style="text-align: center;">109994</p>  | The scanner will respond with two beeps (low-high tone) when the input values are validated.  |
| 4)    | Exit the Configuration Mode...   | Same as for <i>Enter the Configuration Mode</i> .   |
|       | <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Update</p>  <p>109999</p> </div> <div style="text-align: center;">OR</div> <div style="text-align: center;"> <p>Abort</p>  <p>109998</p> </div> </div> |   |
| 5)    | The scanner will automatically restart itself...   | Same as for <i>Power on the scanner</i> .   |



## LIST THE CURRENT SETTINGS

The current settings of all scanner parameters can be sent to the host computer for user inspection. The listing includes pages as shown below. You can select the page of interest by having the scanner read the "List Page x" barcode. The scanner will respond with two beeps (low-high tone) and send the selected page to the host immediately.

List settings regarding Firmware Version, Serial Number, Interface, Buzzer, Simple Pairing Status and Other Scanner Parameters

List Page 1



List settings regarding Prefix, Suffix, Code Type and Length Code Setting

List Page 2



List settings regarding Code ID

List Page 3



List settings regarding Readable Symbologies

List Page 4



List settings regarding Symbology Parameters (1/3)

List Page 5



List settings regarding Symbology Parameters (2/3)

List Page 6



List settings regarding Symbology Parameters (3/3)

List Page 7



List settings regarding Editing Format 1

List Page 8



List settings regarding Editing Format 2

List Page 9



List settings regarding Editing Format 3

List Page 10



List settings regarding Editing Format 4

List Page 11



109937

List settings regarding Editing Format 5

List Page 12



109938

List settings regarding Power and Time

List Page 13



109939




## CREATE ONE-SCAN SETUP BARCODES

The fact is most of the scanner parameters require only one read for setting new values. To facilitate configuring the scanner, you may create One-Scan setup barcodes for use.

The requirements of a One-Scan setup barcode are:

- ▶ a prefix of the "#@" characters
- ▶ the six digits of command parameters
- ▶ a suffix of the "#" character

For example, the scanner needs the reading of three setup barcodes for the command parameter "109952" to take effect:

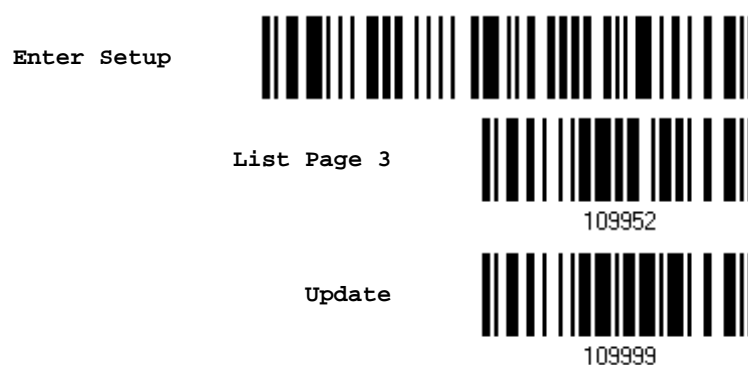

Now, it requires only one read:

One-Scan Setup Barcode for  
109952



Note: The scanner will restart automatically upon reading the One-Scan setup barcode for (1) changing the interface or (2) setting memory mode, enable or disable. It will respond with a long beep and its LED will come on-off.







## UNDERSTANDING THE BARCODE SCANNER

---

This chapter explains the features and usage of the barcode scanner.

### IN THIS CHAPTER

---

|  |    |
|--|----|
| 1.1 Battery.....                               | 21 |
| 1.2 Memory.....                                | 26 |
| 1.3 LED Indicator .....                        | 29 |
| 1.4 Beeper .....                               | 31 |
| 1.5 Vibrator.....                              | 34 |
| 1.6 Send "NR" to Host .....                    | 35 |
| 1.7 Scan Modes .....                           | 36 |
| 1.8 Scanning Timeout .....                     | 41 |
| 1.9 Delay between Re-read.....                 | 42 |
| 1.10 Read Redundancy for All Symbologies.....  | 43 |
| 1.11 Addon Security for UPC/EAN Barcodes ..... | 44 |
| 1.12 Negative Barcodes .....                   | 44 |
| 1.13 Effective Decoding Area .....             | 45 |
| 1.14 Use Direct USB Cable.....                 | 47 |
| 1.15 Pager Beep Duration.....                  | 48 |
| 1.16 Time Stamp .....                          | 49 |
| 1.17 Hardware Reset .....                      | 53 |

### 1.1 BATTERY

The scanner is battery-powered: Use a rechargeable 3.7 V/850 mAh Li-ion battery. For intensive data collection, please prepare spare battery or batteries for non-stop operation.

---

Note: (1) The rechargeable battery for 1663 may not be fully charged when shipped. We suggest charging it to full before use.  
(2) The scanner can be configured to save battery power. Refer to settings of "[Auto Power Off & Power-Saving](#)", "[Sniff Mode](#)", as well as "[Low Battery Alarm](#)".

---



### 1.1.1 POWER LEVEL

Scan the barcode below to get the battery capacity information with each increment of 20 in percentage terms.

Spare Power Level



### 1.1.2 HOW TO OPERATE THE SCANNER

#### Turn on the scanner...

---

Press the [Power/Delete] key for 2 seconds. The scanner will respond with a long beep (high tone), and its LED indicator will become solid red and go off.

#### Turn off the scanner...

---

Press the [Power/Delete] key for 2 seconds. The scanner will respond with two short beeps (high tone) and the LED will become solid red. Release the key then. Otherwise, let the scanner turn off automatically in specific circumstances.

#### Delete the last collected data when in memory mode ...

---

Press the [Power/Delete] key. The scanner will respond with two short beeps (high tone) and the LED will become solid red. Before the LED goes off (within 1 second), press the [Power/Delete] key again to confirm the deletion.



### 1.1.3 AUTO POWER OFF & POWER-SAVING

The scanner will stay active at power-on, which may be followed by a transition from full CPU speed to low CPU speed (Power-Saving) to auto shutdown (Auto Power Off).

- ▶ Power-Saving (1~254 min.; 0= Disable): By default, it is set to stand by at full-speed for 2 minutes before it enters low-speed mode. If this feature is not desired, set it to 0.
- ▶ Auto Power Off (1~254 min.; 0= Disable): By default, it is set to automatically shut down after 10 minutes. If this feature is not desired, set it to 0.

Note: 1. The Power-Saving setting will still take effect once a connection has been established successfully, via *Bluetooth*<sup>®</sup> HID or SPP.

#### Before establishing a WPAN connection successfully...

- 1) The scanner will stay active for a specified period of time (2 minutes by default) for the following scenarios. Its CPU is running at full speed, and the LED is flashing blue (On/Off ratio 0.5 s: 0.5 s).
  - (a) waiting for a connection request from the host (*Bluetooth*<sup>®</sup> SPP Slave Mode)
  - (b) trying to connect to the host (*Bluetooth*<sup>®</sup> HID or *Bluetooth*<sup>®</sup> SPP Master Mode)
  - (c) trying to connect to 3610
- 2) If it fails to connect within 2 minutes, the scanner will become inactive to save power for the remaining period of time (the specified value minus 2 minutes). Its CPU is running at low speed, and the LED is flashing red (On/Off ratio 0.3 s: 2.5 s).

Press the [Trigger] key to wake up the scanner when it becomes inactive, and the scanner will stay active again.
- 3) If it fails to connect again and again, and finally stays inactive until the specified time interval for Auto Power Off has elapsed, the scanner will automatically turn off in order to conserve battery power.

Hold down the [Power/Delete] key for 2 seconds to turn it on.

Note: For scenarios (a) and (b) in step 1, on your computer you may need to search for the scanner again.



**After establishing a WPAN connection successfully...**

---

- 1) Once a WPAN connection is established successfully, the scanner will stay active for a specified period of time (2 minutes by default) for data transmission. Its CPU is running at full speed, and the LED is flashing blue (On/Off ratio 0.02 s: 3 s).
- 2) If it is idle within 2 minutes, the scanner will become inactive to save power for the remaining period of time (the specified value minus 2 minutes). Its CPU is running at low speed, and the LED is flashing red (On/Off ratio 0.3 s: 2.5 s).

Press the [Trigger] key to wake up the scanner when it becomes inactive, and the scanner will stay active again.

- 3) If it is idle and finally stays inactive until the specified time interval for Auto Power Off has elapsed, the scanner will automatically turn off in order to conserve battery power. The three short beeps will ring out, tone descending from high to low.

Hold down the [Power/Delete] key for 2 seconds to turn it on.

- ▶ For *Bluetooth*<sup>®</sup> HID, the scanner will resume connection with the host upon powering on again, as long as the host application is running. The three short beeps will ring out, tone ascending from low to high. If the scanner fails to resume connection, it will try every 5 seconds to re-connect to the host unless the "Reset Connection" barcode has been scanned.
- ▶ For *Bluetooth*<sup>®</sup> SPP Slave Mode, the scanner must wait for the host to re-connect.
- ▶ For *Bluetooth*<sup>®</sup> SPP Master Mode, the scanner will resume connection with the host upon powering on again, as long as the host application is running. The three short beeps will ring out, tone ascending from low to high. If the scanner fails to resume connection, it will try every 5 seconds to re-connect to the host unless the "Reset Connection" or "Restore System Defaults" barcode has been scanned.
- ▶ With the use of 3610, the scanner will try re-connecting to 3610 whilst the scanner is active.



Auto Off after  
0~254 min. (\*10)



101000

- 1) Read the barcode above to specify the time interval in minutes before the scanner automatically turns off.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "5" for the scanner to automatically turn off after being idle for 15 minutes.
- 3) Read the "Validate" barcode on the same page to complete this setting.

---

Note: Auto Power Off will not take effect when the scanner is in the configuration mode.

---

Power-Saving after  
0~254 min. (\*2)



101021

- 1) Read the barcode above to specify the time interval in minutes before the scanner enters low-speed mode.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "5" for the scanner to enter low-speed mode after being idle for 5 minutes.
- 3) Read the "Validate" barcode on the same page to complete this setting.

---

Note: Power-Saving will not take effect when one of the following conditions is met:

- (1) The scanner has already established a BT HID/SPP connection.
  - (2) The scanner is in the configuration mode.
  - (3) The scan mode is set to Test, Continuous or Alternate Mode.
  - (4) The setting value of Power-Saving is greater than that of Auto Power Off.
- 



## 1.2 MEMORY

The scanned data can be sent to a host computer immediately via the WPAN connection or stored in flash memory when the scanner is set to Memory mode.

### 1.2.1 TRANSMIT BUFFER

By default, the transmit buffer is enabled and ready for use when the scanner is out of range. Upon reading a barcode successfully within range, the scanner responds with one short beep (high tone) and its LED indicator becomes solid green and goes off. However, the host computer may not receive the data immediately if the scanner is out of range. With the 2 KB transmit buffer, the scanner can ignore the transmission status and keep on reading barcodes until the buffer is full.

#### When transmit buffer is enabled...

If the scanner is out of range, it will respond with two short beeps, high-low tone, upon reading a barcode successfully.

When transmit buffer is full, the scanner will respond with one long beep (low tone) and its LED indicator will become solid red and go off. You are advised to get back into range.

#### When transmit buffer is disabled...

If the scanner is out of range, it will respond with one long beep (low tone) and its LED indicator will become solid red and go off. You are advised to get back into range.



Note: The 2 KB transmit buffer on the scanner can hold as many as 128 scans based on EAN-13 barcodes. Data will be cleared out once the scanner is turned off or running out of battery power!

### 1.2.2 MEMORY MODE

When the scanner is in memory mode, it means any real-time connection established with the host is disabled. 1663 scanner keeps 4MB flash memory for memory mode operation, which can store over 240,000 scans based on EAN-13 barcodes.



Enable



100237

\*Disable



100236

---

Warning: No real-time connection is allowed unless the memory mode is disabled.

---

### Memory Data Delay

You may set a delay between each data record while transmitting data back to the host.

\*None



100238

250 ms



100239

500 ms



100240

1 sec



100241

2 sec



100242

3 sec



100243

5 sec



100244

8 sec



100245

### Send Data

When the memory is used up, the scanner will respond with two short beeps (high-low tone) as a warning. It is advised to send data to the host immediately by having the scanner read the "Send

---



Data” barcode below.

1663 can send data via “Direct USB” interface once the computer has found the USB connection. Refer to [1.14 Use Direct USB Cable](#). Because the time-out value is set to 0 by default, connect the cable before having the scanner read the “Send Data” barcode. Otherwise, the scanner will try to temporarily resume the previous WPAN connection with the host, if there is any.

During transmission of data collected in memory mode, if the transmission fails, the scanner will flash red (On/Off ratio 0.2 s: 0.2 s) after responding with two short beeps (high-low tone) and go back to previous working mode. Press trigger or power key to stop flashing.




---

### Send Data Time-out

If a time-out value other than zero is given, it will first try to send data via “Direct USB” interface within the specified period of time. Connect the cable before it times out. When the attempt fails, it will try to temporarily resume the previous WPAN connection with the host, if there is any.

If 1663 has never been connected to the host cordless, it will not be able to send data until it is connected using the Direct USB cable!

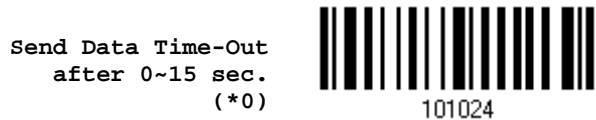

---

### Clear Data & Confirm

Even though data has been sent to the host, the flash memory is still occupied unless you erase the memory by reading two barcodes – “Clear Data” and “Confirm”.

- 1) Read the “Clear Data” barcode to clear the flash memory.
- 2) Read the “Confirm” barcode to confirm the action.



## 1.2.3 FREE MEMORY

Upon memory mode, you can scan the barcode below to show the available capacity of the flash memory in percentage terms.





### 1.3 LED INDICATOR

The triple-color LED on top of the scanner is used to provide user feedback. For example, the LED becomes solid red and goes off upon powering on or running out of transmit buffer. You may tell the difference by the beeps – you will hear a long beep of high tone when powering on the scanner, and a long beep of low tone when the transmit buffer becomes full.

| Scanner LED   |                |                 | Meaning   |
|---------------|----------------|-----------------|---|
| Red, on-off   | ---            | ---             | <ul style="list-style-type: none"> <li>▶ Power on, with one long beep (high tone, LED on for 1 second)</li> <li>▶ Data saved to buffer when transmit buffer is enabled and the scanner is out of range, with two short beeps (high-low tone)</li> <li>▶ Transmit buffer full, with one long beep (low tone)</li> <li>▶ Transmit buffer disabled, with one long beep (low tone)</li> <li>▶ Delete the last collected data in memory mode, with two short beeps (high tone, LED on for 1 second)</li> <li>▶ Memory full in memory mode, with two short beeps (high-low tone)</li> </ul> |
| Red, flashing | ---            | ---             | <ul style="list-style-type: none"> <li>▶ Flashing red (On/Off ratio 0.3 s: 2.5 s) indicates the scanner is inactive and its CPU running at low speed to save power (because no WPAN connection is established after waiting for two minutes)</li> <li>▶ Configuration Mode (On/Off ratio 0.5 s: 0.5 s)</li> </ul>   |
| ---           | ---            | Green, on-off   | Good Read, with one short beep (high tone) and beeper pitch and duration programmable   |
| ---           | Blue, flashing | ---             | <p>First, flashing blue (On/Off ratio 0.5 s: 0.5 s) for two minutes indicates the scanner is waiting for connection, and goes off if no connection is established, then flashing red (On/Off ratio 0.3 s: 2.5 s) indicates the scanner is inactive.</p> <p>It is ready for connection only while the LED is flashing blue —</p> <ul style="list-style-type: none"> <li>▶ SPP Slave: waiting host to connect</li> <li>▶ HID or SPP Master: trying to connect to host</li> <li>▶ Using 3610: trying to connect to 3610</li> </ul>   |
| ---           | Blue, flashing | ---             | Flashing blue (On/Off ratio 0.1 s: 0.1 s) indicates the scanner receives a PIN code request from host (flashing more quickly than waiting connection).  |
| ---           | Blue, flashing | ---             | Flashing blue (On/Off ratio 0.02 s: 3 s) indicates the scanner has established a WPAN connection successfully.  |
| ---           | Blue, flashing | Green, flashing | Flashing blue and green (On/Off ratio 0.1 s: 0.1 s) indicates an error occurs while entering the PIN code. Press the [Trigger] key to get ready for re-connecting.  |



### 1.3.1 GOOD READ LED

\*Enable  
Good Read LED



Disable  
Good Read LED



### 1.3.2 GOOD READ LED DURATION

By default, the Good Read LED stays on for 40 milliseconds. Specify a value, ranging from 1 to 254 in units of 10 milliseconds.

Good Read LED  
Time-out after  
0.01~2.54 sec.  
(\*40 ms)



- 1) Read the barcode above to specify the time interval before the Good Read LED goes off.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "5" for the LED to go off after 150 milliseconds.
- 3) Read the "Validate" barcode on the same page to complete this setting.



## 1.4 BEEPER

The scanner has a buzzer to provide user feedback in various operating conditions.

| Beeping   | Meaning   |
|---|---|
| One long beep, high tone                                      | Power on, with red LED on (1 second) and off quickly  |
| two short beeps, high tone                                    | <ul style="list-style-type: none"> <li>▶ Power off, with red LED on (until the key is released)</li> <li>▶ Delete the last collected data in memory mode, with red LED on (1 second) and off quickly</li> </ul>   |
| One short beep, high tone<br>▶ Programmable, default to 4 KHz | Good Read, with green LED on-off quickly  |
| Six short beeps<br>▶ High-low tone repeats three times        | <ul style="list-style-type: none"> <li>▶ Enter Configuration Mode, with red LED flashing</li> <li>▶ Exit Configuration Mode</li> </ul>  |
| Two short beeps, low-high tone                                | Setup barcode read successfully   |
| One short beep, high tone                                     | <ul style="list-style-type: none"> <li>▶ More setup barcode required</li> <li>▶ Input PIN code</li> <li>▶ Clear PIN code</li> </ul>   |
| One short beep, low tone                                      | More barcodes required to complete the "output sequence" requirements of Multi-Barcode Editor, with green LED on-off quickly (Upon completion, same as Good Read.)  |
| One long beep, low tone                                       | <ul style="list-style-type: none"> <li>▶ Transmit buffer full, with red LED on-off quickly</li> <li>▶ Transmit buffer disabled, with red LED on-off quickly</li> <li>▶ Configuration error (Wrong barcode...)</li> <li>▶ PIN code input error</li> <li>▶ Reject random PIN request</li> <li>▶ Fail to send data in memory mode</li> </ul> |
| Two short beeps, high-low tone                                | <ul style="list-style-type: none"> <li>▶ Data saved to buffer when transmit buffer is enabled and the scanner is out of range, with red LED on-off quickly</li> <li>▶ Memory Mode – Memory full, with red LED on-off quickly</li> </ul>   |
| Two short beeps, high tone                                    | Low Battery Alarm   |
| Two long beeps, high-low tone                                 | Multi-Barcode Mode – Buffer full  |
| Three short beeps, tone ascending from low to high            | <ul style="list-style-type: none"> <li>▶ WPAN connection established, with blue LED flashing</li> <li>▶ WPAN connection resumed, with blue LED flashing</li> </ul>  |
| Three short beeps, tone ascending from high to low            | WPAN connection out of range or suspended   |



### 1.4.1 BEEPER VOLUME

Mute



101009

Minimum Volume



101010

Medium Volume



101011

\*Maximum Volume



101012




1.4.2 GOOD READ BEEP

Frequency



Duration

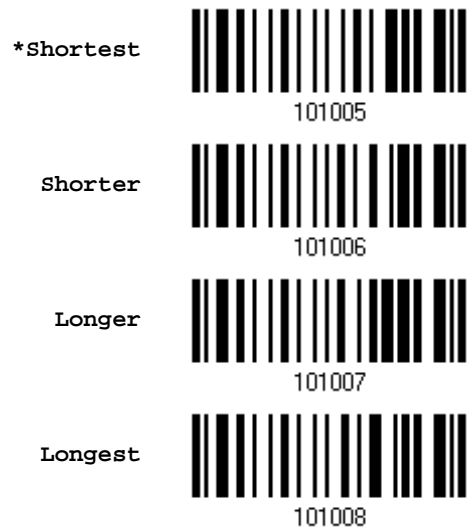


### 1.4.3 LOW BATTERY ALARM

By default, the built-in battery alarm will sound when the battery charge gets low. In order to prevent data loss, it is advised to replace the battery immediately when hearing two short beeps (high tone).




## 1.5 VIBRATOR

### 1.5.1 GOOD READ VIBRATOR

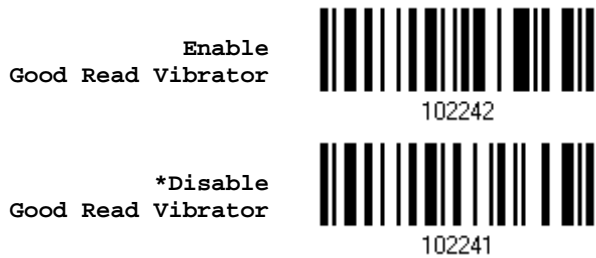

### 1.5.2 GOOD READ VIBRATOR DURATION

By default, the Good Read Vibrator stays on for 1 second. Specify a value, ranging from 1 to 254 in units of 100 milliseconds.

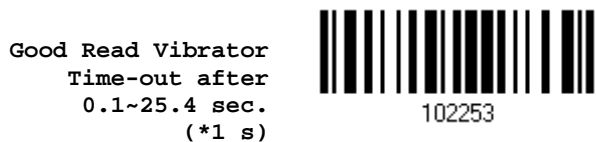

- 1) Read the barcode above to specify the time interval, in tenths of seconds before the Good Read Vibrator goes off.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "5" for the vibrator to vibrate after 1.5 seconds good read.
- 3) Read the "Validate" barcode on the same page to complete this setting.



## 1.6 SEND "NR" TO HOST

The scanner can send a "NR" string to the host to notify a No Read event.

Enable



100267

\*Disable



100266



## 1.7 SCAN MODES

Different scan modes are supported – select the scan mode that best suits the requirements of a specific application. Refer to the comparison table below.

| Scan Mode           | Start to Scan |                    |              |                     | Stop Scanning   |                    |                    |         |
|---------------------|---------------|--------------------|--------------|---------------------|-----------------|--------------------|--------------------|---------|
|                     | Always        | Press trigger once | Hold trigger | Press trigger twice | Release trigger | Press trigger once | Barcode being read | Timeout |
| Continuous mode     | ✓             |                    |              |                     |                 |                    |                    |         |
| Test mode           | ✓             |                    |              |                     |                 |                    |                    |         |
| Laser mode          |               |                    | ✓            |                     | ✓               |                    | ✓                  | ✓       |
| Auto Off mode       |               | ✓                  |              |                     |                 |                    | ✓                  | ✓       |
| Auto Power Off mode |               | ✓                  |              |                     |                 |                    |                    | ✓       |
| Alternate mode      |               | ✓                  |              |                     |                 | ✓                  |                    |         |
| Aiming mode         |               |                    |              | ✓                   |                 |                    | ✓                  | ✓       |
| Multi-Barcode mode  |               |                    | ✓            |                     | ✓               |                    |                    |         |

Note: By default, the scan mode is set to Laser mode.





### 1.7.1 CONTINUOUS MODE

The scanner is always scanning.

- ▶ After a successful decoding, the removal of barcode is required. It is not allowed to proceed to decode until the decoding delay time has passed.
- ▶ To decode the same barcode repeatedly, move away the barcode and put it back again and again for scanning.

Note: Refer to "Delay between Re-read".

Continuous Mode



#### Decoding Delay

Set the time interval between each decoding.

\*Disable



0.5 sec



1 sec



2 sec



### 1.7.2 TEST MODE

The scanner is always scanning.

- ▶ Capable of decoding the same barcode repeatedly without removing it, for testing purpose.

Test Mode



### 1.7.3 LASER MODE

The scanner will start scanning once the trigger is held down.

- ▶ The scanning won't stop until (1) a barcode is decoded, (2) the pre-set timeout expires, or (3) you release the trigger.

---

Note: Refer to "Scanning Timeout".

---

\*Laser Mode



### 1.7.4 AUTO OFF MODE

The scanner will start scanning once the trigger is pressed.

- ▶ The scanning won't stop until (1) a barcode is decoded, and (2) the pre-set timeout expires.

---

Note: Refer to "Scanning Timeout".

---

Auto Off Mode



### 1.7.5 AUTO POWER OFF MODE

The scanner will start scanning once the trigger is pressed.

- ▶ The scanning won't stop until the pre-set timeout expires, and, the pre-set timeout period re-counts after each successful decoding.

---

Note: Refer to "Delay between Re-read" and "Scanning Timeout".

---

Auto Power Off Mode



### 1.7.6 ALTERNATE MODE

The scanner will start scanning once the trigger is pressed

- ▶ The scanning won't stop until you press the trigger again.

Alternate Mode



### 1.7.7 AIMING MODE

The scanner will aim at a barcode once the trigger is pressed, and start scanning when the trigger is pressed again within one second.

- ▶ The scanning won't stop until (1) a barcode is decoded, and (2) the pre-set timeout expires.

Aiming Mode



#### Aiming Timeout

You can limit the aiming time interval (1~15). By default, the scanner time-out is set to 1 second.

Aiming Time-out  
after 1~15 sec.  
(\*1)



1. Read the barcode above to specify the time interval before aiming ends. (It is set to 1 by default.)
2. Read the ["Decimal Value"](#) barcode on page 219. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 10 seconds.
3. Read the "Validate" barcode on the same page to complete this setting.



## 1.7.8 MULTI-BARCODE MODE

The scanner will be scanning as long as the trigger is held down, capable of decoding one single barcode, as well as multiple unique barcodes one at a time. While decoding a bunch of unique barcodes, if a barcode is decoded twice, its subsequent decoding will be ignored and the scanner is expecting another unique barcode.

- ▶ The scanning won't stop until you release the trigger.

Multi-Barcode Mode



---

Note: (1) A barcode is considered unique when its Code Type or data is different from others.

(2) Multi-Barcode Mode has nothing to do with the [Multi-Barcode Editor](#).

---



## 1.8 SCANNING TIMEOUT

Specify the scanning time interval (1~254 sec.; 0= Disable) when the scan mode is set to any of the following –

- ▶ Laser mode
- ▶ Auto Off mode
- ▶ Auto Power Off mode
- ▶ Aiming mode

Scanner Time-out  
after 0~254 sec.  
(\*10)



- 1) Read the barcode above to specify the time interval in seconds before the scan engine times out.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "5" for the scanner to shut down automatically after being idle for 15 seconds.
- 3) Read the "Validate" barcode on the same page to complete this setting.



## 1.9 DELAY BETWEEN RE-READ

This is also referred to as the “Blocking Time”, which is used to prevent the scanner from accidentally reading the same barcode twice when the scan mode is set to any of the following –

- ▶ Auto Power Off mode
- ▶ Continuous mode
- ▶ Alternate mode




### 1.10 READ REDUNDANCY FOR ALL SYMBLOGIES

Select the level of reading security. For example,

- ▶ If "No Redundancy" is selected, one successful decoding will make the reading valid and induce the "READER Event".
- ▶ If "Two Times" is selected, it will take a total of three consecutive successful decoding of the same barcode to make the reading valid. The higher the reading security is (that is, the more redundancy the user selects), the slower the reading speed gets.

It is obvious that the more redundancy selected, the higher the reading security is, and thus, the slower the reading speed becomes. It has to compromise between reading security and decoding speed.

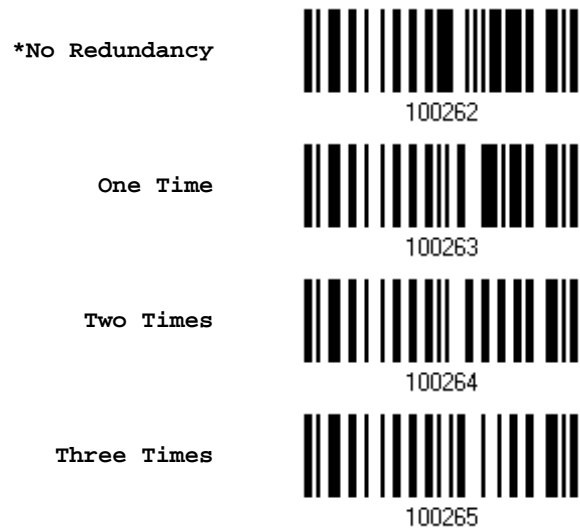

## 1.11 ADDON SECURITY FOR UPC/EAN BARCODES

The scanner is capable of decoding a mix of UPC/EAN barcodes with and without addons. The read redundancy (0~30 times) allows changing the number of times to decode a UPC/EAN barcode before transmission. The more redundancy selected, the higher the reading security is, and thus, the slower the reading speed becomes.

Note: UPC/EAN Addon 2 and Addon 5 must be enabled individually for this setting to take effect.

Addon Security Level  
(\*0~30)



- 1) Read the barcode above to specify the read redundancy for UPC/EAN barcodes. (It is set to 0 by default.)
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "2" for the scanner to re-read the barcode for 12 times.
- 3) Read the "Validate" barcode on the same page to complete this setting.

## 1.12 NEGATIVE BARCODES

Normally, barcodes are printed with the color of the bars darker than that of the spaces. But for negative barcodes, they are printed in the opposite sense just like negative films. The spaces of negative barcodes are printed with a color darker than that of the bars. Configure the scanner to be able to read negative barcodes if required.

Enable



\*Disable






### 1.13 EFFECTIVE DECODING AREA

By default, the effective decoding area is 100% covered by the scanned area. However, you may narrow down the decoding area to prevent reading the wrong barcode when a number of barcodes are printed closely. The scanner will only read barcodes that appear in the effective decoding area.

Read the barcode "Centering On" and specify the percentage to narrow down the decoding area. For example, read "Left 10%" and then "Right 30%" for the scanner to decode barcode "A" only.

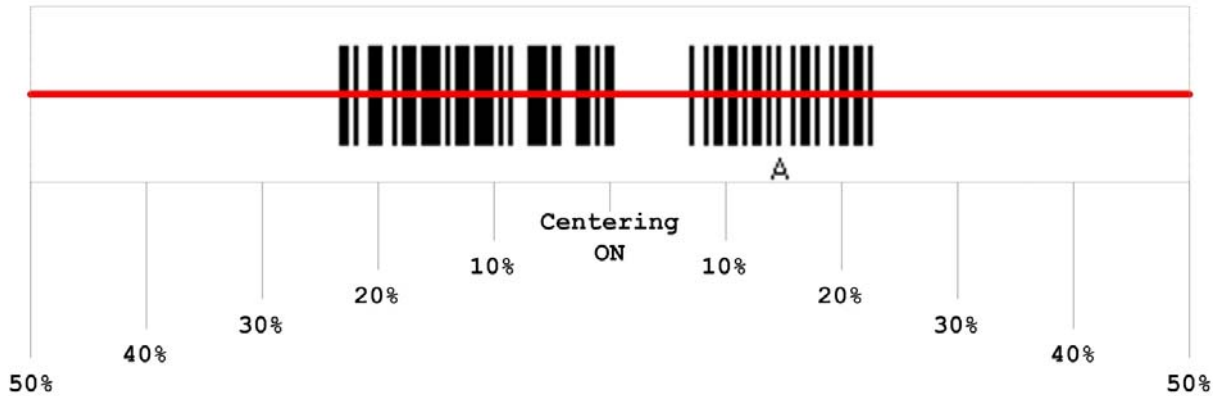

#### 1.13.1 POSITIONING WINDOW

Centering On



\*Centering Off



### 1.13.2 ADJUSTING WINDOW

#### Percentage for Left Half

**\*Left 50%**



**Left 40%**



**Left 30%**



**Left 20%**



**Left 10%**



#### Percentage for Right Half

**Right 10%**



**Right 20%**



**Right 30%**



**Right 40%**



**\*Right 50%**



## 1.14 USE DIRECT USB CABLE

1663 supports Direct USB interface for charging the battery and/or sending data to the host in memory mode. Refer to [1.2.2 Memory Mode](#).

Note: The scanner will not function when it is solely on USB power and without a battery loaded.

### 1.14.1 DIRECT USB INTERFACE

When it is set to Memory Mode and connected to computer via the Direct USB cable, the default output interface becomes "Direct USB Virtual COM", change it to "Direct USB HID" if required.

For details on configuring the interface settings, refer to the following sections:

- ▶ [2.6 Direct USB HID](#)
- ▶ [2.7 Direct USB Virtual COM](#)

\*Activate Direct  
USB Virtual COM



Activate Direct  
USB HID



### 1.14.2 DISABLE DIRECT USB INTERFACE

When connecting the USB cable to the scanner for charging the battery, ensure the "Disable Direct USB" barcode has been scanned to avoid sending data to the host in memory mode. In this mode the USB cable function will be charging the battery only.

Disable Direct USB



## 1.15 PAGER BEEP DURATION

Paging function is only activated when 1663 is in Power-Saving mode. 1663 can be woken up via receiving any *Bluetooth*<sup>®</sup> status command by pressing a key on the host keyboard. The buzzer will continuously sound two short high tone beeps until the power key is pressed on the scanner or the timeout is reached, and the scanner re-enters power saving mode.

By default, the pager beep duration is 5 seconds. Specify a value, ranging from 0 to 15. (0~15 sec.; 0= Disable)

- ▶ *Bluetooth*<sup>®</sup> HID profile: Press any one of the following keys "Scroll Lock", "Number Lock" or "Caps Lock" on the host computer to trigger the waking up of 1663.
- ▶ *Bluetooth*<sup>®</sup> SPP Profile: Any command sent using *Bluetooth*<sup>®</sup> SPP will trigger the waking up of 1663.

Pager Beep Duration  
0~15 sec.  
(\*5 s)



- 1) Read the barcode above to specify the desired beep active time.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "5" for the pager beep function to be activated each 15 seconds after entering Power-Saving mode.
- 3) Read the "Validate" barcode on the same page to complete this setting.




## 1.16 TIME STAMP

Specify time stamp format added to the prefix or suffix of a data. Up to three settings can be configured:


- ▶ No Time Stamp
- ▶ Add Time Stamp in front of data
- ▶ Add Time Stamp to the end of data



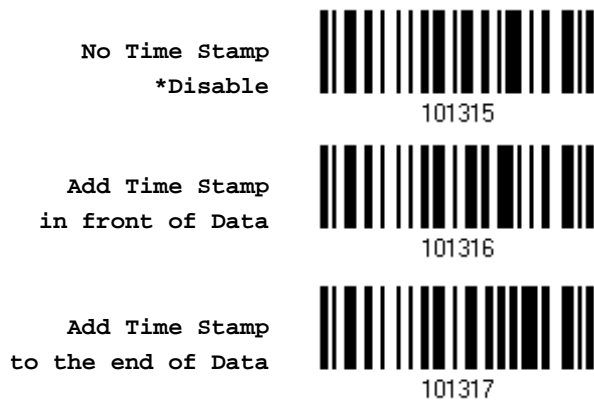



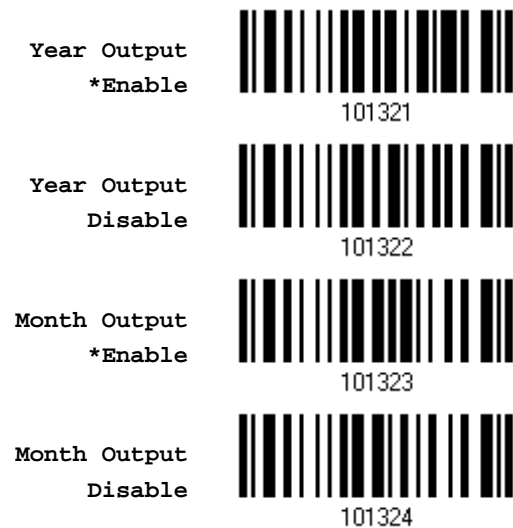

If added in front of data, it means prior to the prefix field. Alternatively, to the end of data.



### 1.16.1 DATE AND TIME SETTINGS


Read the barcode below to enable/disable Date and Time function.



|                          |   |
|--------------------------|---|
| Date Output<br>*Enable   |    |
|                          | 101325  |
| Date Output<br>Disable   |    |
|                          | 101326  |
| Hour Output<br>*Enable   |    |
|                          | 101327  |
| Hour Output<br>Diabile   |    |
|                          | 101328  |
| Minute Output<br>*Enable |    |
|                          | 101329  |
| Minute Output<br>Disalbe |    |
|                          | 101330  |
| Second Output<br>*Enable |  |
|                          | 101331  |
| Second Output<br>Diabile |  |
|                          | 101332  |



**Decoding Data and Time**

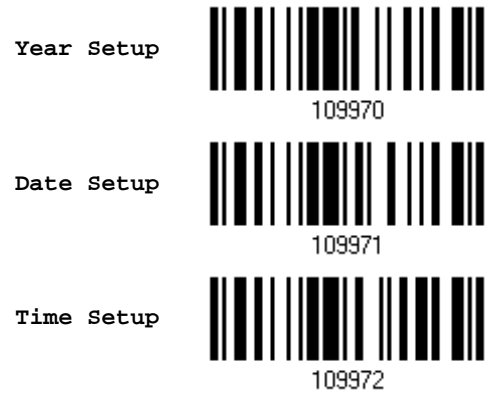

- 1) Read the barcode above to apply time or date code separately, and follow steps 2~3.
- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired character string. For example:  
 Year: Read "2", "0", "1", "1" for the year setting as year=2011.  
 Date: Read "1", "1", "2", "0" for the date setting as date=Nov.20.  
 Time: Read "1", "8", "5", "9" for the time setting as time=18:59.
- 3) Read the "Validate" barcode for each setting on the same page.

**1.16.2 SEPARATOR FOR DATE AND TIME**

The Date and Time can be split with a pre-selected separator, for example, "/" as YYYY/MM/DD or ":" as HH:MM:SS



- 1) Read the barcode above to apply separator to date or time separately, and follow steps 2~3.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character string. For example, read "3" and "A" for the separator to split the data with character [:].
- 3) Read the "Validate" barcode on the same page to complete this setting.



### 1.16.3 DATE FORMAT

The date format includes year, month and day. There are three kinds of combinations can be configured to specify Year, Month and Day:

- ▶ Year/Month/Day (YYYY/MM/DD) or (YY/MM/DD)
- ▶ Month/Day/Year (MM/DD/YYYY) or (MM/DD/YY)
- ▶ Day/Month/Year (DD/MM/YYYY) or (DD/MM/YY)



#### About Year Format:

Year format can be pre-selected as 2-digit or 4-digit. For example, if year format is YYYY, the output year is 2011 for 4-digit, alternatively is 11 for 2-digit.





## 1.17 HARDWARE RESET

### 1.17.1 RESTORE SYSTEM DEFAULTS

In addition to using the “Restore System Defaults” barcode, the following procedure using key combinations, can be used to restore the system defaults during operation.

- 1) Hold down the [Power/Delete] key.
- 2) When the scanner responds with two short beeps (high tone), press the [Trigger] key for 5 seconds. The scanner LED indicator becomes solid red and then goes off.
- 3) When the scanner responds with a long beep (high tone), release the keys. Its LED indicator becomes solid red and goes off.

---

Note: The scanner will restart itself automatically.

---

### 1.17.2 RESET CONNECTION

When the output interface is *Bluetooth*<sup>®</sup> HID or *Bluetooth*<sup>®</sup> SPP Master, the scanner will attempt to maintain an established connection. To stop such re-connection, read the “Reset Connection” or “Restore System Defaults” barcode to clear the current connection record. Alternatively, use the key combination as described below to reset connection during operation.

- 1) Hold down the [Trigger] key, and then press the [Power/Delete] key for at least 5 seconds.
- 2) The scanner will respond with two short beeps (high tone). Wait until the scanner responds with a long beep (high tone), release the keys.

---

Note: After resetting connection by hardware, the scanner will not restart itself automatically. It will resume to its previous operation except no connection.

---





Enter Setup

## SELECTING OUTPUT INTERFACE

---

In order to establish a proper connection between host computer and the scanner, we suggest following these instructions –

- 1) Install battery and hold down the [Power/Delete] key for 2 seconds to turn on the scanner.
- 2) Read the “Enter Setup” barcode to enter the configuration mode.
- 3) Read the associated barcodes to activate the desired interface.  
See the following sections for output interfaces supported.
- 4) Read the barcodes for related settings.
- 5) Read the “Update” barcode to exit the configuration mode.
- 6) Turn on host computer or laptop and establish a WPAN connection with the scanner.  
Refer to [Chapter 3 – Setting up a WPAN Connection](#).

---

Note: (1) By default, the output interface is set to “*Bluetooth*<sup>®</sup> HID”.  
(2) When set to Memory Mode and connected to computer via the Direct USB cable, the default output interface becomes “Direct USB Virtual COM”.

---

### IN THIS CHAPTER

---

|  |    |
|--|----|
| 2.1 <i>Bluetooth</i> <sup>®</sup> HID.....         | 56 |
| 2.2 <i>Bluetooth</i> <sup>®</sup> SPP Slave .....  | 68 |
| 2.3 <i>Bluetooth</i> <sup>®</sup> SPP Master ..... | 70 |
| 2.4 USB HID via 3610 .....                         | 73 |
| 2.5 USB Virtual COM via 3610.....                  | 83 |
| 2.6 Direct USB HID.....                            | 85 |
| 2.7 Direct USB Virtual COM.....                    | 95 |



## 2.1 BLUETOOTH® HID

For *Bluetooth*® HID, refer to [Chapter 3 – Setting up a WPAN Connection](#) for related connection settings. The scanned data will be transmitted to the computer. To capture the data run any text editor on your computer.

| HID Settings          | Defaults            |
|-----------------------|---------------------|
| Keyboard Type         | PCAT (US)           |
| Alphabet Layout       | Normal              |
| Numeric Layout        | Normal              |
| Capital Lock Type     | Normal              |
| Capital Lock State    | Off                 |
| Alphabet Transmission | Case-sensitive      |
| Numeric Transmission  | Alphanumeric keypad |
| Inter-Character Delay | 0 (ms)              |
| Inter-Function Delay  | 0 (ms)              |



### 2.1.1 ACTIVATE *BLUETOOTH*<sup>®</sup> HID & SELECT KEYBOARD TYPE

When *Bluetooth*<sup>®</sup> HID interface is activated, you will have to select a keyboard type to complete this setting. By default, *Bluetooth*<sup>®</sup> HID is activated on the scanner, and the keyboard type is set to PCAT (US).

Activate *Bluetooth*<sup>®</sup>  
HID & Select Keyboard  
Type...



- 1) Read the barcode above to activate *Bluetooth*<sup>®</sup> HID and select a keyboard type.
- 2) Read the “[Decimal Value](#)” barcode on page 219. Refer to the table below for the number of desired keyboard type.
- 3) Read the “Validate” barcode on the same page to complete this setting.

#### *Bluetooth*<sup>®</sup> HID

The following keyboard types are supported —

| No. | Keyboard Type    | No. | Keyboard Type         |
|-----|------------------|-----|-----------------------|
| 64  | PCAT (US)        | 72  | PCAT (Spanish)        |
| 65  | PCAT (French)    | 73  | PCAT (Portuguese)     |
| 66  | PCAT (German)    | 74  | PS55 A01-2 (Japanese) |
| 67  | PCAT (Italy)     | 75  | User-defined table    |
| 68  | PCAT (Swedish)   | 76  | PCAT (Turkish)        |
| 69  | PCAT (Norwegian) | 77  | PCAT (Hungarian)      |
| 70  | PCAT (UK)        | 78  | PCAT (Swiss German)   |
| 71  | PCAT (Belgium)   | 79  | PCAT (Danish)         |



## 2.1.2 RESET CONNECTION

For *Bluetooth*<sup>®</sup> HID, you can only have the scanner connected to one computer at a time. If you want to connect the scanner to another host, you must read the “Reset Connection” barcode so that the current connection record will be cleared. Then, the scanner will restart itself automatically. Go through the process in [3.2.3 Connect to Dongle](#) to establish a new connection.

Refer to [1.17 Hardware Reset](#).

Reset Connection



109919

---

Note: The “Restore System Defaults” barcode will also clear the current connection record.

---



### 2.1.3 KEYBOARD SETTINGS

- ▶ Alphabet Layout
- ▶ Numeric Layout
- ▶ Capital Lock Type
- ▶ Capital Lock Setting
- ▶ Alphabet Transmission
- ▶ Numeric Transmission

Note: *Bluetooth*<sup>®</sup> HID does not support these functions on PDAs – (1) Capital Lock Setting: Auto Detection (2) Numeric Transmission: Numeric Keys

#### Alphabet Layout

By default, the alphabet layout is set to normal mode, also known as the standard English layout. Select French or German keyboard layout if necessary. The scanner will make adjustments when sending the "A", "Q", "W", "Z", "Y", and "M" characters according to this setting.




Note: This setting only works when the keyboard type selected is US keyboard, such as PCAT (US). The Alphabet Layout and Numeric Layout setting must match your keyboard.



**US Keyboard Style – Normal**


QWERTY layout, which is normally used in western countries.

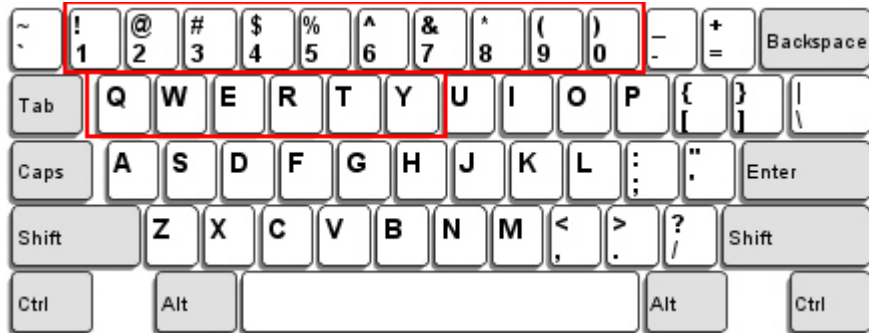

- ▶ Select “Lower Row” for the “Numeric Layout” setting for the upper row is for special characters.

**French Keyboard Style – AZERTY**


French layout; see below for French Keyboard Style.

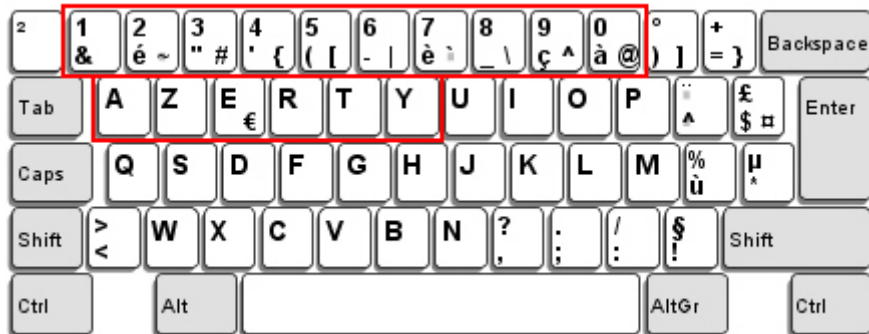

- ▶ Select “Upper Row” for the “Numeric Layout” setting for the lower row is for special characters.

**German Keyboard Layout – QWERTZ**

German layout; see below for German Keyboard Style.

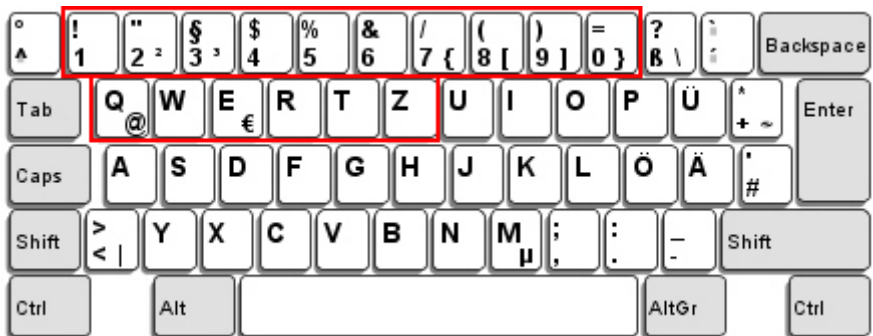

- ▶ Select “Lower Row” for the “Numeric Layout” setting for the upper row is for special characters.








**Numeric Layout**

Select a proper layout that matches the alphabet layout. The scanner will make adjustments according to this setting.

| Options   | Description  |
|-----------|--|
| Normal    | Depends on the [Shift] key or [Shift Lock] setting |
| Lower Row | For QWERTY or QWERTZ keyboard                      |
| Upper Row | For AZERTY keyboard                                |

\*Normal   
100046

Upper Row   
100049


Lower Row   
100048


Note: This setting is to be used with the Character Substitution setting when support for certain keyboard types (languages) is unavailable but required.

**Capital Lock Type & Setting**

In order to send the alphabet with correct case, the scanner needs to know the status of Caps Lock on the keyboard. Incorrect settings may result in reversed case of the alphabet being transmitted.

| Cap Lock Type | Description   |
|---------------|---|
| Normal        | Normal type   |
| Capital Lock  | When enabled, the keys of alphabetic characters will be interpreted as capital letters. However, this does not affect the number or punctuation keys. |
| Shift Lock    | When enabled, the keys of alphabetic characters will be interpreted as capital letters. In addition, this affects the number or punctuation keys.     |

\*Normal   
100042

Shift Lock   
100045



Capital Lock



100044

| Capital Lock State                                      | Description  |
|---|--|
| Capital Lock OFF  | Assuming that the status of Caps Lock on the keyboard is OFF, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).   |
| Capital Lock ON   | Assuming that the status of Caps Lock on the keyboard is ON, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).<br>▶ Refer to the Capital Lock Type above.   |
| Auto Detection<br>(Suggested use for most applications) | The scanner will automatically detect the status of Caps Lock on the keyboard before data is transmitted; transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).<br>▶ This setting is not supported on PDAs. |

Auto Detect



100054

Capital Lock ON



100053

\*Capital Lock OFF




100052




**Alphabet Transmission**

By default, the alphabet transmission is case-sensitive, meaning that the alphabet will be transmitted according to the original case, the status of Caps Lock on the keyboard, as well as the Capital Lock setting. Select [Ignore Case] to have alphabet transmitted according to the status of Caps Lock on the keyboard only.

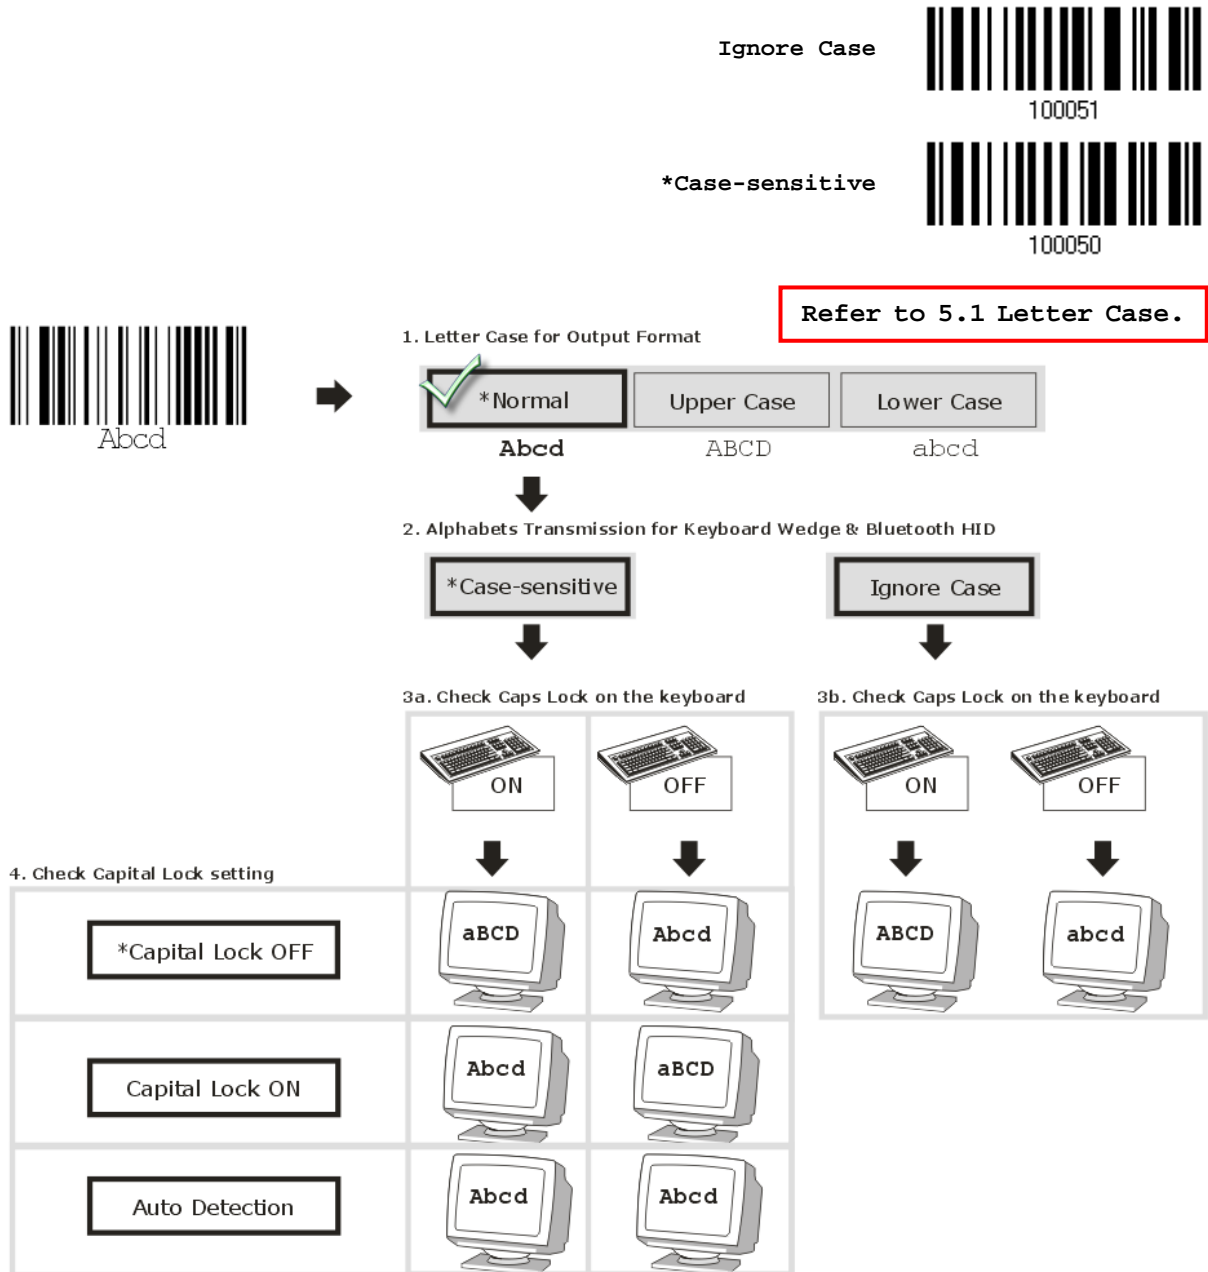

**Numeric Transmission**


By default, the alphanumeric keypad is used for transmitting digits. Select “Numeric Keypad” if you wish to use the keys on the numeric keypad.

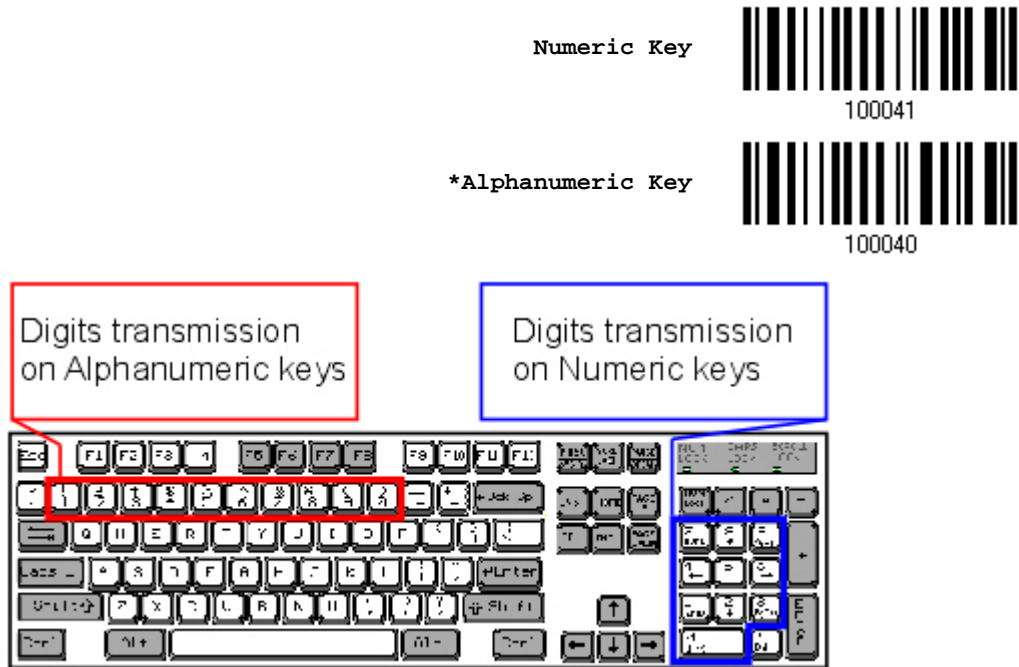

Note: If you select “Numeric Keypad”, the Num Lock status of the physical keyboard should be “ON”. This setting is not supported on PDAs.

**2.1.4 INTER-CHARACTER DELAY**

By default, the inter-character delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every character being transmitted. The longer the delay time is, the slower the transmission speed will be.

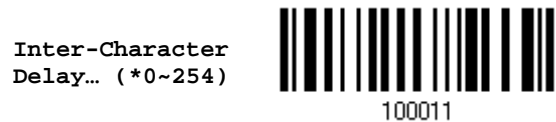

- 1) Read the barcode above to specify the inter-character delay.
- 2) Read the “[Decimal Value](#)” barcode on page 219 for the desired inter-character delay (in milliseconds).
- 3) Read the “Validate” barcode on the same page to complete this setting.



### 2.1.5 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.

### 2.1.6 HID CHARACTER TRANSMIT MODE

By default, HID interface sends data to the host in batches. You may read the "By Character" barcode to process data one character at a time.

\*Batch Processing



By Character



Note: To ensure the accuracy of data, it's suggested using the "By Character" mode when working with the host not running Windows operating systems.




### 2.1.7 SPECIAL KEYBOARD FEATURE

By default, the special keyboard feature is based on the factory definition. You can decide whether to apply the special keyboard feature. Refer to [Keyboard Wedge Table](#).



### 2.1.8 KEYPAD SUPPORT FOR IPHONE/IPAD

When the scanner has been successfully connected to iPhone or iPad for data collection, the onscreen keypad of iPhone or iPad will disappear. Read the "Use POWER Key to Show or Hide Keypad" barcode in advance. Then, it will allow pressing the [Power/Delete] key to show or hide the onscreen keypad.

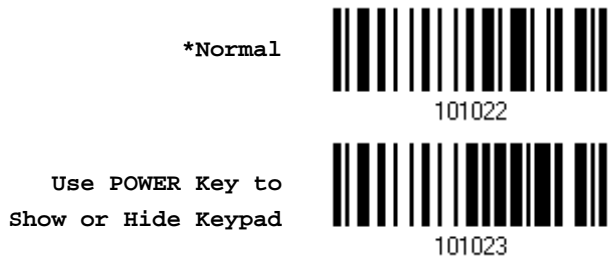

In addition to using the [Power/Delete] key, you may also show or hide the keypad by reading the following barcode.




Note: This function only works for  
(1) iPhone 4 and 3GS version 4.1 or later, and (2) iPad version 4.2 or later.



### 2.1.9 SIMPLE PAIRING FOR IPHONE/IPAD

The required window of pairing passcode is always pop-up when you are using a *Bluetooth*<sup>®</sup> connection to iPhone or iPad. Scan the barcode below to enable *Bluetooth*<sup>®</sup> simple pairing for iOS so that the passcode required window will not be appeared during a connection. You can connect to iPhone/iPad more quickly. By default, this function is set to Disable.

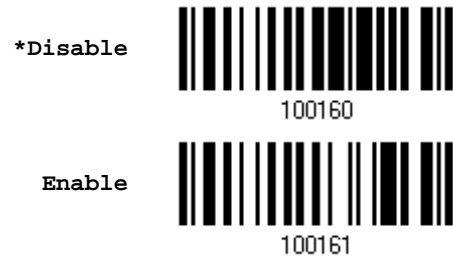

Note: Simple pairing only supports to the device with *Bluetooth*<sup>®</sup> v2.1 or later.

### 2.1.10 TRANSMIT SPEED

By default, the BT HID transmit speed is set to normal. Users can have the scanner work in quicker transmit speed by reading the Fast barcode.



Note: Data loss may occur while transmitting data continuously with Fast mode enabled in the Android platform. Therefore, it's recommended to employ the Normal mode for Android-based devices.



## 2.2 BLUETOOTH® SPP SLAVE

For *Bluetooth*® SPP Slave, refer to [Chapter 3 – Setting up a WPAN Connection](#) for related connection settings.

### 2.2.1 ACTIVATE *BLUETOOTH*® SPP SLAVE MODE

This is SPP Slave Mode.

Activate *Bluetooth*®  
SPP, Slave Mode



### 2.2.2 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.





### 2.2.3 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all attempts fail without any notification, data loss will occur.

ACK/NAK Time-out  
after ... (\*0~99)



100013

- 1) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

### ACK/NAK Error Beep

Enable Error Beep



100015

\*Disable Error Beep



100014

Note: We suggest enabling the error beep so that you will be notified of such data loss and have the scanner re-read data.



## 2.3 BLUETOOTH® SPP MASTER

As a SPP master device, the scanner will be able to resume connection with the host upon powering on again, as long as the host application is running. If the scanner fails to resume connection, it will try every 5 seconds to re-connect to the host unless you read the “Reset Connection” or “Restore System Defaults” barcode.

For *Bluetooth*® SPP Master, refer [3.2.2 Configure Related Settings](#) for related connection settings.

Note: In SPP Master Mode, scanner has to connect within the specified period of time (2 minutes by default). During the connection, the scanner will enter into idle mode to save power. It will automatically turn off when the time is up. Refer to [1.1.3 Auto Power Off & Power-Saving](#).

### 2.3.1 ACTIVATE *BLUETOOTH*® SPP MASTER MODE

This is SPP Master Mode.

Activate *Bluetooth*®  
SPP, Master Mode



#### How to connect with the target device?

Produce two setup barcodes for the target SPP slave device, just like what we do for 3610.


- ▶ “Set Connection”
- ▶ “MAC ID”

Note: The “MAC ID” barcode must have a prefix of two characters, either “0x” or “0X”, followed by the real MAC address of the target device.

Usage:

- 1) Read the “Activate *Bluetooth*® SPP, Master Mode” barcode above and barcodes for connection settings, such as authentication and preset PIN. Skip this step if no connection settings are desired.
- 2) Read the “Set Connection” and “MAC ID” barcodes. The scanner will respond with one beep upon reading each of the barcodes.

Set Connection

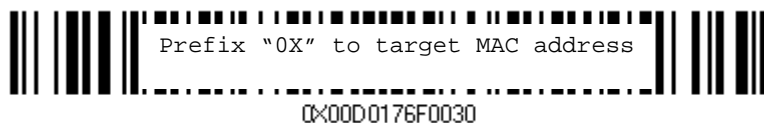

Note: Read the "Set Connection" barcode first, and then the "MAC ID" barcode within 10 seconds.

Instead of producing the "MAC ID" barcode, you may read the setup barcodes for entering the MAC address.

- ▶ Read the "Abort" barcode to cancel the operation at any time while reading setup barcodes for the MAC address. If the MAC address has not been completed yet, reading the "Validate" barcode can cancel the operation as well.

Enter MAC ID in  
Hexadecimal...



100150

Usage:

- 1) Read the barcode above.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired MAC address.
- 3) Read the "Validate" barcode on the same page to complete this setting.

### Exit SPP Master Mode

To stop such re-connection, read "Reset Connection" or "Restore System Defaults" barcode so that the current connection record (= MAC ID) will be cleared. Then, the scanner will restart itself automatically. Go through the process in [3.2.3 Connect to Dongle](#) to establish a new WPAN connection.

Reset Connection



109919

### 2.3.2 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



100012

- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



### 2.3.3 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all attempts fail without any notification, data loss will occur.

ACK/NAK Time-out  
after ... (\*0~99)



100013

- 1) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

### ACK/NAK Error Beep

Enable Error Beep



100015

\*Disable Error Beep



100014

Note: We suggest enabling the error beep so that you will be notified of such data loss and have the scanner re-read data.

### 2.3.4 SWITCH BETWEEN MASTER/SLAVE MODE

After the scanner has established a connection as a SPP slave device, you may read the "Activate *Bluetooth*<sup>®</sup> SPP, Master Mode" setup barcode to switch to SPP Master Mode. This will result in easy and reliable re-connection, just like connecting with 3610.



## 2.4 USB HID VIA 3610

For USB HID, connect 3610 to the USB port of PC, and then connect the scanner to 3610. The scanned data will be transmitted to the computer. To capture the data run any text editor on your computer.

| HID Settings          | Defaults            |
|-----------------------|---------------------|
| Keyboard Type         | PCAT (US)           |
| Numeric Layout        | Normal              |
| Capital Lock Type     | Normal              |
| Capital Lock State    | Off                 |
| Alphabet Transmission | Case-sensitive      |
| Numeric Transmission  | Alphanumeric keypad |
| Inter-Character Delay | 0 (ms)              |
| Inter-Function Delay  | 0 (ms)              |



### 2.4.1 ACTIVATE USB HID & SELECT KEYBOARD TYPE

When USB HID interface is activated, you will have to select a keyboard type to complete this setting.

Activate  
3610 USB HID & Select  
Keyboard Type...



- 1) Read the barcode above to activate USB HID and select a keyboard type.
- 2) Read the “[Decimal Value](#)” barcode on page 219. Refer to the table below for the number of desired keyboard type.
- 3) Read the “Validate” barcode on the same page to complete this setting.

#### USB HID

The following keyboard types are supported —

| No. | Keyboard Type    | No. | Keyboard Type         |
|-----|------------------|-----|-----------------------|
| 64  | PCAT (US)        | 72  | PCAT (Spanish)        |
| 65  | PCAT (French)    | 73  | PCAT (Portuguese)     |
| 66  | PCAT (German)    | 74  | PS55 A01-2 (Japanese) |
| 67  | PCAT (Italy)     | 75  | User-defined table    |
| 68  | PCAT (Swedish)   | 76  | PCAT (Turkish)        |
| 69  | PCAT (Norwegian) | 77  | PCAT (Hungarian)      |
| 70  | PCAT (UK)        | 78  | PCAT (Swiss German)   |
| 71  | PCAT (Belgium)   | 79  | PCAT (Danish)         |



## 2.4.2 KEYBOARD SETTINGS

- ▶ Alphabet Layout
- ▶ Numeric Layout
- ▶ Capital Lock Type
- ▶ Capital Lock Setting
- ▶ Alphabet Transmission
- ▶ Numeric Transmission

### Alphabet Layout

By default, the alphabet layout is set to normal mode, also known as the standard English layout. Select French or German keyboard layout if necessary. The scanner will make adjustments when sending the "A", "Q", "W", "Z", "Y", and "M" characters according to this setting.




Note: This setting only works when the keyboard type selected is US keyboard, such as PCAT (US). The Alphabet Layout and Numeric Layout setting must match your keyboard.



**US Keyboard Style – Normal**


QWERTY layout, which is normally used in western countries.

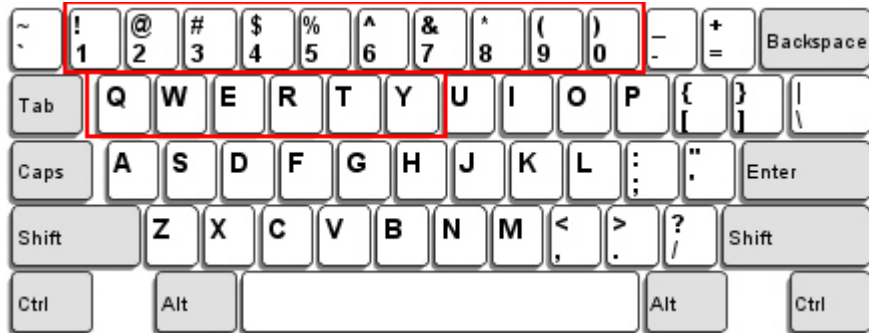

- ▶ Select “Lower Row” for the “Numeric Layout” setting for the upper row is for special characters.

**French Keyboard Style – AZERTY**


French layout; see below for French Keyboard Style.

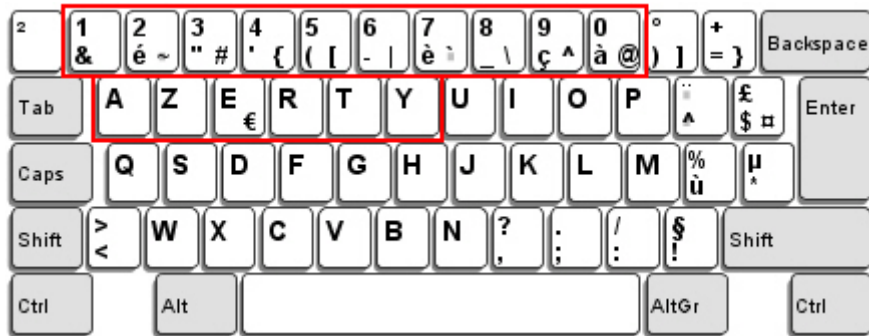

- ▶ Select “Upper Row” for the “Numeric Layout” setting for the lower row is for special characters.

**German Keyboard Layout – QWERTZ**

German layout; see below for German Keyboard Style.

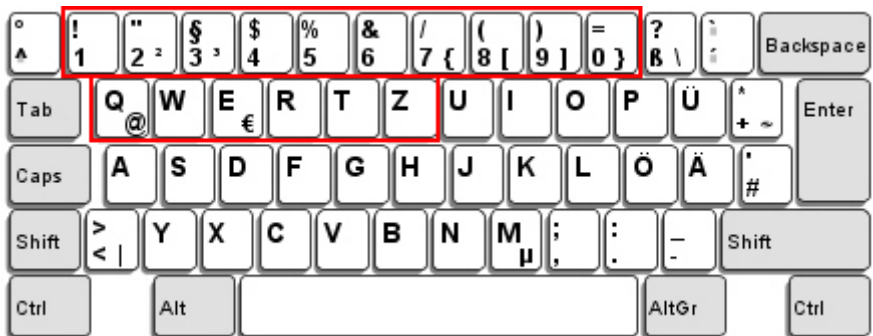

- ▶ Select “Lower Row” for the “Numeric Layout” setting for the upper row is for special characters.






### Numeric Layout

Select a proper layout that matches the alphabet layout. The scanner will make adjustments according to this setting.

| Options   | Description  |
|-----------|--|
| Normal    | Depends on the [Shift] key or [Shift Lock] setting |
| Lower Row | For QWERTY or QWERTZ keyboard                      |
| Upper Row | For AZERTY keyboard                                |

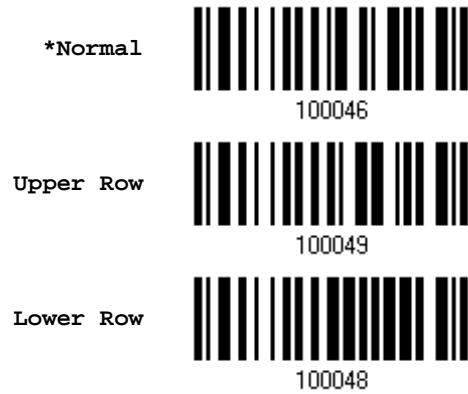

Note: This setting is to be used with the Character Substitution setting when support for certain keyboard types (languages) is unavailable but required.



**Capital Lock Type & Setting**

In order to send the alphabet with correct case, the scanner needs to know the status of Caps Lock on the keyboard. Incorrect settings may result in reversed case of the alphabet being transmitted.

| Cap Lock Type | Description   |
|---------------|---|
| Normal        | Normal type   |
| Capital Lock  | When enabled, the keys of alphabetic characters will be interpreted as capital letters. However, this does not affect the number or punctuation keys. |
| Shift Lock    | When enabled, the keys of alphabetic characters will be interpreted as capital letters. In addition, this affects the number or punctuation keys.     |



| Capital Lock State                                      | Description  |
|---|--|
| Capital Lock OFF  | Assuming that the status of Caps Lock on the keyboard is OFF, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).   |
| Capital Lock ON   | Assuming that the status of Caps Lock on the keyboard is ON, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).<br>▶ Refer to the Capital Lock Type above.   |
| Auto Detection<br>(suggested use for most applications) | The scanner will automatically detect the status of Caps Lock on the keyboard before data is transmitted; transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission). |



\*Capital Lock OFF




100052




**Alphabet Transmission**

By default, the alphabet transmission is case-sensitive, meaning that the alphabet will be transmitted according to the original case, the status of Caps Lock on the keyboard, as well as the Capital Lock setting. Select [Ignore Case] to have alphabet transmitted according to the status of Caps Lock on the keyboard only.

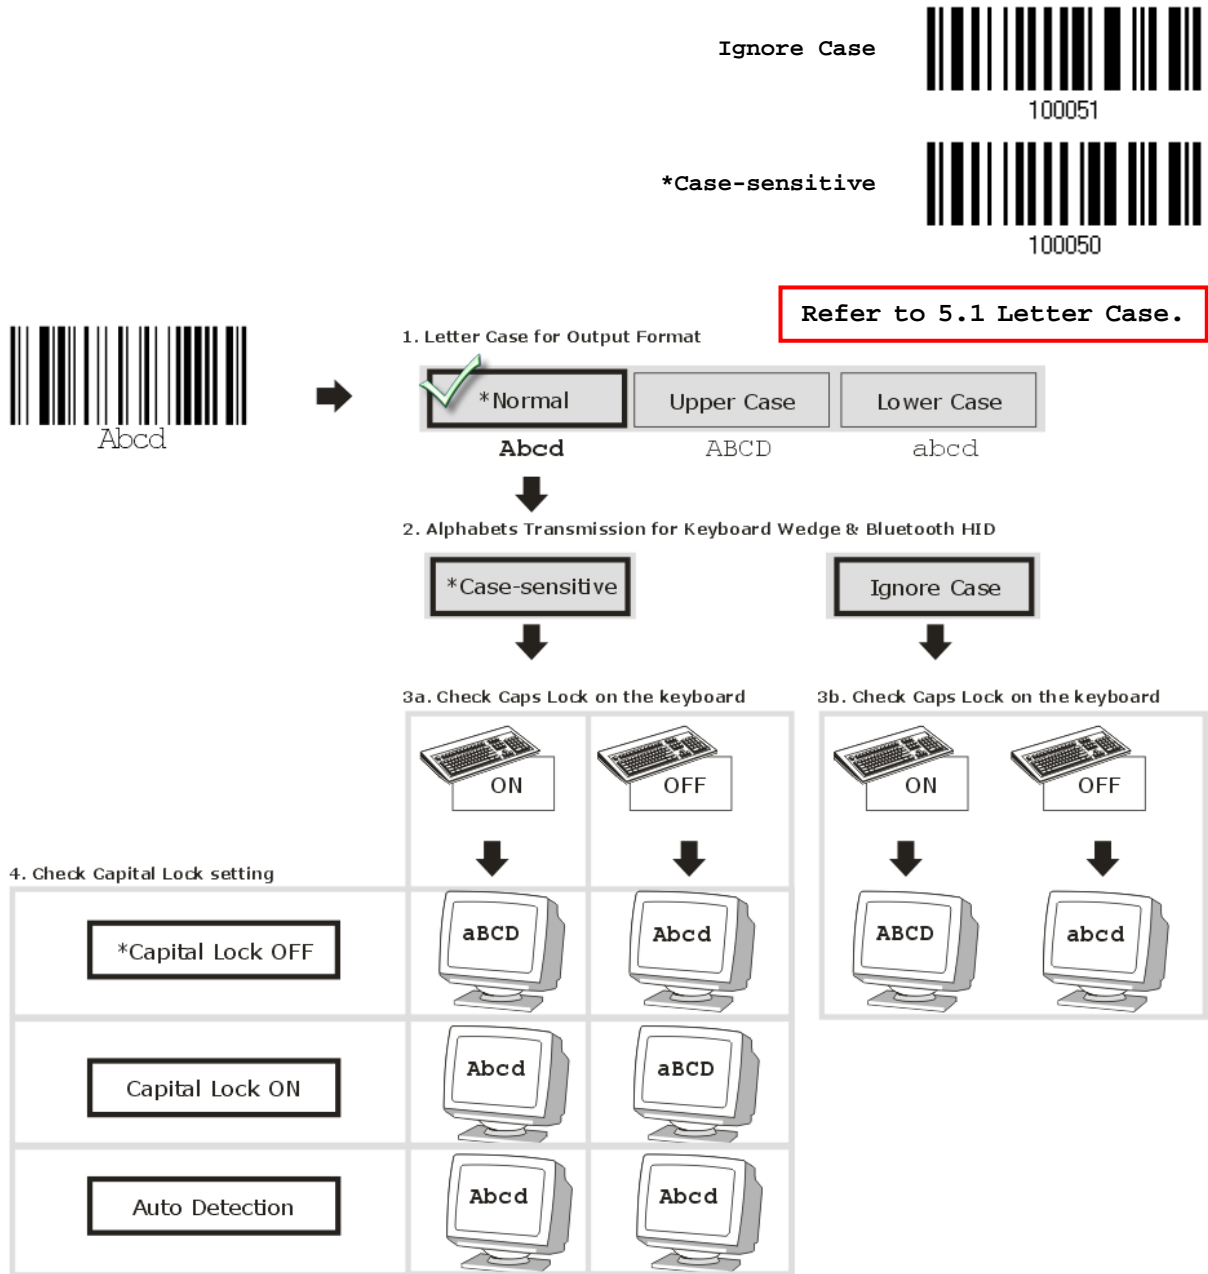

**Numeric Transmission**


By default, the alphanumeric keypad is used for transmitting digits. Select “Numeric Keypad” if you wish to use the keys on the numeric keypad.

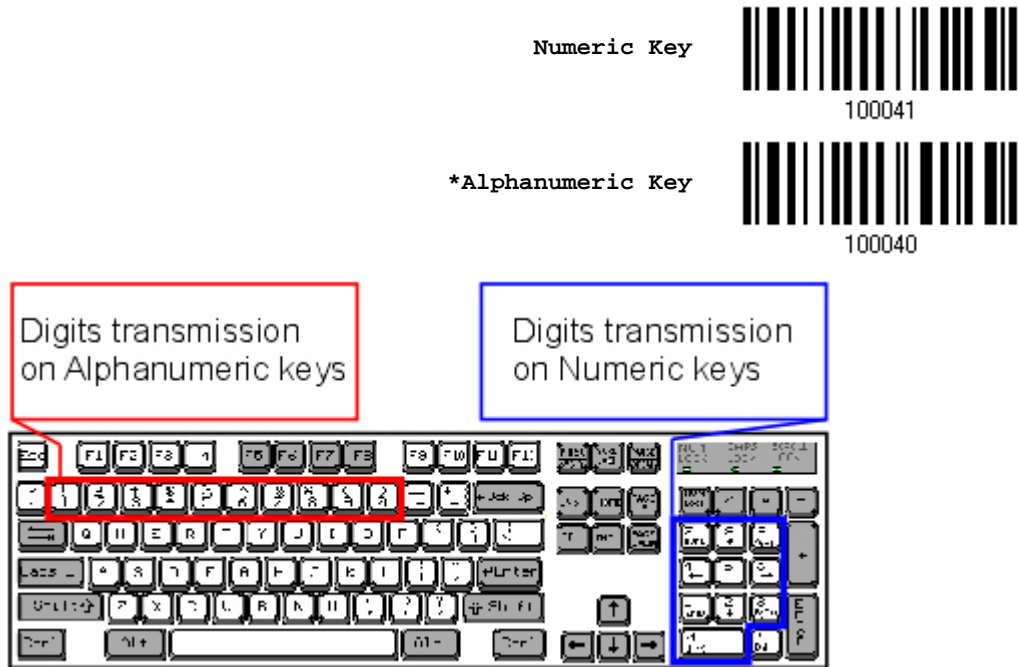

Note: If you select “Numeric Keypad”, the Num Lock status of the physical keyboard should be “ON”.

**2.4.3 INTER-CHARACTER DELAY**

By default, the inter-character delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every character being transmitted. The longer the delay time is, the slower the transmission speed will be.

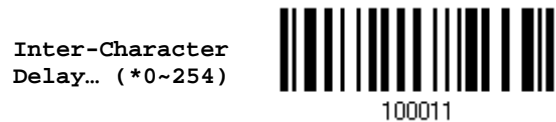

- 1) Read the barcode above to specify the inter-character delay.
- 2) Read the “[Decimal Value](#)” barcode on page 219 for the desired inter-character delay (in milliseconds).
- 3) Read the “Validate” barcode on the same page to complete this setting.



## 2.4.4 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.

## 2.4.5 HID CHARACTER TRANSMIT MODE

By default, HID interface sends data to the host in batch. Read the "By Character" barcode will send the data one character at a time.

\*Batch Processing



By Character



## 2.4.6 SPECIAL KEYBOARD FEATURE

By default, the special keyboard feature is based on the factory definition. You can decide whether to apply the special keyboard feature. Refer to [Keyboard Wedge Table](#).

\*Apply



Bypass



## 2.5 USB VIRTUAL COM VIA 3610

Connect 3610 to the USB port of PC, and then connect the scanner to 3610. You may run HyperTerminal.exe on the computer to view and capture the data transmission from the scanner.

### 2.5.1 ACTIVATE USB VIRTUAL COM

Activate 3610  
USB Virtual COM



Note: If you are using USB Virtual COM for the first time, you must install its driver from the CD-ROM. Driver version 5.4 or later is required. Please remove older versions before installing new ones!

### 2.5.2 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



### 2.5.3 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all attempts fail without any notification, data loss will occur.

ACK/NAK Time-out  
after ... (\*0~99)



100013

- 1) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

### ACK/NAK Error Beep

Enable Error Beep



100015

\*Disable Error Beep



100014

---

Note: We suggest enabling the error beep so that you will be notified of such data loss and have the scanner re-read data.

---





## 2.6 DIRECT USB HID


1663 supports “Direct” USB HID interface for memory mode. Use the provided USB cable to connect 1663 to the USB port of PC. Run any text editor on a computer to view and capture the scanned data being transmitted to the computer. Refer to [1.2.2 Memory Mode](#).

| HID Settings          | Defaults            |
|-----------------------|---------------------|
| Keyboard Type         | HID PCAT (US)       |
| Numeric Layout        | Normal              |
| Capital Lock Type     | Normal              |
| Capital Lock State    | OFF                 |
| Alphabet Transmission | Case Sensitive      |
| Numeric Transmission  | Alphanumeric Keypad |
| Inter-Character Delay | 0 (ms)              |
| Inter-Function Delay  | 0 (ms)              |



## 2.6.1 ACTIVATE USB HID & SELECT KEYBOARD TYPE

When USB HID interface is activated, please select a keyboard type to complete this setting.

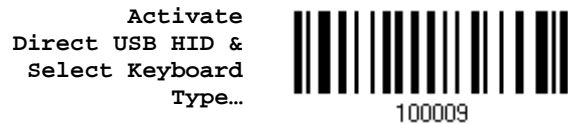

- 1) Read the barcode above to activate USB HID and select a keyboard type.
- 2) Read the “[Decimal Value](#)” barcode page 219 . Refer to the table below for the number of desired keyboard type.
- 3) Read the “Validate” barcode on the same page to complete this setting.

### USB HID

By default, the keyboard type is set to PCAT (US). The following keyboard types are supported —

| No. | Keyboard Type    | No. | Keyboard Type         |
|-----|------------------|-----|-----------------------|
| 64  | PCAT (US)        | 72  | PCAT (Spanish)        |
| 65  | PCAT (French)    | 73  | PCAT (Portuguese)     |
| 66  | PCAT (German)    | 74  | PS55 A01-2 (Japanese) |
| 67  | PCAT (Italy)     | 75  | User-defined table    |
| 68  | PCAT (Swedish)   | 76  | PCAT (Turkish)        |
| 69  | PCAT (Norwegian) | 77  | PCAT (Hungarian)      |
| 70  | PCAT (UK)        | 78  | PCAT (Swiss German)   |
| 71  | PCAT (Belgium)   | 79  | PCAT (Danish)         |



## 2.6.2 KEYBOARD SETTINGS

- ▶ Alphabet Layout
- ▶ Numeric Layout
- ▶ Capital Lock Type
- ▶ Capital Lock Setting
- ▶ Alphabet Transmission
- ▶ Numeric Transmission

### Alphabet Layout

By default, the alphabet layout is set to normal mode, also known as the standard English layout. Select French or German keyboard layout if necessary. The scanner will make adjustments when sending the "A", "Q", "W", "Z", "Y", and "M" characters according to this setting.




Note: This setting only works when the keyboard type selected is US keyboard, such as PCAT (US). The Alphabet Layout and Numeric Layout setting must match using keyboard.



**US Keyboard Style – Normal**


QWERTY layout, which is normally used in western countries.

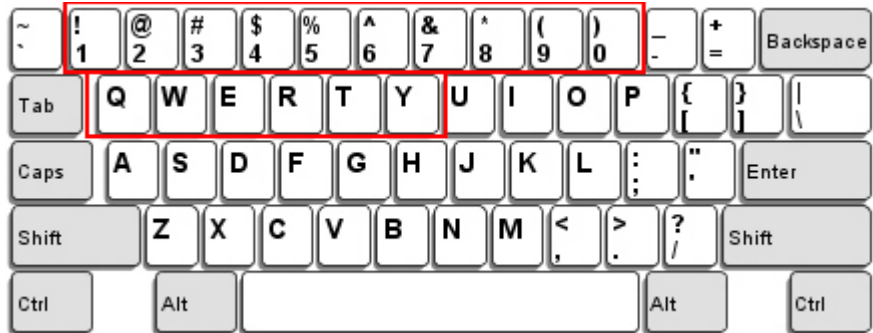

- ▶ Select “Lower Row” for the “Numeric Layout” setting for the upper row is for special characters.

**French Keyboard Style – AZERTY**


French layout; see below for French Keyboard Style.

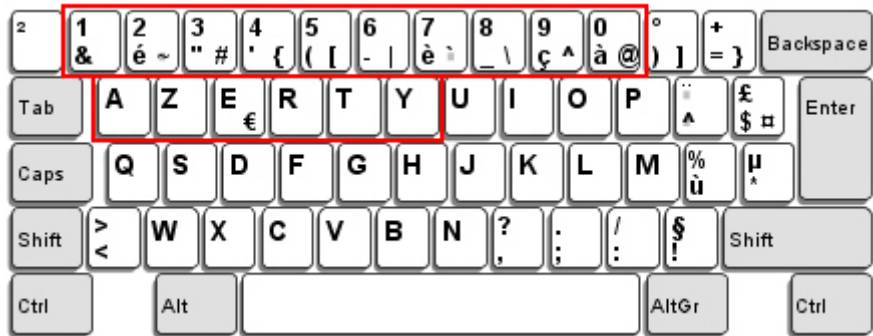

- ▶ Select “Upper Row” for the “Numeric Layout” setting for the lower row is for special characters.

**German Keyboard Layout – QWERTZ**

German layout; see below for German Keyboard Style.

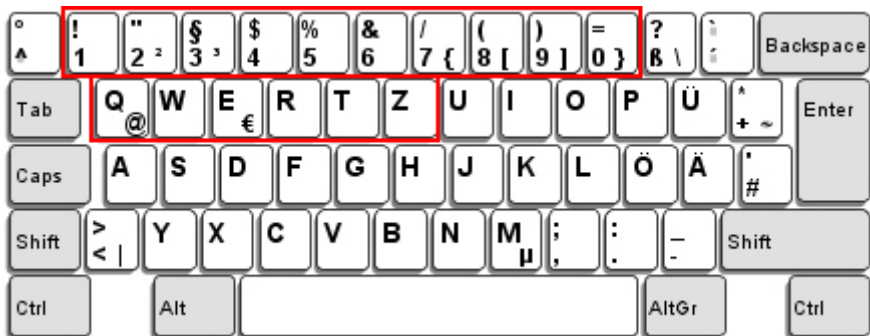


- ▶ Select “Lower Row” for the “Numeric Layout” setting for the upper row is for special characters.



### Numeric Layout

Select a proper layout that matches the alphabet layout. The scanner will make adjustments according to this setting.

| Options   | Description  |
|-----------|--|
| Normal    | Depends on the [Shift] key or [Shift Lock] setting |
| Lower Row | For QWERTY or QWERTZ keyboard                      |
| Upper Row | For AZERTY keyboard                                |

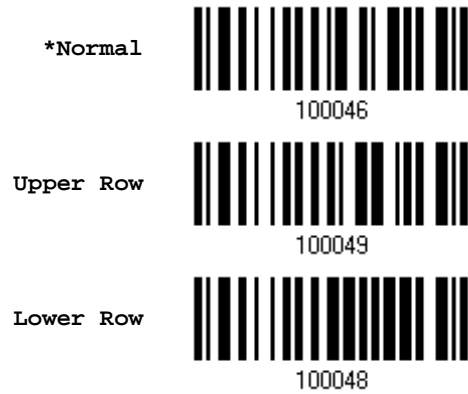


Note: This setting is to be used with the Character Substitution setting when support for certain keyboard types (languages) is unavailable but required.



**Capital Lock Type & Setting**

In order to send the alphabet with correct case, the scanner needs to know the status of Caps Lock on the keyboard. Incorrect settings may result in reversed case of the alphabet being transmitted.


| Cap Lock Type | Description   |
|---------------|---|
| Normal        | Normal type   |
| Capital Lock  | When enabled, the keys of alphabetic characters will be interpreted as capital letters. However, this does not affect the number or punctuation keys. |
| Shift Lock    | When enabled, the keys of alphabetic characters will be interpreted as capital letters. In addition, this affects the number or punctuation keys.     |

\*Normal   
100042

Shift Lock   
100045

Capital Lock   
100044

| Capital Lock State                                      | Description  |
|---|--|
| Capital Lock OFF  | Assuming that the status of Caps Lock on the keyboard is OFF, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).   |
| Capital Lock ON   | Assuming that the status of Caps Lock on the keyboard is ON, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).<br>▶ Refer to the Capital Lock Type above.   |
| Auto Detection<br>(suggested use for most applications) | The scanner will automatically detect the status of Caps Lock on the keyboard before data is transmitted; transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission). |

Auto Detect   
100054

Capital Lock ON   
100053



\*Capital Lock OFF




100052



**Alphabet Transmission**


By default, the alphabet transmission is case-sensitive, meaning that the alphabet will be transmitted according to the original case, the status of Caps Lock on the keyboard, as well as the Capital Lock setting. Select [Ignore Case] to have alphabet transmitted according to the status of Caps Lock on the keyboard only.

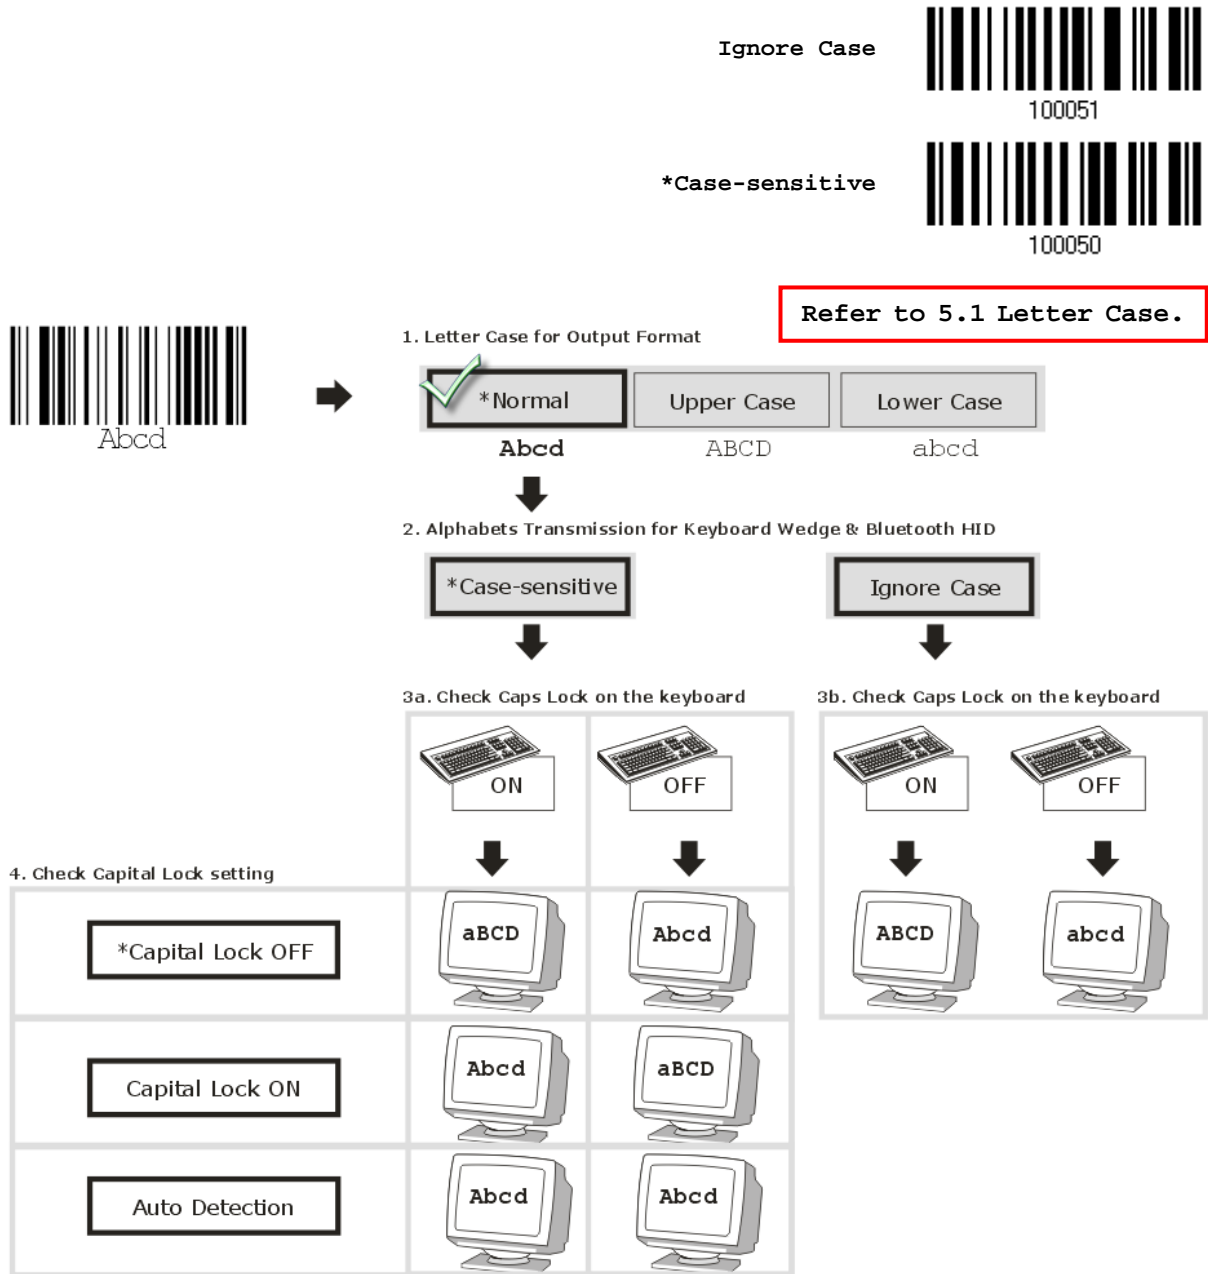



**Numeric Transmission**

By default, the alphanumeric keypad is used for transmitting numerics. Select “Numeric Keypad” if want to use the keys on the numeric keypad.

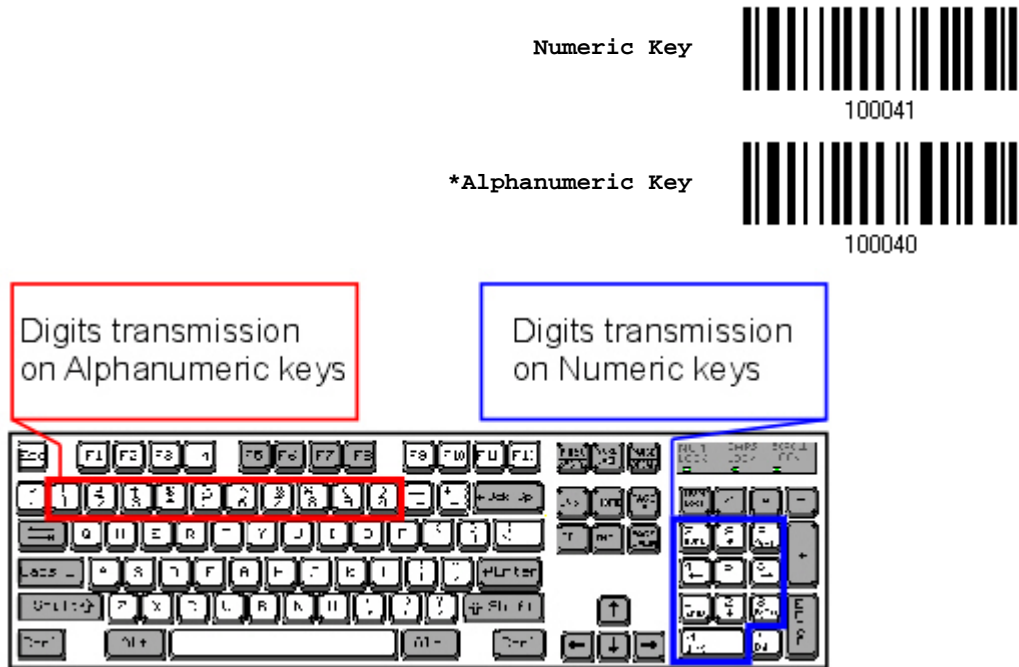

Note: If selecting “Numeric Keypad”, the Num Lock status of the physical keyboard should be “ON”.

**2.6.3 INTER-CHARACTER DELAY**

By default, the inter-character delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every character being transmitted. The longer the delay time is, the slower the transmission speed will be.



- 1) Read the barcode above to specify the inter-character delay.
- 2) Read the “[Decimal Value](#)” barcode on page 219 for the desired inter-character delay (in milliseconds).
- 3) Read the “Validate” barcode on the same page to complete this setting.



## 2.6.4 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.

## 2.6.5 HID CHARACTER TRANSMIT MODE

By default, HID interface sends data to the host in batch, or use the scanner to read the "By Character" barcode to process data one character at a time.

\*Batch Processing



By Character



## 2.6.6 SPECIAL KEYBOARD FEATURE

By default, the special keyboard feature is based on the factory definition. You can decide whether to apply the special keyboard feature. Refer to [Keyboard Wedge Table](#).

\*Apply



Bypass



## 2.7 DIRECT USB VIRTUAL COM

1663 supports "Direct" USB Virtual COM interface for memory mode. Use the provided USB cable to connect 1663 to the USB port of PC. You may run HyperTerminal.exe on a computer to view and capture the scanned data being transmitted to the computer. Refer to [1.2.2 Memory Mode](#).

### 2.7.1 ACTIVATE USB VIRTUAL COM

\*Activate Direct USB  
Virtual COM



100008

Note: If using USB Virtual COM for the first time, install its driver from the CD-ROM. Driver version 5.4 or later is required. Please remove older versions before installing new ones!

### 2.7.2 AVTIVATE USB VIRTUAL COM\_CDC

\*Activate Direct USB  
Virtual COM\_CDC



100010

Note: If using USB Virtual COM for the first time, install its driver from the CD-ROM.

### 2.7.3 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function  
Delay... (\*0~254)



100012

- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



### 2.7.3 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all attempts fail without any notification, data loss will occur.

ACK/NAK Time-out  
after ... (\*0~99)



100013

- 1) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 219. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

### ACK/NAK Error Beep

Enable Error Beep



100015

\*Disable Error Beep



100014

---

Note: We suggest enabling the error beep so that data loss is notified and the scanner re-read data.


---



## SET UP A WPAN CONNECTION

The scanner can be configured to send data to a host computer wirelessly via the 3610 dongle, or to a notebook computer or PDA with *Bluetooth*<sup>®</sup> wireless technology. Upon powering up, the scanner will be ready to establish a WPAN connection.

To establish a connection via 3610 after reading “Set Connection” and “Serial No.” barcodes ...

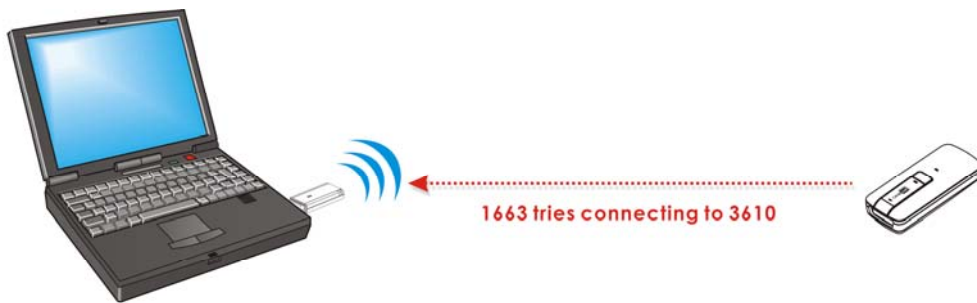

| Interface Option | Reference                                    |
|------------------|--|
| USB HID          | <a href="#">2.4 USB HID via 3610</a>         |
| USB Virtual COM  | <a href="#">2.5 USB Virtual COM via 3610</a> |

To establish a connection via *Bluetooth*<sup>®</sup> dongle after pairing...



| Interface Option           | Reference   |
|----------------------------|---|
| Bluetooth <sup>®</sup> HID | <a href="#">2.1 Bluetooth<sup>®</sup> HID</a>   |
| Bluetooth <sup>®</sup> SPP | <a href="#">2.2 Bluetooth<sup>®</sup> SPP Slave, 2.3 Bluetooth<sup>®</sup> SPP Master</a> |

### IN THIS CHAPTER

|   |     |
|---|-----|
| 3.1 Connecting via 3610 .....                                 | 98  |
| 3.2 Connecting via <i>Bluetooth</i> <sup>®</sup> Dongle ..... | 100 |



## 3.1 CONNECTING VIA 3610

By default, the interface of 3610 is set to "USB HID". You can have up to seven scanners connected to one computer at the same time.

---

Note: If you are using USB Virtual COM for the first time, you must install its driver from the CD-ROM. Driver version 5.4 or later is required. Please remove older versions!

---

### 3.1.1 CONNECT TO 3610

Connect any scanner to 3610 by reading the two labels at the back of 3610. The scanner will respond with one beep upon reading each of the labels.

- ▶ "Set Connection" label
- ▶ "Serial Number" label

After reading these labels, the scanner will stay active for a specified period of time (2 minutes by default) trying to connect to the 3610 while its LED is flashing blue (On/Off ratio 0.5 s: 0.5 s). Once connected, the scanner will respond with three beeps (tone ascending from low to high), and the LED flashes blue (On/Off ratio 0.02 s: 3 s). When out of range, the scanner will respond with three short beeps (tone descending from high to low).

Read the "Set Connection" barcode first, and then the "Serial Number" barcode. If the "Set Connection" barcode on 3610 is illegible, try this one —

Set Connection



88686471166254

---

Note: The 3610 settings will overwrite the interface-related settings on the scanners that are currently connected to 3610.


---



### 3.1.2 CHANGE INTERFACE

If you want to change the communication interface of 3610, use one of the connected scanners to configure the interface-related settings and the scanner will pass the new settings to 3610, which will then initialize and pass the settings to other connected scanners.

- 1) Read the "Set Connection" and "Serial Number" barcodes at the back of 3610.
- 2) Within two minutes, connect 3610 to the USB port of PC. For USB Virtual COM, you will need to install its driver first!
- 3) Scanners will connect to the computer via 3610.
- 4) Read the "Enter Setup" barcode to enter the configuration mode.
- 5) Read the desired interface barcode and configure its related settings –
  - ▶ "Activate USB HID & Select Keyboard Type"
  - ▶ "Activate USB Virtual COM"
- 6) Read the "Update" barcode to exit the configuration mode.
- 7) After the scanner resumes connection with 3610, it will pass the interface-related settings to 3610.
- 8) Upon receipt of the new settings, 3610 will initialize itself.
- 9) Updated with new settings, 3610 will pass the settings to other connected scanners.

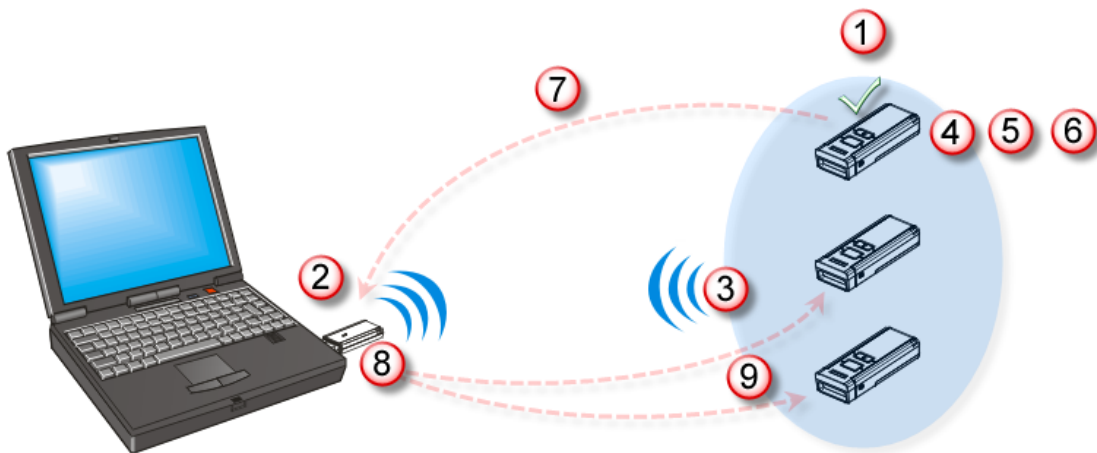

## 3.2 CONNECTING VIA *BLUETOOTH*<sup>®</sup> DONGLE

### 3.2.1 CHANGE INTERFACE

Below is the procedure to configure the scanner before establishing a WPAN connection via *Bluetooth*<sup>®</sup> dongle.

- 1) Read the "Enter Setup" barcode to enter the configuration mode.
- 2) Read the desired interface barcode –
  - ▶ "Activate *Bluetooth*<sup>®</sup> HID & Select Keyboard Type"
  - ▶ "Activate *Bluetooth*<sup>®</sup> SPP Slave Mode"
  - ▶ "Activate *Bluetooth*<sup>®</sup> SPP Master Mode"
- 3) Read the barcodes related to WPAN settings, such as Device Name Broadcasting, Authentication & PIN Code, etc.
- 4) Read the "Update" barcode to exit the configuration mode.
- 5) The scanner will stay active for a specified period of time (2 minutes by default) waiting for a connection request from the host (SPP Slave Mode) or trying to connect to the host (HID or SPP Master Mode). Its CPU is running at full speed, and the LED is flashing blue (On/Off ratio 0.5 s: 0.5 s).

Once connected, when out of range, the scanner will respond with three short beeps (tone descending from high to low).





### 3.2.2 CONFIGURE RELATED SETTINGS

#### Sniff Mode (Power-saving)

By default, this feature is enabled, meaning the scanner will listen to the wireless network at a reduced rate.



Note: When connecting more than two scanners to a notebook computer or PDA with *Bluetooth*<sup>®</sup> wireless technology, we suggest that you disable the power-saving setting for a more reliable connection.

#### Device Name Broadcasting

The scanner can be configured to hide itself from other devices equipped with *Bluetooth*<sup>®</sup> wireless technology. Simply disable the device name broadcasting setting so that it won't be discovered by any other computer or PDA. However, broadcasting must be enabled for establishing an initial connection with the scanner. For example, disable device name broadcasting after successfully connecting the scanner to WorkStation1. Such connection will be maintained automatically unless the scanner is removed from the paired device list (called unpairing) by WorkStation1 or any changes made to authentication and PIN code. If you want WorkStation2 to connect to the scanner, you have to enable device name broadcasting first.



Note: By default, device name broadcasting is enabled (which is required for initial connection).



## Authentication

---

When any changes are made to authentication and PIN code on the scanner side, you will have to remove the scanner from the paired device list (called unpairing) and go through the whole process to re-establish the connection.

The scanner allows up to 16 characters for a PIN code and provides two options for authentication:

### Enable Authentication with Preset PIN

---

Read the "Use preset PIN" barcode, and change the preset PIN if necessary. This means you will have to enter exactly the same string for your computer or PDA to connect to the scanner. If the PIN or passkey is incorrect, any connection attempt will be turned down by the scanner. See step 8 in [3.2.3 Connect to Dongle](#).

- 1) Read the "Use preset PIN" barcode to enable authentication with a preset PIN.



- 2) Read one of the barcodes to specify the PIN code, in decimal or hexadecimal.  
By default, the PIN code is set to "0000". Maximum 16 characters are allowed.



- 3) Read the "[Decimal Value](#)" barcode on page 219 or the "[Hexadecimal Value](#)" barcode on page 220 for the desired digits or character string.

Read the "Clear PIN Code" barcode first if you need to re-input the PIN code.




- 4) Read the "Validate" barcode to complete this setting.

### Enable Authentication with Random PIN or No Authentication

---

By default, it is set to "No PIN or use random PIN", which depends on the setting of the target device. (No PIN = No authentication.)



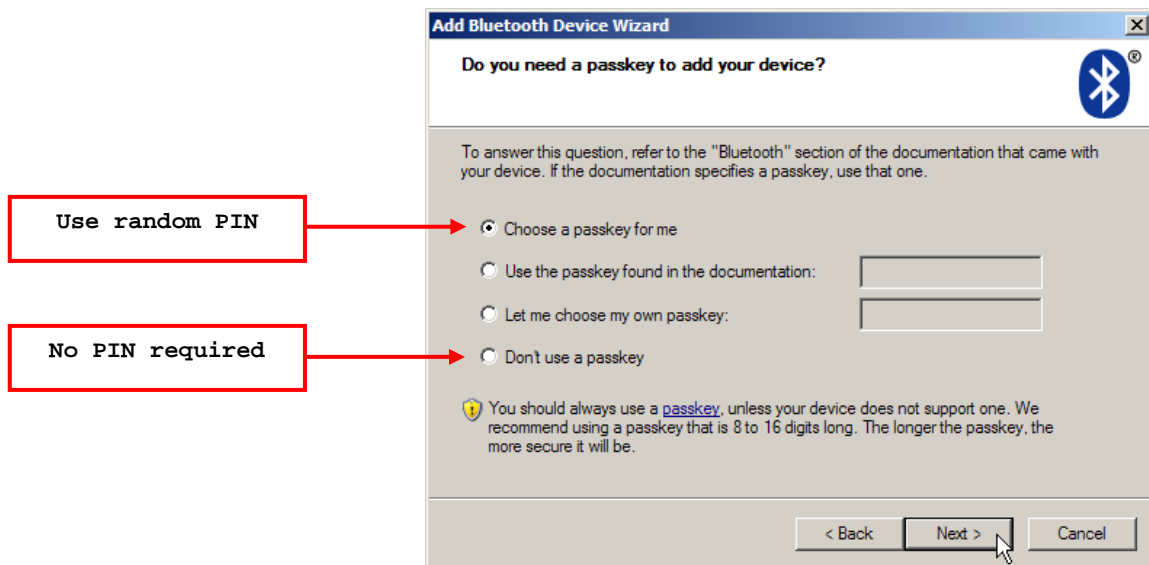

Note: When using *Bluetooth*<sup>®</sup> HID, some device driver may not support pre-defined PIN code for authentication. In this case, make sure you have the scanner set to "No PIN or use random PIN" before pairing. While pairing, the host PIN code will be displayed on the computer screen. Have the scanner read the setup barcode "Enter PIN Code in Decimal" or "Enter PIN Code in Hexadecimal" to input the matching PIN code. Refer to [Disable Authentication or Use Random PIN](#).



### 3.2.3 CONNECT TO DONGLE


The procedure goes through associating devices for establishing a WPAN connection, which is pretty much the same except for the software you are using. If your computer is running Microsoft® Windows® XP (SP1 to SP3), Windows Vista® Service Pack 1 (SP1) and Windows 7, you can use the software support that Windows® includes, or you can use the driver that the device manufacturer provides. Now, let's try using the software support that Windows® XP Service Pack 2 includes.


#### **Bluetooth® HID Procedure**

By default, *Bluetooth*® HID is activated on the scanner, and the keyboard type is set to PCAT (US). When *Bluetooth*® HID is re-activated, you will have to select a keyboard type to complete this setting.

The procedure is the same as for *Bluetooth*® SPP. Refer to steps 1~11 below.

#### **Bluetooth® SPP Procedure**

- 1) Turn on the *Bluetooth*® function on your computer, running Windows XP SP2.
- 2) Double-click the *Bluetooth*® icon from the lower right of the taskbar.  Alternatively, you may go to **Control Panel > Bluetooth Devices**.
- 3) Click [Add] to search devices nearby.

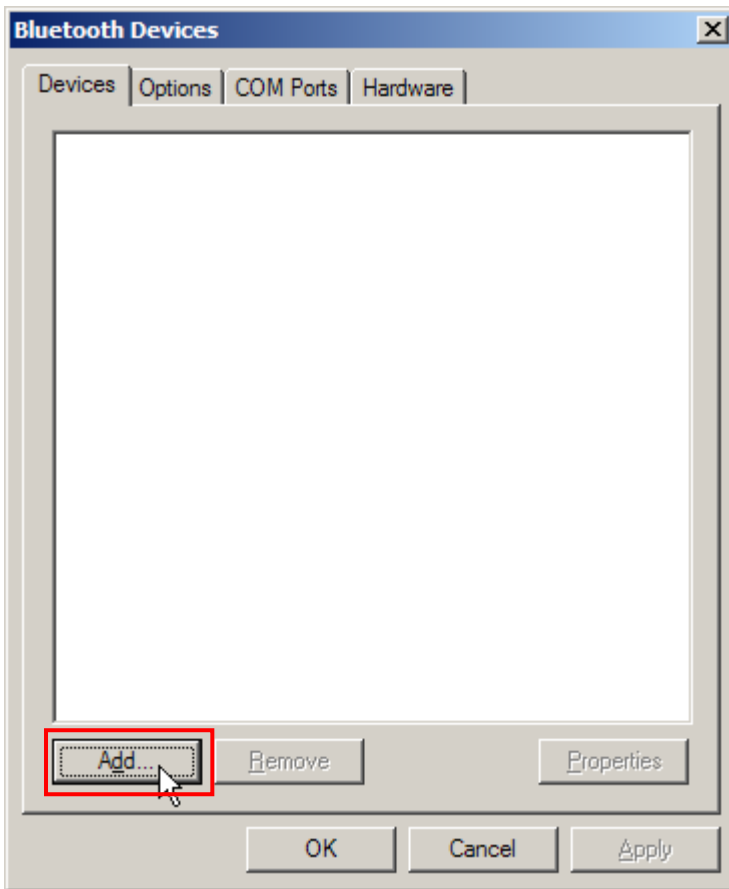

- 4) Turn on the scanner with correct WPAN settings, such as select *Bluetooth*<sup>®</sup> SPP or *Bluetooth*<sup>®</sup> HID, broadcasting enabled, authentication enabled, and PIN code specified, etc. Select the check box of [My device is set up and ready to be found] on your computer.
- 5) Click [Next].




- 6) Wait for a few seconds for the Wizard to search available devices nearby.

The scanner will appear with its "serial number" as the device name. You may double-check the "Serial Number" label on the scanner to ensure connecting with the correct scanner. Select the target scanner. If the target scanner does not appear on the list, click [Search Again] to refresh the list. The scanner might enter Suspend Mode now, and you can press the trigger to have it active again (=discoverable). It will then stay active for a specified period of time (2 minutes by default) and wait for PC to establish a connection.





- 7) Click [Next].

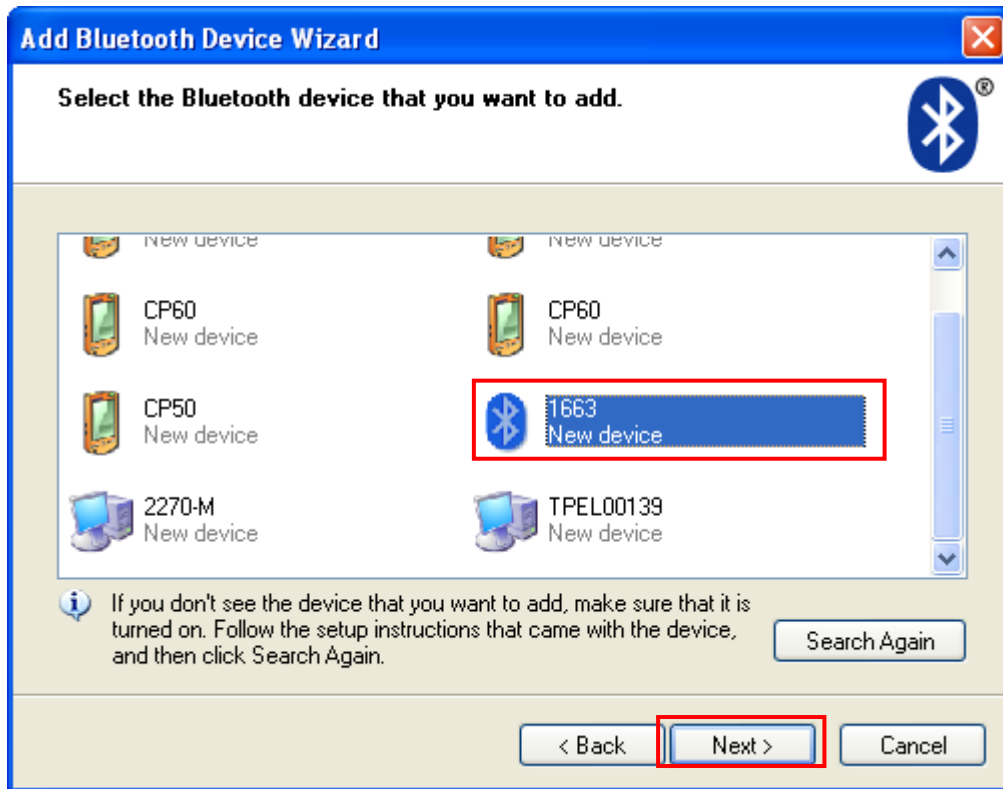

- 8) Enter the passkey for authentication, which must be exactly the same as configured for the scanner.




- 9) Click [Next]. Wait for a few seconds for Windows to exchange passkeys.

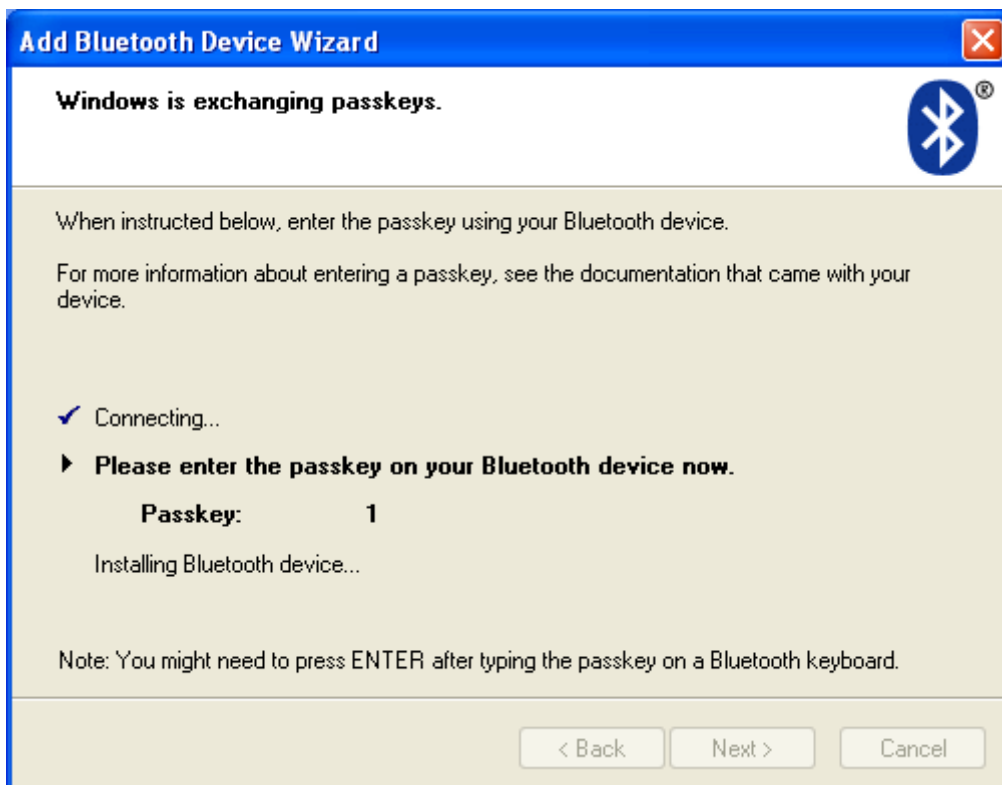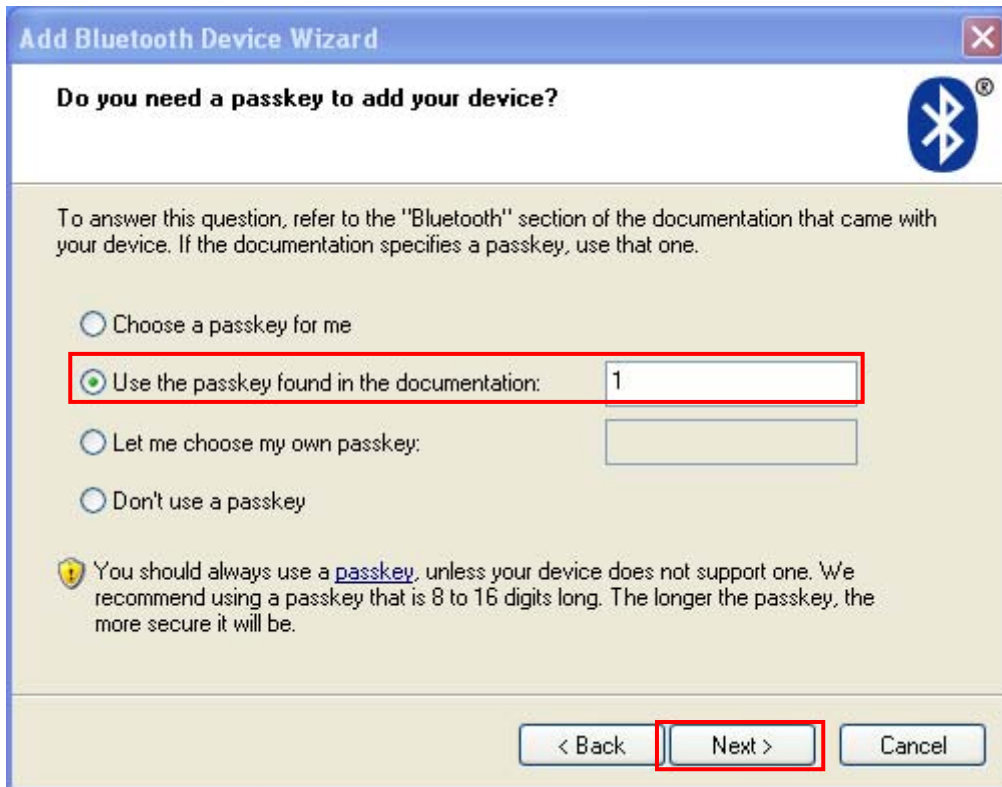

Note: When *Bluetooth* security is enabled without providing a pre-set PIN code, dynamic input of PIN code is supported.


10) Click [Finish].

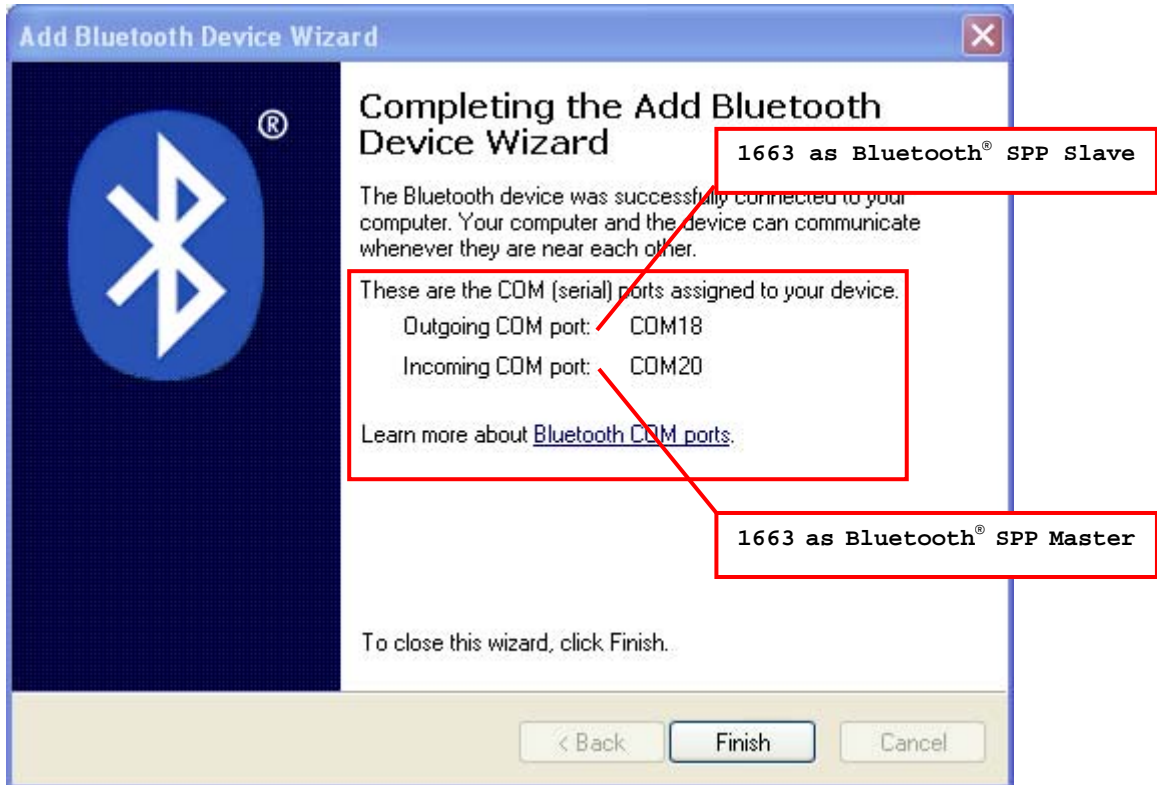



11) Now the target scanner will be listed as below.

You can have up to seven scanners connected to one computer at the same time.

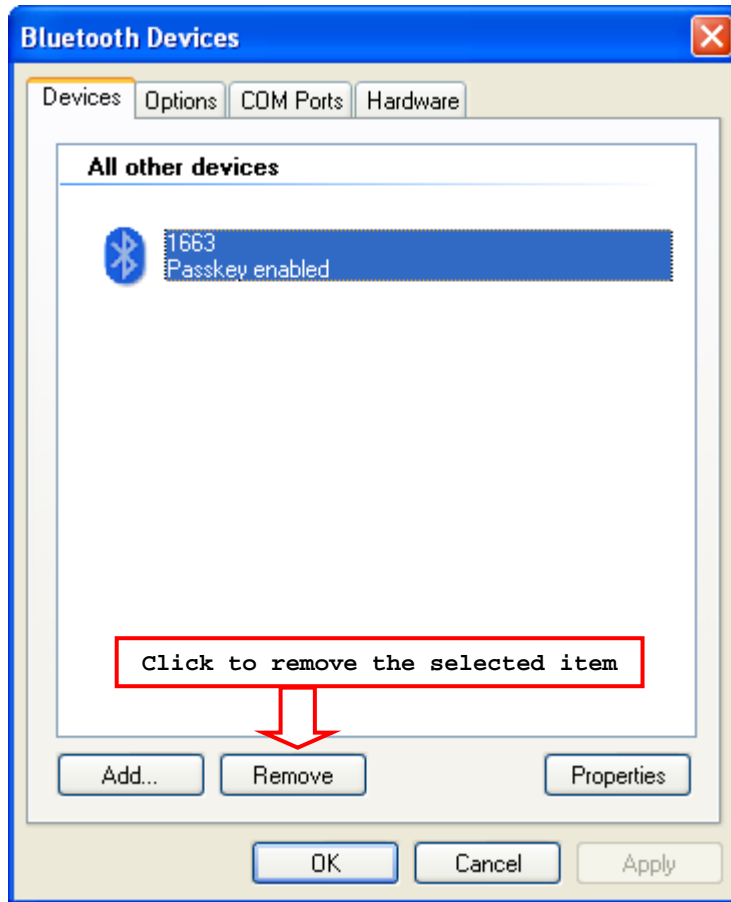



Note: When any changes are made to authentication and PIN code on the scanner side, or you want to change to use *Bluetooth*<sup>®</sup> HID, it is suggested that you remove the scanner from the paired device list (called unpairing) and go through the whole process to re-establish the connection.

12) Run the desired application on your computer, such as HyperTerminal.exe if using *Bluetooth*<sup>®</sup> SPP or Notepad.exe if using *Bluetooth*<sup>®</sup> HID.

The status of the scanner listed on the device list will be updated to "Connected", indicating the WPAN connection is established successfully via the outgoing COM port if using *Bluetooth*<sup>®</sup> SPP.

Note: Even though the scanner is connected to the host with authentication disabled (= no PIN code required), the host may still request a PIN code while the application is opening COM port. Dynamic input of PIN code is supported so that you may input a matching PIN code on the scanner. Refer to [Disable Authentication or Use Random PIN](#).



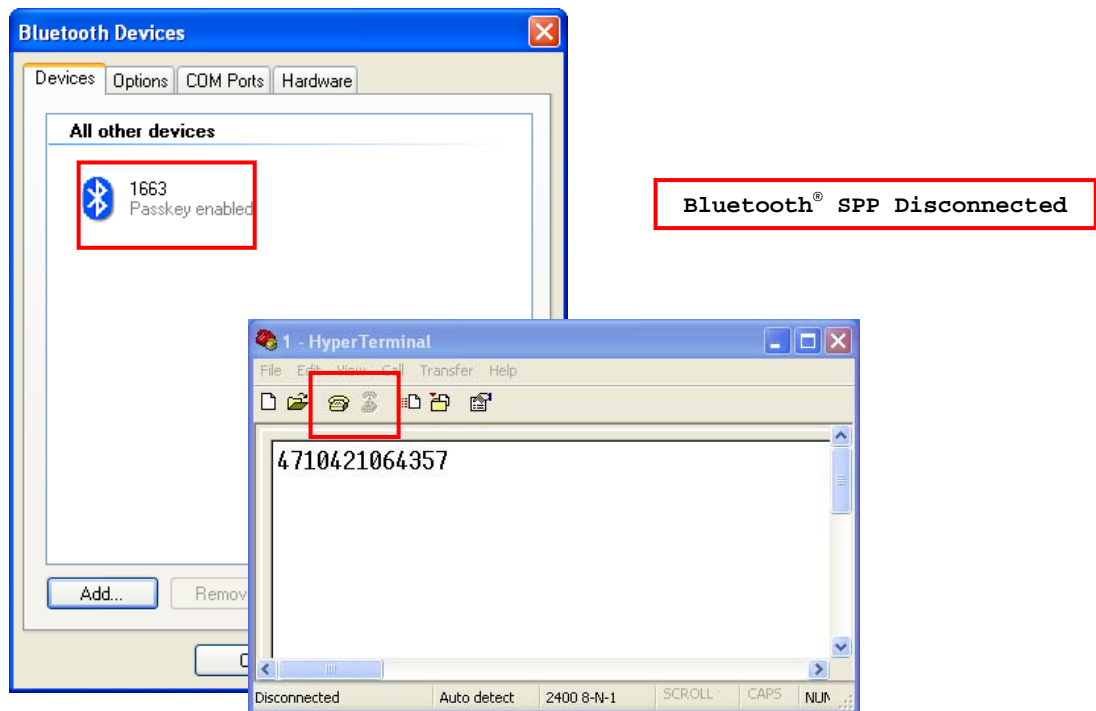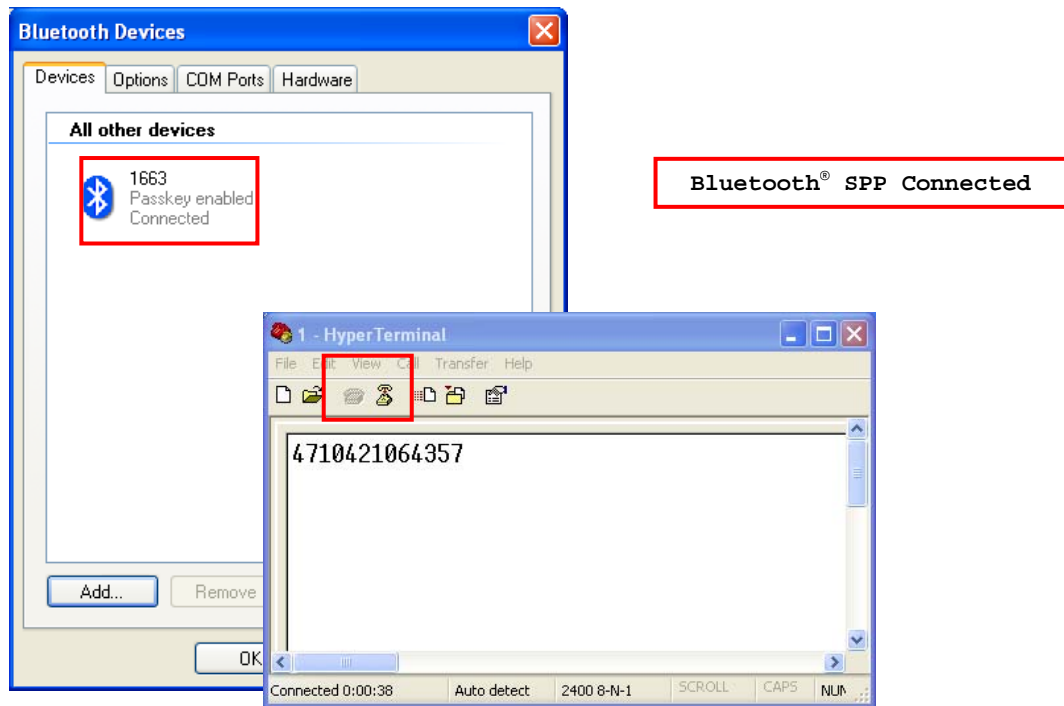

## CHANGE SYMBOLOGY SETTINGS

---

In this chapter, a brief on the symbology settings is provided for your reference.

### IN THIS CHAPTER

---

|                                     |     |
|-------------------------------------|-----|
| 4.1 Codabar .....                   | 112 |
| 4.2 Code 25 – Industrial 25 .....   | 114 |
| 4.3 Code 25 – Interleaved 25.....   | 117 |
| 4.4 Code 25 – Matrix 25.....        | 120 |
| 4.5 Code 39 .....                   | 123 |
| 4.6 Code 93 .....                   | 125 |
| 4.7 Code 128.....                   | 125 |
| 4.8 EAN-8 .....                     | 126 |
| 4.9 EAN-13 .....                    | 128 |
| 4.10 GS1-128 (EAN-128) .....        | 131 |
| 4.11 ISBT 128 .....                 | 132 |
| 4.12 MSI.....                       | 133 |
| 4.13 French Pharmacode.....         | 135 |
| 4.14 Italian Pharmacode .....       | 136 |
| 4.15 Plessey .....                  | 137 |
| 4.16 GS1 DataBar (RSS Family) ..... | 138 |
| 4.17 Telepen .....                  | 143 |
| 4.18 UPC-A .....                    | 144 |
| 4.19 UPC-E .....                    | 146 |




## 4.1 CODABAR



### 4.1.1 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading CodaBar barcodes.

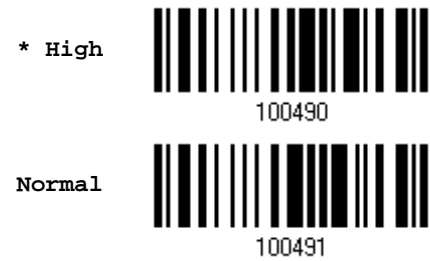

### 4.1.2 START/STOP CHARACTERS SELECTION

Select one of the four different start/stop character pairs –




### 4.1.3 START/STOP TRANSMISSION

Decide whether to include the start/stop characters in the data being transmitted.



### 4.1.4 CLSI CONVERSION

When enabled, the CLSI editing strips the start/stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar barcode.

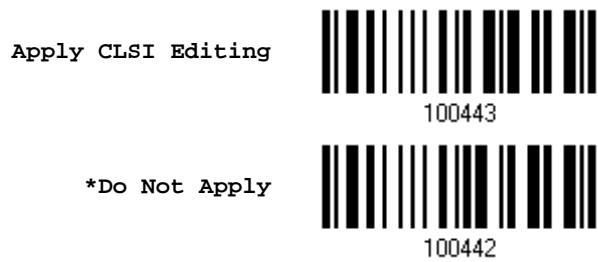

Note: The 14-character barcode length does not include start/stop characters.



## 4.2 CODE 25 – INDUSTRIAL 25

**\*Enable**



100307

**Disable**



100306

### 4.2.1 START/STOP PATTERN SELECTION

This decides the readability of all 2 of 5 symbology variants. For example, flight tickets actually use an Industrial 2 of 5 barcode but with Interleaved 2 of 5 start/stop pattern. In order to read this barcode, the start/stop pattern selection parameter of Industrial 2 of 5 should set to "Interleaved 25".

**\*Industrial 25  
Start/Stop Pattern**



100412

**Interleaved 25  
Start/Stop Pattern**



100413

**Matrix 25  
Start/Stop Pattern**



100414



### 4.2.2 VERIFY CHECK DIGIT

Decide whether to verify the check digit. If incorrect, the barcode will not be accepted.

Verify Industrial 25  
Check Digit



100425

\*Do Not Verify



100424

### 4.2.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit  
Industrial 25  
Check Digit



100427

Do Not Transmit



100426



## 4.2.4 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
  - ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.
- 6) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (0~127)...



100601

Enable Fixed  
Length(s)...



100600

- 7) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.  
Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*127) or  
Fixed Length 1



100602

Min. Length (\*4) or  
Fixed Length 2



100603

- 8) Read the "[Decimal Value](#)" barcode on page 219 for the desired length.  
9) Read the "Validate" barcode on the same page to complete this setting.





### 4.3 CODE 25 – INTERLEAVED 25

\*Enable



100309

Disable



100308

#### 4.3.1 START/STOP PATTERN SELECTION

This decides the readability of all 2 of 5 symbology variants. For example, flight tickets actually use an Industrial 2 of 5 barcode but with Interleaved 2 of 5 start/stop pattern. In order to read this barcode, the start/stop pattern selection parameter of Industrial 2 of 5 should be set to "Interleaved 25".

Industrial 25  
Start/Stop Pattern



100416

\*Interleaved 25  
Start/Stop Pattern



100417

Matrix 25  
Start/Stop Pattern



100418



### 4.3.2 VERIFY CHECK DIGIT

Decide whether to verify the check digit. If incorrect, the barcode will not be accepted.

Verify  
Interleaved 25  
Check Digit



100429

\*Do Not Verify



100428

### 4.3.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit  
Interleaved 25  
Check Digit



100431

Do Not Transmit



100430



### 4.3.4 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

10) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (0~127)...



100605

Enable Fixed  
Length(s)...



100604

11) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*126) or  
Fixed Length 1



100606

Min. Length (\*4) or  
Fixed Length 2



100607

12) Read the "[Decimal Value](#)" barcode on page 219 for the desired length.

13) Read the "Validate" barcode on the same page to complete this setting.



## 4.4 CODE 25 – MATRIX 25

Enable



100311

\*Disable



100310

### 4.4.1 START/STOP PATTERN SELECTION

This decides the readability of all 2 of 5 symbology variants. For example, flight tickets actually use an Industrial 2 of 5 barcode but with Interleaved 2 of 5 start/stop pattern. In order to read this barcode, the start/stop pattern selection parameter of Industrial 2 of 5 should set to "Interleaved 25".

Industrial 25  
Start/Stop Pattern



100420

Interleaved 25  
Start/Stop Pattern



100421

\*Matrix 25  
Start/Stop Pattern



100422



### 4.4.2 VERIFY CHECK DIGIT

Decide whether to verify the check digit. If incorrect, the barcode will not be accepted.

Verify Matrix 25  
Check Digit



100433

\*Do Not Verify



100432

### 4.4.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit Matrix 25  
Check Digit



100435

Do Not Transmit



100434



#### 4.4.4 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

14) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

\*Enable Max./Min.  
Length (0~127)...



100609

Enable Fixed  
Length(s)...



100608

15) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (\*127) or  
Fixed Length 1



100610

Min. Length (\*4) or  
Fixed Length 2



100611

16) Read the "[Decimal Value](#)" barcode on page 219 for the desired length.

17) Read the "Validate" barcode on the same page to complete this setting.



## 4.5 CODE 39

**\*Enable**



100301

**Disable**



100300

### 4.5.1 START/STOP TRANSMISSION

Decide whether to include the start/stop characters in the data being transmitted.

**Transmit Code 39  
Start/Stop  
Characters**



100403

**\*Do Not Transmit**



100402

### 4.5.2 VERIFY CHECK DIGIT

Decide whether to verify check digit. If incorrect, the barcode will not be accepted.

**Verify Code 39  
Check Digit**



100405

**\*Do Not Verify**




100404




### 4.5.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

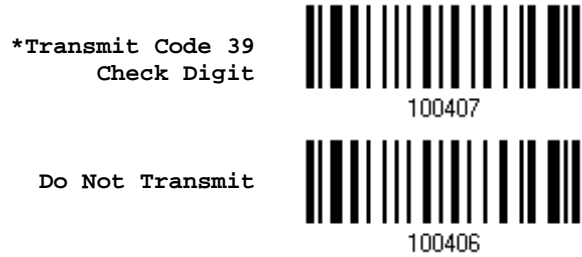


### 4.5.4 STANDARD/FULL ASCII CODE 39

Decide whether to support Code 39 Full ASCII that includes all the alphanumeric and special characters.

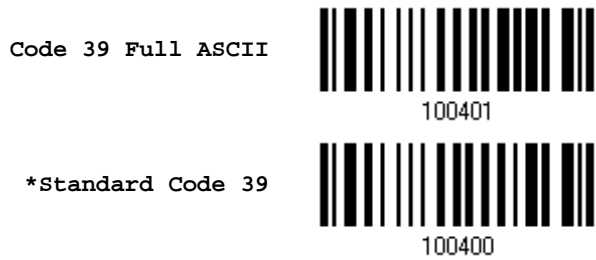

### 4.5.5 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading Code 39 barcodes.

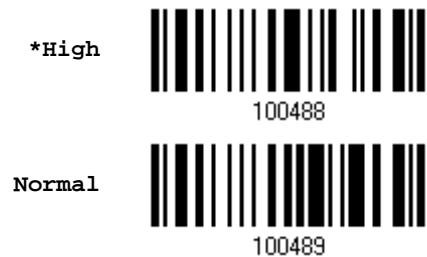



## 4.6 CODE 93

**\*Enable**



100315

**Disable**



100314

## 4.7 CODE 128

**\*Enable**



100317

**Disable**



100316

### 4.7.1 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading Code 128 barcodes.

**\*High**



100492

**Normal**



100493



## 4.8 EAN-8

### EAN-8

\*Enable EAN-8  
(No Addon)



100327

Disable



100326

### EAN-8 Addon 2

Enable EAN-8 Addon 2



100329

\*Disable



100328

### EAN-8 Addon 5

Enable EAN-8 Addon 5



100331

\*Disable




100330



### 4.8.1 CONVERT TO EAN-13


Decide whether to expand the read EAN-8 barcode, as well as its addons, into EAN-13.

- ▶ After conversion, the data follows EAN-13 format and is affected by EAN-13 programming selections (e.g. Check Digit).

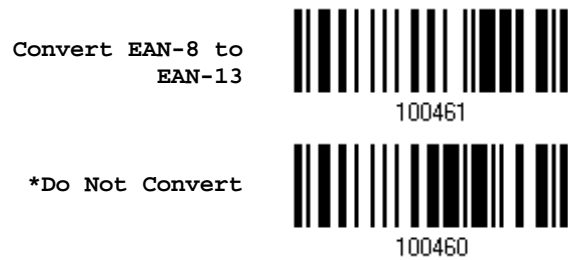

### 4.8.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

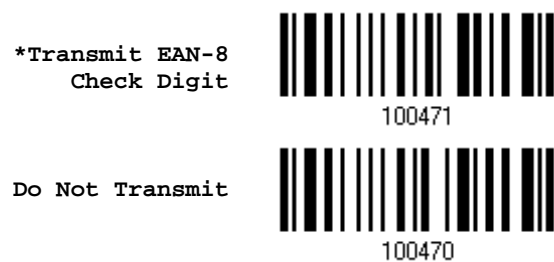

## 4.9 EAN-13

### EAN-13

**\*Enable EAN-13  
(No Addon)**



100333

**Disable**



100332

### EAN-13 Addon 2

**Enable EAN-13 Addon 2**



100335

**\*Disable**



100334

### EAN-13 Addon 5

**Enable EAN-13 Addon 5**



100337

**\*Disable**




100336




### 4.9.1 ISBN CONVERSION

Decide whether to convert the EAN-13 barcode, starting with 978 and 979, to ISBN.

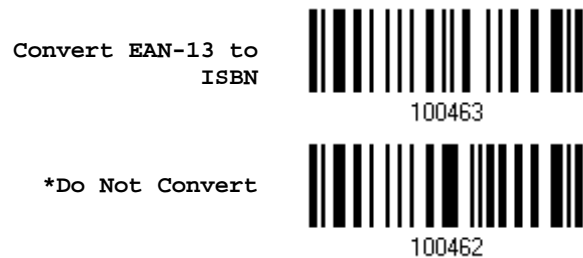


### 4.9.2 ISSN CONVERSION

Decide whether to convert the EAN-13 barcode, starting with 977 to ISSN.

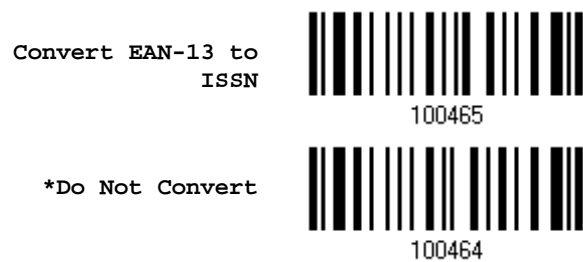

### 4.9.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

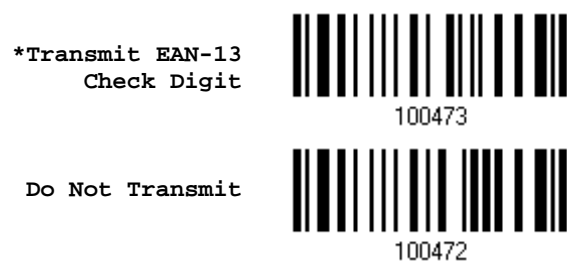

#### 4.9.4 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading EAN-13 barcodes.

Normal



\*High



## 4.10 GS1-128 (EAN-128)

**\*Enable**



100319

**Disable**



100318

Note: GS1-128 barcodes can be decoded only when this setting is enabled. However, for 1660 with firmware version no later than 1.30, GS1-128 barcodes are taken as Code 128 when this setting is disabled.

### 4.10.1 CODE ID TRANSMISSION

Decide whether to include the Code ID ("1c1") in the data being transmitted.

**Transmit Code ID**



100519

**\*Do Not Transmit**



100518

### 4.10.2 FIELD SEPARATOR (GS CHARACTER)

Decide whether to apply a field separator (to convert the FNC1 control character to human readable character).

**Enable Field  
Separator...**



100616

- 18) Read the barcode above to enable field separator.
- 19) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character string.
- 20) Read the "Validate" barcode to complete this setting.

Note: GS1-128 barcodes start with the FNC1 control character to distinguish themselves from other uses of Code 128. FNC1 is also used to separate data fields in the GS1-128 barcodes.



## 4.11 ISBT 128

**\*Enable**



100355

**Disable**



100354

---

Note: When enabled, it not only can decode single ISBT barcode, but also decode and concatenates pairs of ISBT barcodes.

---





## 4.12 MSI

Enable



100345

\*Disable



100344

### 4.12.1 VERIFY CHECK DIGIT

Select one of the three calculations to verify check digit when decoding barcodes. If incorrect, the barcode will not be accepted.

\*Single Modulo 10



100448

Double Modulo 10



100449

Modulo 10 & 11



100450

### 4.12.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Last Digit Not  
Transmitted



100452

Both Digits  
Transmitted



100453

Both Digits  
Not Transmitted



100454



### 4.12.3 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

21) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

**\*Enable Max./Min.  
Length (0~127)...**



100613

**Enable Fixed  
Length(s)...**



100612

22) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.

Repeat steps 2~4 for Min. Length or Fixed Length 2.

**Max. Length (\*127) or  
Fixed Length 1**



100614

**Min. Length (\*4) or  
Fixed Length 2**



100615

23) Read the "[Decimal Value](#)" barcode on page 219 for the desired length.

24) Read the "Validate" barcode on the same page to complete this setting.



## 4.13 FRENCH PHARMACODE

Enable



100305

\*Disable



100304

### 4.13.1 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit  
French Pharmacode  
Check Digit



100411

Do Not Transmit



100410



## 4.14 ITALIAN PHARMACODE

Enable



100303

\*Disable



100302

### 4.14.1 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit  
Italian Pharmacode  
Check Digit



100409

Do Not Transmit



100408



## 4.15 PLESSEY

Enable



100347

\*Disable



100346

### 4.15.1 CONVERT TO UK PLESSEY

Decide whether to change each occurrence of the character 'A' to character 'X' in the decoded data.

Convert to UK Plessey



100447

\*Do Not Convert



100446

### 4.15.2 TRANSMIT CHECK DIGIT

Decide whether to include the two check digits in the data being transmitted.

\*Transmit Plessey  
Check Digits



100445

Do Not Transmit



100444



## 4.16 GS1 DATABAR (RSS FAMILY)

It is categorized into three groups:

### Group I – GS1 DataBar Omnidirectional (RSS-14)

This group consists of the following:

- ▶ GS1 DataBar Omnidirectional
- ▶ GS1 DataBar Truncated
- ▶ GS1 DataBar Stacked
- ▶ GS1 DataBar Stacked Omnidirectional

### Group II – GS1 DataBar Expanded (RSS Expanded)

This group consists of the following:

- ▶ GS1 DataBar Expanded
- ▶ GS1 DataBar Expanded Stacked

### Group III – GS1 DataBar Limited (RSS Limited)

This group consists of the following:

- ▶ GS1 DataBar Limited

### 4.16.1 CODE ID SELECTION

Select a desired Code ID to use:

- ▶ "je0" (GS1 DataBar Code ID)
- ▶ "jc1" (GS1-128 Code ID)

Use "jc1"



100517

\*Use "je0"



100516



**4.16.2 GS1 DATABAR OMNIDIRECTIONAL (RSS-14)**

Enable RSS-14 &  
RSS Expanded  
(Groups I, II)



\*Disable



The settings below apply to Group I symbologies only:

- ▶ GS1 DataBar Omnidirectional
- ▶ GS1 DataBar Truncated
- ▶ GS1 DataBar Stacked
- ▶ GS1 DataBar Stacked Omnidirectional

**Transmit Code ID**

Decide whether to include the Code ID in the data being transmitted.

\*Transmit RSS-14  
Code ID



Do Not Transmit



**Transmit Application ID**

Decide whether to include the Application ID ("01") in the data being transmitted.

\*Transmit RSS-14  
Application ID



Do Not Transmit



### Transmit Check Digit

---

Decide whether to include the check digit in the data being transmitted.

\*Transmit RSS-14  
Check Digit



Do Not Transmit





## 4.16.3 GS1 DATABAR EXPANDED (RSS EXPANDED)

Enable RSS-14 &  
RSS Expanded  
(Groups I, II)



\*Disable



The settings below apply to Group II symbologies only:

- ▶ GS1 DataBar Expanded
- ▶ GS1 DataBar Expanded Stacked

#### Transmit Code ID

Decide whether to include the Code ID in the data being transmitted.

\*Transmit  
RSS Expanded Code ID



Do Not Transmit



### 4.16.4 GS1 DATABAR LIMITED (RSS LIMITED)

Enable RSS Limited  
(Group III)



\*Disable



#### Transmit Code ID

Decide whether to include the Code ID in the data being transmitted.

\*Transmit  
RSS Limited Code ID



Do Not Transmit



#### Transmit Application ID

Decide whether to include the Application ID ("01") in the data being transmitted.

\*Transmit  
RSS Limited  
Application ID



Do Not Transmit



#### Transmit Check Digit

Decide whether to include the check digit in the data being transmitted.

\*Transmit  
RSS Limited  
Check Digit



Do Not Transmit



## 4.17 TELEPEN

Enable Telepen



100353

\*Disable



100352

### 4.17.1 TELEPEN OUTPUT - FULL ASCII/NUMERIC

Decide whether to support Telepen in full ASCII code. By default, it supports ASCII mode.

- ▶ AIM Telepen (Full ASCII) includes all the alphanumeric and special characters.

Original Telepen  
(Numeric)



100485

\*AIM Telepen



100484



## 4.18 UPC-A

### UPC-A

**\*Enable UPC-A  
(No Addon)**



100339

**Disable**



100338

### UPC-A Addon 2

**Enable UPC-A Addon 2**



100341

**\*Disable**



100340

### UPC-A Addon 5

**Enable UPC-A Addon 5**



100343

**\*Disable**




100342



### 4.18.1 CONVERT TO EAN-13


Decide whether to expand the read UPC-A barcode, as well as its addons, into EAN-13.

- ▶ After conversion, the data follows EAN-13 format and is affected by EAN-13 programming selections (e.g. Check Digit).

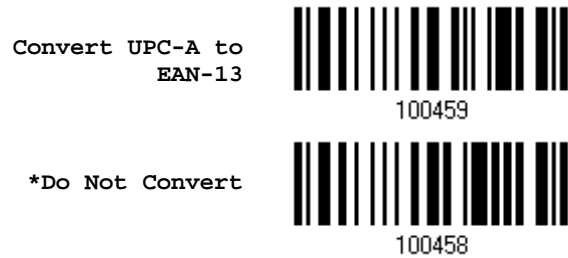


### 4.18.2 SYSTEM NUMBER TRANSMISSION

Decide whether to include the system number in the data being transmitted.

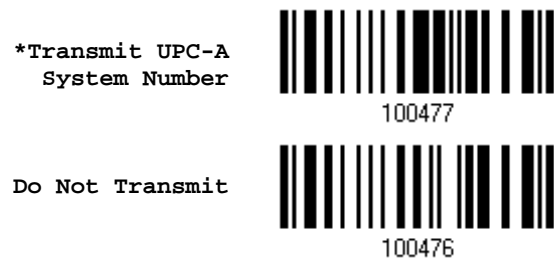

### 4.18.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

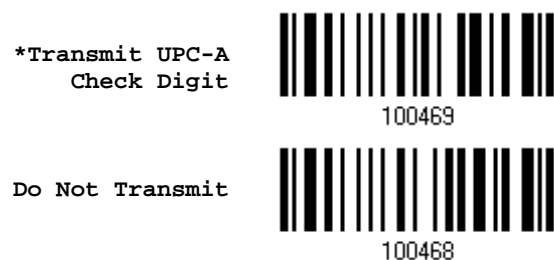

## 4.19 UPC-E

### UPC-E

**\*Enable UPC-E  
(No Addon)**



100321

**Disable**



100320

### UPC-E Addon 2

**Enable UPC-E Addon 2**



100323

**\*Disable**



100322

### UPC-E Addon 5

**Enable UPC-E Addon 5**



100325

**\*Disable**




100324



### 4.19.1 SYSTEM NUMBER SELECTION

Decide whether to decode the ordinary UPC-E barcodes only or both UPC-E0 and UPC-E1 barcodes.

- ▶ System number 0 enabled for decoding UPC-E0 barcodes.
- ▶ System number 1 enabled for decoding UPC-E1 barcodes.

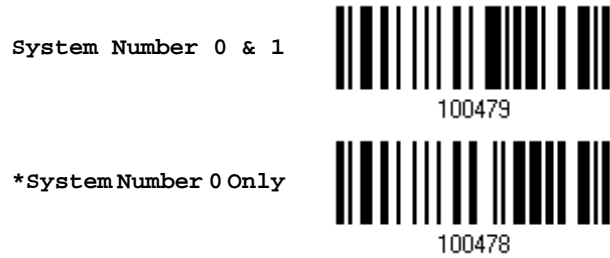


**Warning:** Because of the way system number 1 is encoded, if both system numbers are enabled, the user might suffer from short scanning UPC-A or EAN-13 barcodes into UPC-E1 barcodes.

### 4.19.2 CONVERT TO UPC-A

Decide whether to expand the read UPC-E barcode, as well as its addons, into UPC-A.

- ▶ After conversion, the data follows UPC-A format and is affected by UPC-A programming selections (e.g. System Number, Check Digit).

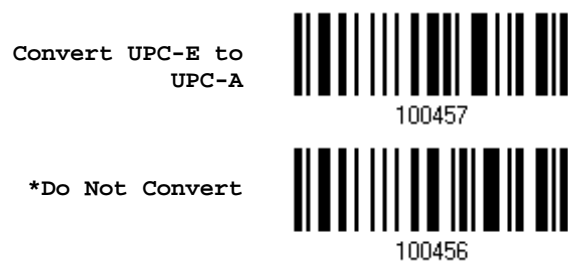

### 4.19.3 SYSTEM NUMBER TRANSMISSION

Decide whether to include the system number in the data being transmitted.

Transmit UPC-E  
System Number



100475

\*Do Not Transmit



100474

### 4.19.4 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

\*Transmit UPC-E  
Check Digit



100467

Do Not Transmit



100466





## DEFINING OUTPUT FORMAT

---

You may configure the format of the collected data output to the host computer. Barcodes read by the scanner will be processed in the following sequence –

- 1) Perform character substitution on the data scanned.
- 2) Add [Code ID](#) and [Length Code](#) to the front of the data: [Code ID][Length Code][Data]
- 3) Process the whole data in step 2 with user formats. Data is now divided into fields by user specified rules. Refer to [Chapter 6 Applying Formats for Data Editing](#).
- 4) Add [Prefix Code](#) and [Suffix Code](#) before transmission: [Prefix Code][Processed Data][Suffix Code]


### IN THIS CHAPTER

---

|  |     |
|--|-----|
| 5.1 Letter Case .....                  | 149 |
| 5.2 Character Substitution .....       | 150 |
| 5.3 Prefix/Suffix Code .....           | 158 |
| 5.4 Code ID .....                      | 159 |
| 5.5 Length Code .....                  | 163 |
| 5.6 Multi-Barcode Editor .....         | 167 |
| 5.7 Removal of Special Character ..... | 170 |

### 5.1 LETTER CASE

By default, the alphabetic transmission is case-sensitive, meaning that the alphabet will be transmitted according to their original case. Ignoring the original letter case, select [Upper Case] to output data in upper case only; otherwise, select [Lower Case] to output data in lower case only.

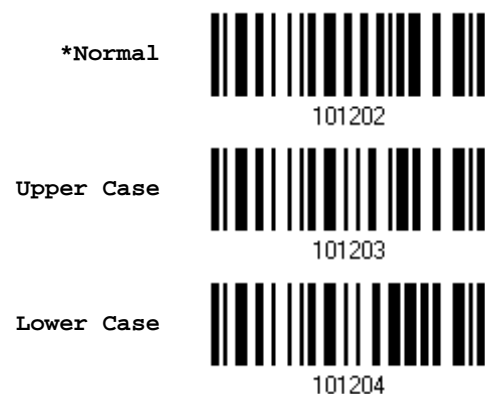

## 5.2 CHARACTER SUBSTITUTION

Character substitution is performed on every occurrence of the first character specified. If only one character is specified, every occurrence of that character in the barcode will be taken away.


- ▶ The first character will be replaced by the second character(s).
- ▶ Up to three sets of character substitution can be configured.
- ▶ If “Bluetooth® HID” or “USB HID” is configured for interface, [Key Type](#) and [Key Status](#) will then become applicable. You may decide whether or not to apply Key Status when “Normal Key” is selected for Key Type.

| Key Type   |   | Key Status  |
|------------|---|---|
| Scan Code  | Only 1 scan code value is allowed. Refer to <a href="#">5.2.1 Select a Set for Character Substitution</a> . | N/A   |
| Normal Key | Up to 3 character strings are allowed.  | <ul style="list-style-type: none"> <li>▶ Add Shift</li> <li>▶ Add Left Ctrl</li> <li>▶ Add Left Alt</li> <li>▶ Add Right Ctrl</li> <li>▶ Add Right Alt</li> </ul> Refer to <a href="#">Keyboard Wedge Table</a> . |

Note: The character substitution is performed only on the barcode itself and before the processing of editing formats. It is not applicable to the Prefix/Suffix Code, Code ID, Length Code, or any Additional Field.



### 5.2.1 SELECT A SET FOR CHARACTER SUBSTITUION

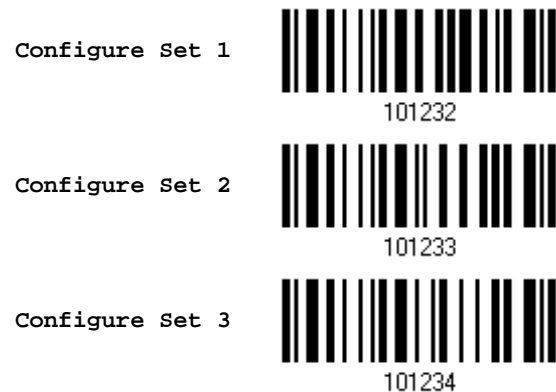

- 1) Read the barcode above to enable character substitution by set.

For example, read the "Set 1" barcode to configure the first set of character substitution. The scanner will respond with one short beep, high tone, to indicate more setup barcodes are required.

- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character substitution. For example,

#### KEY TYPE = NORMAL

- ▶ Read "3", "0", "2", and "D" to replace the character "0" with a dash "-".
- ▶ Read "3", "0", "2", "D", "3", and "0" to replace the character "0" with a dash "-0".

#### KEY TYPE = SCAN CODE

If you want to replace the character "0" with "a" (= "1C" on the scan code table):

1. Read "3" and "0".
2. Read the "Scan Code" barcode.
3. Read "1" and "C".

#### KEY TYPE = NORMAL + KEY STATUS = SHIFT

If you want to replace the character "0" with "!" (= "Shift" + "1" on keyboard):

1. Read "3" and "0".
2. Read the "Add Shift" barcode.
3. Read "3" and "1".

- 3) Read the "Validate" barcode to complete this setting. (The defined set or sets will be applied to all symbologies by default.)



## 5.2.2 SYMBOLOGIES FOR CHARACTER SUBSTITUTION (ALL 3 SETS)

By default character substitution will be performed on all symbologies. If the character substitution is not desired with one or more symbologies, read the “Do Not Apply” barcode for each undesired symbologies and all the three sets will be ignored for them.

### Character Substitution for Codabar

\*Apply



101253

Do Not Apply



101252

### Character Substitution for Code 39

\*Apply



101241

Do Not Apply



101240

### Character Substitution for Code 93

\*Apply



101255

Do Not Apply



101254

### Character Substitution for Code 128

\*Apply



101257

Do Not Apply



101256



Character Substitution for GS1-128

**\*Apply**



101259

**Do Not Apply**



101258

Character Substitution for ISBT 128

**\*Apply**



101293

**Do Not Apply**



101292

Character Substitution for EAN-8 (No Addon)

**\*Apply**



101267

**Do Not Apply**



101266

Character Substitution for EAN-8 Addon 2

**\*Apply**



101269

**Do Not Apply**



101268

Character Substitution for EAN-8 Addon 5

**\*Apply**



101271

**Do Not Apply**



101270



**Character Substitution for EAN-13 (No Addon)**

---

|                     |   |
|---------------------|---|
| <b>*Apply</b>       | <br>101273 |
| <b>Do Not Apply</b> | <br>101272 |

**Character Substitution for EAN-13 Addon 2**

---

|                     |   |
|---------------------|---|
| <b>*Apply</b>       | <br>101275 |
| <b>Do Not Apply</b> | <br>101274 |

**Character Substitution for EAN-13 Addon 5**

---

|                     |   |
|---------------------|---|
| <b>*Apply</b>       | <br>101277  |
| <b>Do Not Apply</b> | <br>101276 |

**Character Substitution for French Pharmacode**

---

|                     |   |
|---------------------|---|
| <b>*Apply</b>       | <br>101245 |
| <b>Do Not Apply</b> | <br>101244 |

**Character Substitution for Italian Pharmacode**

---



|                     |   |
|---------------------|---|
| <b>*Apply</b>       | <br>101243 |
| <b>Do Not Apply</b> | <br>101242 |



---

**Character Substitution for Industrial 25**



---

|                     |   |
|---------------------|---|
| <b>*Apply</b>       |  |
|                     | 101247  |
| <b>Do Not Apply</b> |  |
|                     | 101246  |

---

**Character Substitution for Interleaved 25**


---

|                     |   |
|---------------------|---|
| <b>*Apply</b>       |  |
|                     | 101249  |
| <b>Do Not Apply</b> |  |
|                     | 101248  |

---

**Character Substitution for Matrix 25**


---

|                     |   |
|---------------------|---|
| <b>*Apply</b>       |   |
|                     | 101251  |
| <b>Do Not Apply</b> |  |
|                     | 101250  |

---

**Character Substitution for MSI**


---

|                     |   |
|---------------------|---|
| <b>*Apply</b>       |  |
|                     | 101285  |
| <b>Do Not Apply</b> |  |
|                     | 101284  |

---

**Character Substitution for Plessey**


---

|                     |   |
|---------------------|---|
| <b>*Apply</b>       |  |
|                     | 101287  |
| <b>Do Not Apply</b> |  |
|                     | 101286  |

---



Character Substitution for GS1 DataBar

---

\*Apply



101291

Do Not Apply



101290

Character Substitution for Telepen

---

\*Apply



101289

Do Not Apply



101288

Character Substitution for UPC-A (No Addon)

---

\*Apply



101279

Do Not Apply



101278

Character Substitution for UPC-A Addon 2

---

\*Apply



101281

Do Not Apply



101280

Character Substitution for UPC-A Addon 5

---

\*Apply



101283

Do Not Apply



101282





Character Substitution for UPC-E (No Addon)

---

**\*Apply**



101261

**Do Not Apply**



101260

Character Substitution for UPC-E Addon 2

---

**\*Apply**



101263

**Do Not Apply**



101262

Character Substitution for UPC-E Addon 5

---

**\*Apply**



101265

**Do Not Apply**



101264



### 5.3 PREFIX/SUFFIX CODE

By default, there is no prefix code, and [ENTER] or [CR] (Carriage Return) is configured to be suffix code. Up to 8 characters can be configured, for example, "Barcode\_", and you will have the string appear in front of the barcode read, like this – "Barcode\_1234567890".

- ▶ If "Bluetooth® HID" or "USB HID" is configured for interface, [Key Type](#) and [Key Status](#) will then become applicable. You may decide whether or not to apply Key Status when "Normal Key" is selected for Key Type.

| Key Type   |  | Key Status  |
|------------|--|---|
| Scan Code  | Up to 4 scan code values are allowed.  | N/A   |
| Normal Key | Up to 8 character strings are allowed. | <ul style="list-style-type: none"> <li>▶ Add Shift</li> <li>▶ Add Left Ctrl</li> <li>▶ Add Left Alt</li> <li>▶ Add Right Ctrl</li> <li>▶ Add Right Alt</li> </ul> Refer to <a href="#">Keyboard Wedge Table</a> . |

Configure Prefix



Configure Suffix



- 1) Read the barcode above to apply prefix code or suffix code separately, and follow steps 2~3. (Max. 8 characters each)
- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character string. For example, read "2" and "B" for the scanner to prefix or suffix the character [+].
- 3) Read the "Validate" barcode to complete this setting.



## 5.4 CODE ID

Up to two characters for Code ID can be configured for each symbology. To make the Code ID configuration easier, the scanner provides five pre-defined Code ID sets that you can select one and make necessary changes on it.

- ▶ If "Bluetooth® HID" or "USB HID" is configured for interface, [Key Type](#) and [Key Status](#) will then become applicable. You may decide whether or not to apply Key Status when "Normal Key" is selected for Key Type.

| Key Type   |  | Key Status  |
|------------|--|---|
| Scan Code  | Only 1 scan code value is allowed.     | N/A   |
| Normal Key | Up to 2 character strings are allowed. | <ul style="list-style-type: none"> <li>▶ Add Shift</li> <li>▶ Add Left Ctrl</li> <li>▶ Add Left Alt</li> <li>▶ Add Right Ctrl</li> <li>▶ Add Right Alt</li> </ul> Refer to <a href="#">Keyboard Wedge Table</a> . |

Note: "]C1" is the Code ID of GS1-128 (EAN-128) barcodes; "]e0" is the default Code ID of GS1 DataBar (RSS) barcodes.

### 5.4.1 SELECT PRE-DEFINED CODE ID

Apply Code ID Set 1



Apply Code ID Set 2



Apply Code ID Set 3



Apply Code ID Set 4



Apply Code ID Set 5








| Code ID options    | Set 1 | Set 2 | Set 3 | Set 4 | Set 5 |
|--------------------|-------|-------|-------|-------|-------|
| Code 39            | A     | C     | Y     | M     | A     |
| Italian Pharmacode | A     | C     | Y     | M     | A     |
| French Pharmacode  | A     | C     | Y     | M     | A     |
| Industrial 25      | C     | H     | H     | H     | S     |
| Interleaved 25     | D     | I     | Z     | I     | S     |
| Matrix 25          | E     | G     | G     | G     | S     |
| Codabar            | F     | N     | X     | N     | F     |
| Code 93            | I     | L     | L     | L     | G     |
| Code 128           | H     | K     | K     | K     | C     |
| ISBT 128           | H     | K     | K     | K     | C     |
| UPC-E              | S     | E     | C     | E     | E     |
| EAN-8              | P     | B     | B     | FF    | E     |
| EAN-13             | M     | A     | A     | F     | E     |
| UPC-A              | J     | A     | A     | A     | E     |
| MSI                | V     | V     | D     | P     | M     |
| Plessey            | W     | W     | E     | Q     | P     |
| Telepen            | Z     | ---   | ---   | ---   | ---   |



## 5.4.2 CHANGE CODE ID

- 1) Read the barcode below to change code ID of a specific symbology.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character string. For example, read "4" and "4" for applying the character [D] for Code ID.
- 3) Read the "Validate" barcode to complete this setting.

|   |   |
|---|---|
| Configure Code ID for<br>Codabar            |    |
|   | 101456  |
| Configure Code ID for<br>Code 39            |    |
|   | 101450  |
| Configure Code ID for<br>Code 93            |    |
|   | 101457  |
| Configure Code ID for<br>Code 128           |   |
|   | 101458  |
| Configure Code ID for<br>ISBT 128           |  |
|   | 101466  |
| Configure Code ID for<br>EAN-8              |  |
|   | 101460  |
| Configure Code ID for<br>EAN-13             |  |
|   | 101461  |
| Configure Code ID for<br>French Pharmacode  |  |
|   | 101452  |
| Configure Code ID for<br>Italian Pharmacode |  |
|   | 101451  |
| Configure Code ID for<br>Industrial 25      |  |
|   | 101453  |



Configure Code ID  
for Interleaved 25



101454

Configure Code ID  
for Matrix 25



101455

Configure Code ID  
for MSI



101463

Configure Code ID  
for Plessey



101464

Configure Code ID  
for Telepen



101465

Configure Code ID  
for UPC-A



101462

Configure Code  
ID for UPC-E



101459

### 5.4.3 CLEAR CODE ID SETTINGS

Clear All Code ID  
Settings



109960



## 5.5 LENGTH CODE

A 4-digit code representing the length of barcode data (character count) can be inserted in front of data being transmitted. Such "Length" code can be individually enabled or disabled for each symbology.

### Length Code for Codabar

Apply



101413

\*Do Not Apply



101412

### Length Code for Code 39

Apply



101401

\*Do Not Apply



101400

### Length Code for Code 93

Apply



101415

\*Do Not Apply



101414

### Length Code for Code 128

Apply



101417

\*Do Not Apply



101416



Length Code for GS1-128 & GS1 DataBar

---

Apply



101419

\*Do Not Apply



101418

Length Code for ISBT 128

---

Apply



101435

\*Do Not Apply



101434

Length Code for EAN-8

---

Apply



101423

\*Do Not Apply



101422

Length Code for EAN-13

---

Apply



101425

\*Do Not Apply



101424

Length Code for French Pharmacode

---

Apply



101405

\*Do Not Apply



101404





---

**Length Code for Italian Pharmacode**


---

Apply



101403

\*Do Not Apply



101402

---

**Length Code for Industrial 25**


---

Apply



101407

\*Do Not Apply



101406

---

**Length Code for Interleaved 25**


---

Apply



101409

\*Do Not Apply



101408

---

**Length Code for Matrix 25**


---

Apply



101411

\*Do Not Apply



101410

---

**Length Code for MSI**


---

Apply



101429

\*Do Not Apply



101428



Length Code for Plessey

---

Apply



101431

\*Do Not Apply



101430

Length Code for Telepen

---

Apply



101433

\*Do Not Apply



101432

Length Code for UPC-A

---

Apply



101427

\*Do Not Apply



101426

Length Code for UPC-E

---

Apply



101421

\*Do Not Apply



101420




## 5.6 MULTI-BARCODE EDITOR

The Multi-Barcode Editor allows deciding the output sequence of a concatenation of barcodes. Up to five barcodes can be specified. Enabling this function will force the scanner to apply Laser mode as the scan mode.

Note: The Multi-Barcode Editor has nothing to do with [Multi-Barcode Mode](#).

The barcodes that are found meeting the specified criteria below will be arranged in the desired sequence.

- ▶ Code Type
- ▶ 4-digit barcode length, excluding prefix, suffix, length code, etc.
- ▶ Matching the first character of barcode data

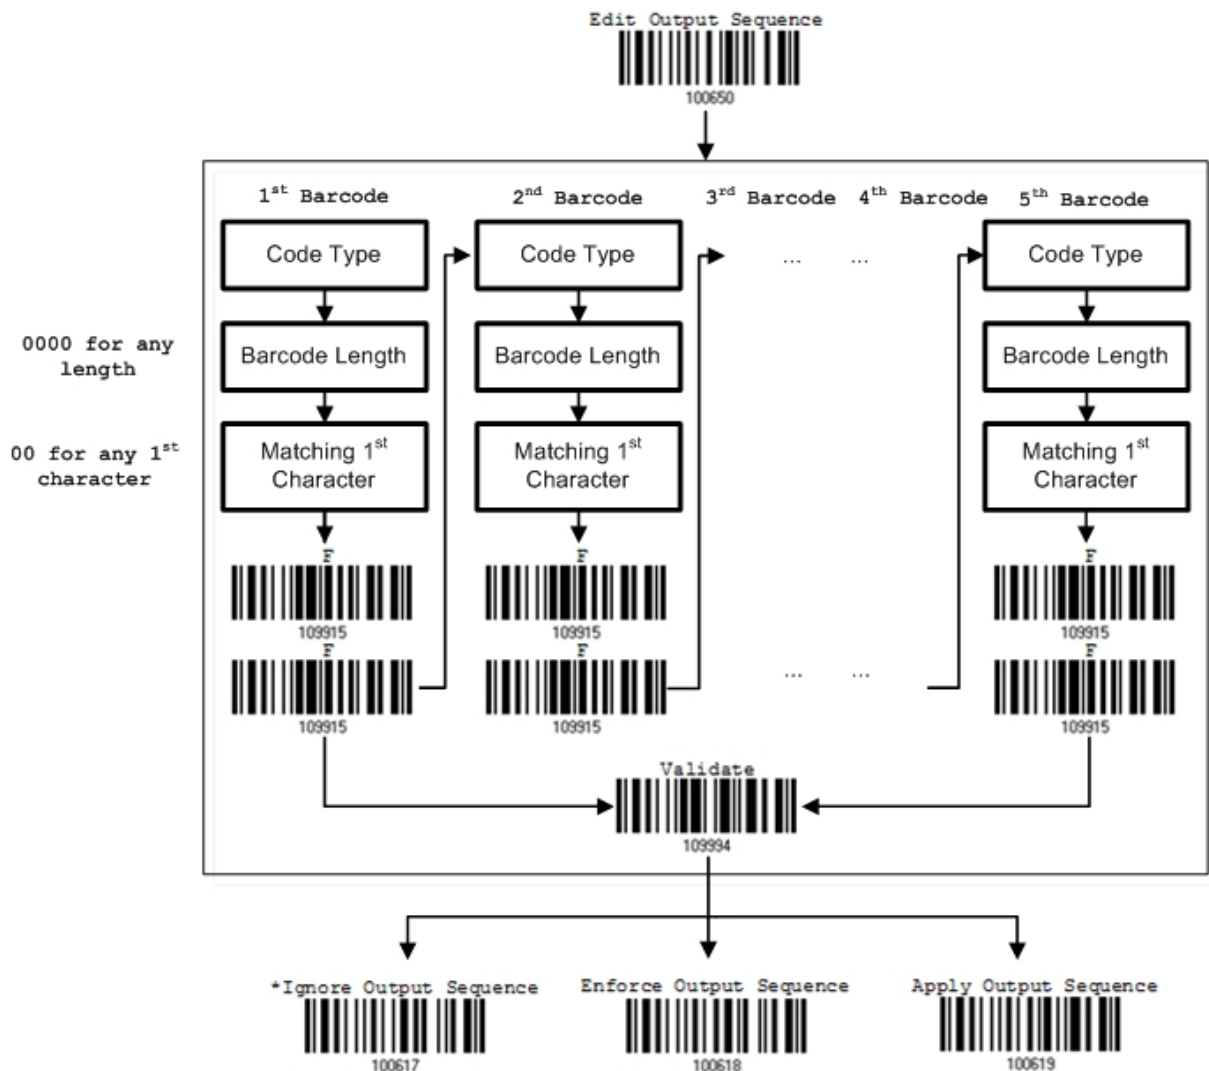

5.6.1 EDIT A CONCATENATION OF BARCODES

Edit Output Sequence



- 1) Read the barcode above to start editing a concatenation of barcodes.
- 2) Code Type setting – read the [“Hexadecimal Value”](#) barcode on page 220 for Code Type of the (first) barcode. For example, read “4” and “1” for Code 39.

| Code Type | Symbology          | Code Type | Symbology           |
|-----------|--------------------|-----------|---------------------|
| 40 (@)    | ISBT 128           | 4F (O)    | EAN-8 with Addon 5  |
| 41 (A)    | Code 39            | 50 (P)    | EAN-13              |
| 42 (B)    | Italian Pharmacode | 51 (Q)    | EAN-13 with Addon 2 |
| 43 (C)    | French Pharmacode  | 52 (R)    | EAN-13 with Addon 5 |
| 44 (D)    | Industrial 25      | 53 (S)    | MSI                 |
| 45 (E)    | Interleaved 25     | 54 (T)    | Plessey             |
| 46 (F)    | Matrix 25          | 55 (U)    | GS1-128 (EAN-128)   |
| 47 (G)    | Codabar (NW7)      | 56 (V)    | UPC-A               |
| 48 (H)    | Code 93            | 57 (W)    | UPC-A with Addon 2  |
| 49 (I)    | Code 128           | 58 (X)    | UPC-A with Addon 5  |
| 4A (J)    | UPC-E0 / UPC-E1    |           |                     |
| 4B (K)    | UPC-E with Addon 2 | 5A (Z)    | Telepen             |
| 4C (L)    | UPC-E with Addon 5 | 5B ( [ )  | GS1 DataBar (RSS)   |
| 4D (M)    | EAN-8              |           |                     |
| 4E (N)    | EAN-8 with Addon 2 |           |                     |

- 3) Barcode Length setting – read the [“Decimal Value”](#) barcode on page 219 for the 4-digit length of the (first) barcode. For example, read “0065” for barcode length of 65 characters or read “0000” for any length.

Note: If not reading 0000 for any length, the 4-digit length must exclude prefix, suffix (0x0d by default), length code, etc.

- 4) Matching Character setting – read the [“Hexadecimal Value”](#) barcode on page 220 for the 1<sup>st</sup> character that must be found matching in the (first) barcode. For example, read “4” and “1” for matching character “A” as the first character in the barcode or read “00” for any character.
- 5) Read twice the “F” barcode on page 220 (“FF”) to complete the setting of each barcode.
- 6) Read the “Validate” barcode to end the editing of the barcode set.



### 5.6.2 ACTIVATE THE CONCATENATION OF BARCODES


By default, the output sequence editing of the concatenation of barcodes is not applied.

When “Enforce Output Sequence” is enabled, all barcodes read by the scanner must meet with the criteria for the concatenation. If data is found excluded from all output sequence sets (= not meeting with the criteria), the scanner will not accept the reading, and therefore, data will not be transmitted.

When “Apply Output Sequence” is enabled, only barcodes found meeting with the criteria are counted for the concatenation. Those found not meeting with the criteria are processed normally and individually.

Note: When it requires reading more barcodes to complete the “output sequence” requirements, the scanner will respond with one short beep (low tone). After reading an acceptable barcode, its LED indicator will become solid green and go off (= Good Read).

Upon completion of reading acceptable barcodes, the scanner will respond with one short beep (high tone) and its LED indicator will become solid green and go off (= Good Read).

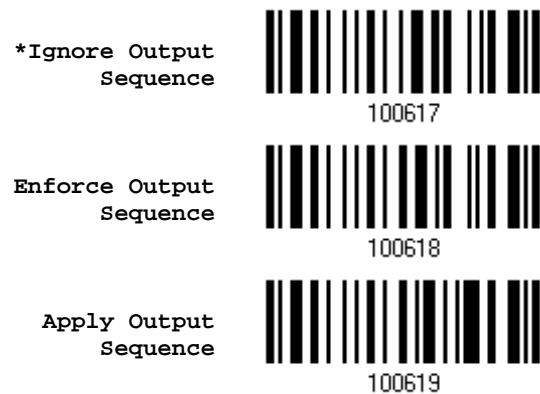

**Warning:** When you disable the Multi-Barcode Editor later, the scan mode remains unchanged. If Laser mode is not desired, proceed to select a scan mode that best suits your application.



## 5.7 REMOVAL OF SPECIAL CHARACTER

You can only specify 1 character, but it will remove every matching character encountered from the starting position of barcode data until a different character is met. For example, if it is configured to remove the character "0" (hex value is "30"), one or more zeros will be stripped off the barcode data "012345" and "00012345". However, for barcode data "010333", only the first zero will be stripped off.

Remove Special  
Character



101470

- 1) Read the barcode above to remove the specified character.
- 2) Read the ["Hexadecimal Value"](#) barcode on page 220 for the desired character string.  
For example, read "3" and "0" for the scanner to remove the character "0".
- 3) Read the "Validate" barcode to complete this setting.



## APPLYING FORMATS FOR DATA EDITING

---

The scanner allows advanced data editing by applying user-configured editing formats. The whole processed data can be divided into fields by user-specified rules. The data actually sent to the host computer comprises those fields together with the user-configurable additional fields.

| [Time Stamp] | [Prefix Code] | [Code ID]  | [Length Code] | [Data]         | Additional Field(s) | [Time Stamp] | [Suffix Code] |
|--------------|---------------|------------|---------------|----------------|---------------------|--------------|---------------|
| None         | None          | None       | None          | Barcode itself | None                | None         | 0x0d          |
| by default   | by default    | by default | by default    |                | by default          | by default   | by default    |

### IN THIS CHAPTER

---

|   |     |
|---|-----|
| 6.1 Activating Editing Formats.....                       | 172 |
| 6.2 How to Configure Editing Formats .....                | 174 |
| 6.3 Configure Format — Define Data Criteria .....         | 177 |
| 6.4 Configure Format — Define Data Field .....            | 186 |
| 6.5 Configure Format — Define Transmission Sequence ..... | 195 |
| 6.6 Programming Examples .....                            | 197 |



## 6.1 ACTIVATING EDITING FORMATS

### 6.1.1 ACTIVATE EDITING FORMATS

If you have already configured any editing format before, you may directly apply the editing format. If not, you must start with configuring an editing format first, and then, activate the editing format when it is desired in use.

#### Editing Format 1

Enable



101301

\*Disable



101300

#### Editing Format 2

Enable



101303

\*Disable



101302

#### Editing Format 3

Enable



101305

\*Disable



101304

#### Editing Format 4

Enable



101307

\*Disable



101306





Editing Format 5




6.1.2 EXCLUSIVE DATA EDITING

By default, only barcodes found meeting with the criteria are processed by the editing formats. Those found not meeting with the criteria are processed normally.

When "Exclusive Data Editing" is enabled, all barcodes read by the scanner must be processed by the editing formats. If data is found excluded from all enabled editing formats (= not meeting with the specified criteria), the scanner will not accept the reading, and therefore, data will not be transmitted.



## 6.2 HOW TO CONFIGURE EDITING FORMATS

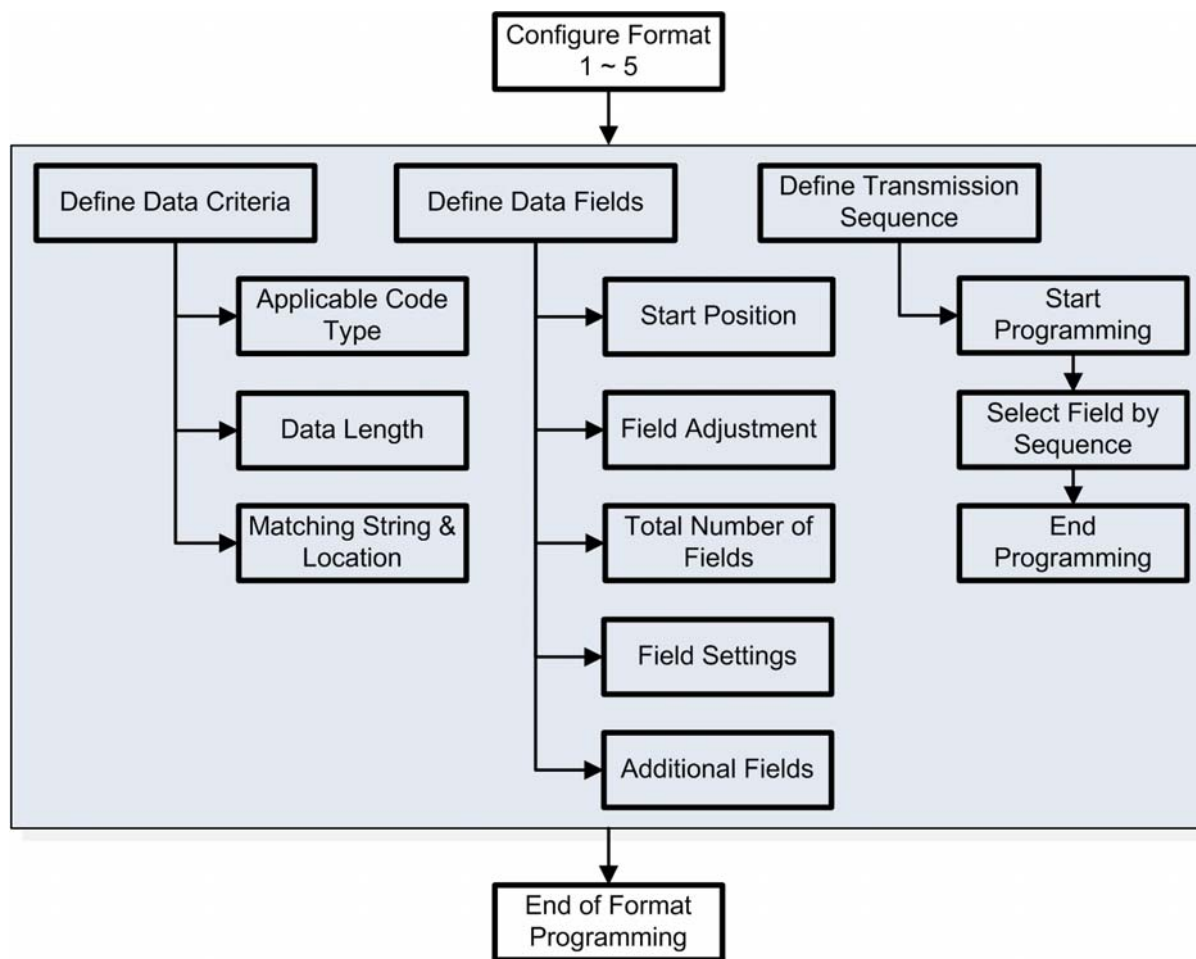


## 6.2.1 SELECT FORMAT TO CONFIGURE

### Start Programming Format

Select one editing format (Format 1~5) and the parameters pertaining to the editing format can then be configured – applicable code type, data length, matching string & location, start position, field adjustment, total number of fields, field settings (field-dividing rule), additional fields, and field transmission sequence.

- ▶ Up to five different formats can be specified.

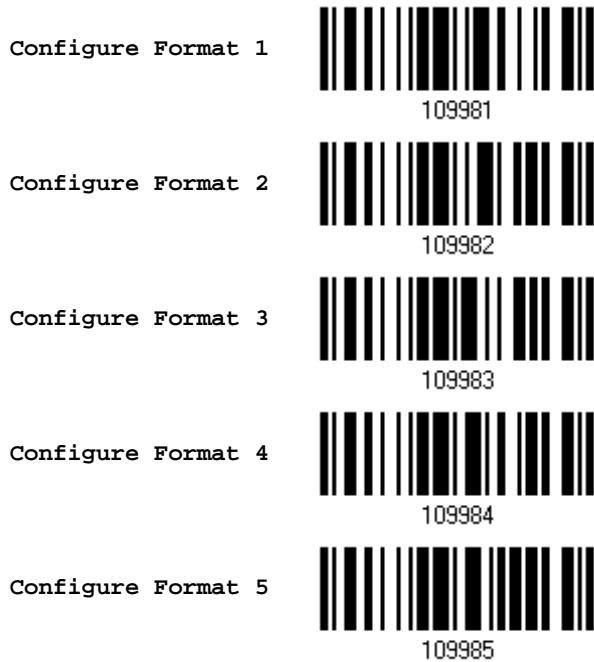

Note: Before completing the programming of an editing format, if any barcode for parameters other than those pertaining to the editing format is read, the programming process will be automatically aborted.

### End Programming Format

After having configured all the desired parameters, you must read the “End Programming Format” barcode, which can be located at the bottom of every even page in this chapter.



## 6.2.2 RESTORE DEFAULT FORMAT

You may select an existing editing format and have the defaults restored. The default settings of an editing format are listed below.

| Editing format                      | Defaults             |
|-------------------------------------|----------------------|
| Applicable Code Type                | All                  |
| Data Length                         | 0 (No qualification) |
| Matching String                     | Disable              |
| Matching String Location            | None                 |
| Start Position                      | From head            |
| Field Adjustment                    | No adjustment        |
| Total Number of Fields              | 1                    |
| Field Setting – field-dividing rule | Not configured       |
| Additional Fields                   | None                 |
| Field Transmission Sequence         | F1                   |

Restore Default  
Format



### 6.3 CONFIGURE FORMAT — DEFINE DATA CRITERIA

Three applicable conditions can be configured to check whether the data read by the scanner can be processed by the particular editing format.

Note: Data editing cannot be performed unless the three conditions are all met.

#### 6.3.1 APPLICABLE CODE TYPE

By default, barcodes of all the supported symbologies will be processed by any editing format, if having been configured and enabled. For quick configuration, you may first clear all, and then select the desired symbologies.

Note: You must have at least one symbology selected.

\*Apply to All



Clear All



Editing Format for Codabar

---

\*Apply



101513

Do Not Apply



101512

Editing Format for Code 39

---

\*Apply



101501

Do Not Apply



101500

Editing Format for Code 93

---

\*Apply



101515

Do Not Apply



101514

Editing Format for Code 128

---

\*Apply



101517

Do Not Apply



101516

Editing Format for GS1-128 & GS1 DataBar

---

\*Apply



101519

Do Not Apply



101518



Editing Format for ISBT 128

\*Apply



101553

Do Not Apply



101552

Editing Format for EAN-8

\*Apply



101527

Do Not Apply



101526

Editing Format for EAN-8 Addon 2

\*Apply



101529

Do Not Apply



101528

Editing Format for EAN-8 Addon 5

\*Apply



101531

Do Not Apply



101530

Editing Format for EAN-13

\*Apply



101533

Do Not Apply



101532



Editing Format for EAN-13 Addon 2

---

\*Apply



101535

Do Not Apply



101534

Editing Format for EAN-13 Addon 5

---

\*Apply



101537

Do Not Apply



101536

Editing Format for French Pharmacode

---

\*Apply



101505

Do Not Apply



101504

Editing Format for Italian Pharmacode

---

\*Apply



101503

Do Not Apply



101502

Editing Format for Industrial 25

---

\*Apply



101507

Do Not Apply



101506





Editing Format for Interleaved 25

\*Apply



101509

Do Not Apply



101508

Editing Format for Matrix 25

\*Apply



101511

Do Not Apply



101510

Editing Format for MSI

\*Apply



101545

Do Not Apply



101544

Editing Format for Plessey

\*Apply



101547

Do Not Apply



101546

Editing Format for Telepen

\*Apply



101549

Do Not Apply



101548



Editing Format for UPC-A

---

\*Apply



101539

Do Not Apply



101538

Editing Format for UPC-A Addon 2

---

\*Apply



101541

Do Not Apply



101540

Editing Format for UPC-A Addon 5

---

\*Apply



101543

Do Not Apply



101542

Editing Format for UPC-E

---

\*Apply



101521

Do Not Apply



101520

Editing Format for UPC-E Addon 2

---

\*Apply



101523

Do Not Apply



101522



Editing Format for UPC-E Addon 5

\*Apply



101525

Do Not Apply



101524



Update

### 6.3.2 DATA LENGTH

The length must include prefix, suffix (0x0d by default), length code, etc. By default, barcodes of any length (character count) are eligible for data editing.

- ▶ A value ranging from 0 to 254 can be specified.
- ▶ When zero is given to Max. & Min. Length, the scanner will not perform the length qualification.

1) Read the barcode below to specify Max. Length or Min. Length separately, and follow steps 2~3.

Max. Length



101561

Min. Length



101560

- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



### 6.3.3 MATCHING STRING & LOCATION

By default, no matching string is specified, and therefore, it is disabled. You may enable this feature by specifying a matching string up to four characters.

- ▶ When the Matching String Location is zero, the scanner will only check for the existence of the matching string in the barcode data.
- ▶ Specify a value from 1 to 254 to indicate where the matching string starts in the barcode data.

1) Read the barcode to specify a matching string.

Matching String...



- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the barcode to specify the location of the matching string.

Location of Matching  
String...



- 5) Read the "[Decimal Value](#)" barcode on page 219 for the desired location.
- 6) Read the "Validate" barcode on the same page to complete this setting.




## 6.4 CONFIGURE FORMAT – DEFINE DATA FIELD

### 6.4.1 START POSITION


Data can be divided into fields in one of the following direction –

- ▶ from head (F1) to tail (F5)
- ▶ from tail (F1) to head (F5)

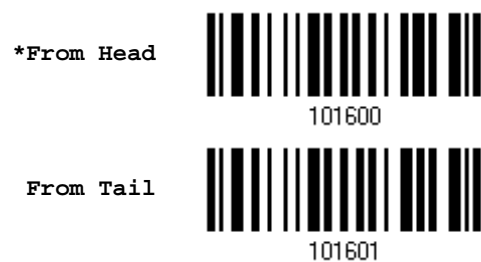

### 6.4.2 FIELD ADJUSTMENT

You may apply equal length to all fields, if necessary. If data is found longer than specified, it will be truncated automatically. When data is found shorter, it will add "Space" (0x20) to field.

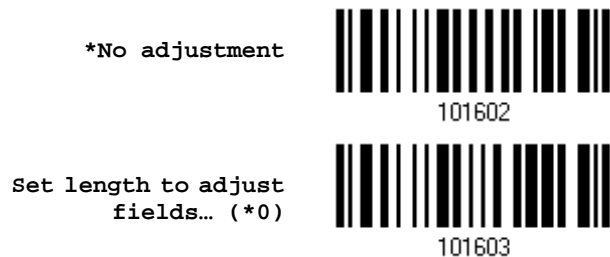

- 1) Read the barcode above to adjust field by length.
- 2) Read the ["Decimal Value"](#) barcode on page 219 for the desired field length.
- 3) Read the ["Validate"](#) barcode on the same page to complete this setting.



### 6.4.3 TOTAL NUMBER OF FIELDS

Data can be divided into at most 6 fields; each of them is numbered from F1 to F6 accordingly. However, only F1~F5 can be configured.

- ▶ The total number of fields must be specified correctly. If three fields are configured for the editing format, the data characters after F3 will be assigned to F4 automatically. This feature is quite useful especially when data of variable lengths is processed by editing formats.

|              |   |
|--------------|---|
| *One Field   |    |
|              | 101590  |
| Two Fields   |    |
|              | 101591  |
| Three Fields |    |
|              | 101592  |
| Four Fields  |  |
|              | 101593  |
| Five Fields  |  |
|              | 101594  |
| Six Fields   |  |
|              | 101595  |

Note: The number of configurable fields is always one less than the total number of fields specified. The extra data characters beyond the last field configured will be automatically assigned to the next field.



## 6.4.4 FIELD SETTINGS

Data eligible for editing formats is divided into fields by user-specified rules – either using the field terminating string or specified field length.

### By Terminating String

Specify the field terminating string. Up to two characters are allowed. The scanner will search for the occurrence of this particular string in the data.

- ▶ By default, this string will be included in the field. You may discard it.

### By Length

Alternatively, you may simply specify the field length. The scanner will assign the next specified number of characters into the field.

### Field 1 Setting

- 1) Read the barcode below to divide field 1 by a specified terminating string.

Select  
Field Separator  
to Divide Field 1...



- 2) Read the [“Hexadecimal Value”](#) barcode on page 220 for the desired character string.
- 3) Read the “Validate” barcode to complete this setting.
- 4) Read the “Discard Separator” barcode if the field separator is not desired in the field.

\*Include Separator



Discard Separator



If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 1 by length.

Divide Field 1  
by Length



- 2) Read the [“Decimal Value”](#) barcode on page 219 for the desired field length.
- 3) Read the “Validate” barcode on the same page to complete this setting.






**Field 2 Setting**

---

- 1) Read the barcode below to divide field 2 by a specified terminating string.

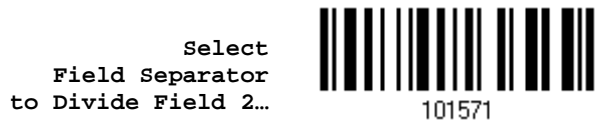


- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the "Discard Separator" barcode if the field separator is not desired in the field.



If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 2 by length.

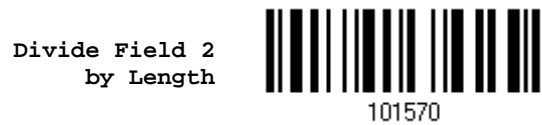


- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



### Field 3 Setting

---

- 1) Read the barcode below to divide field 3 by a specified terminating string.

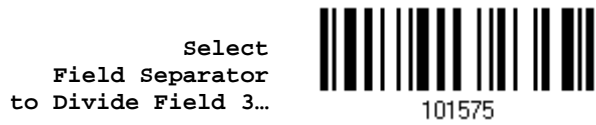


- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the "Discard Separator" barcode if the field separator is not desired in the field.



If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 3 by length.

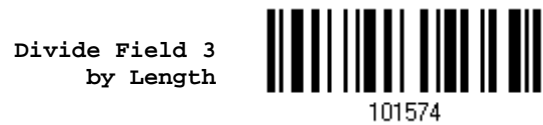


- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



**Field 4 Setting**

---

- 1) Read the barcode below to divide field 4 by a specified terminating string.

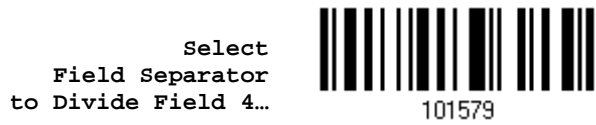

- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the "Discard Separator" barcode if the field separator is not desired in the field.



If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 4 by length.




- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



### Field 5 Setting

---

- 1) Read the barcode below to divide field 5 by a specified terminating string.

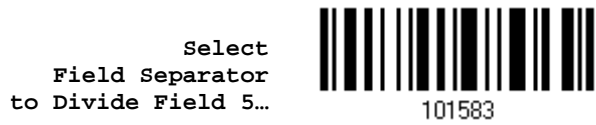


- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the "Discard Separator" barcode if the field separator is not desired in the field.



If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 5 by length.

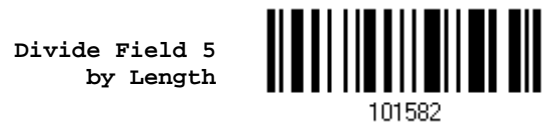

- 2) Read the "[Decimal Value](#)" barcode on page 219 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



**Additional Fields**

Up to five additional fields can be created for each editing format; each of them is numbered from AF1 to AF5 accordingly.

- ▶ If “Bluetooth® HID” or “USB HID” is configured for interface, Key Type and Key Status will then become applicable. You may decide whether or not to apply Key Status when “Normal Key” is selected for Key Type.

| Key Type   |  | Key Status  |
|------------|--|---|
| Scan Code  | Up to 2 scan code values are allowed.  | N/A   |
| Normal Key | Up to 4 character strings are allowed. | <ul style="list-style-type: none"> <li>▶ Add Shift</li> <li>▶ Add Left Ctrl</li> <li>▶ Add Left Alt</li> <li>▶ Add Right Ctrl</li> <li>▶ Add Right Alt</li> </ul> Refer to <a href="#">Keyboard Wedge Table</a> . |

1) Read the barcode below to specify an additional field, one at a time.

|                       |   |
|-----------------------|---|
| Additional Field 1... | <br>101584  |
| Additional Field 2... | <br>101585 |
| Additional Field 3... | <br>101586 |
| Additional Field 4... | <br>101587 |
| Additional Field 5... | <br>101588 |

- 2) Read the “[Hexadecimal Value](#)” barcode on page 220 for the desired additional field.
- 3) Read the “Validate” barcode to complete this setting.



## 6.4.5 PAUSE FIELD SETTING

### Pause Field Time

---

You can limit the pause time interval (1~16). By default, it is set to 1 second.

Pause Field Time  
1~16 sec.  
(\*1)



- 1) Read the barcode above to specify the time interval for the Pause Field. (It is set to 1 by default.)
- 2) Read the [“Decimal Value”](#) barcode on page 219. For example, read “1” and “0” for setting the Pause Field Time to 10 seconds.
- 3) Read the “Validate” barcode on the same page to complete this setting.



## 6.5 CONFIGURE FORMAT – DEFINE TRANSMISSION SEQUENCE

After configuring the data fields and additional fields, you must now program the transmission sequence of these fields that comprise the final data. This field transmission sequence can be assigned in any desired order and fields can be assigned multiple times as well.

Note: Up to twelve fields can be assigned.

- 1) Read the "Start" barcode to begin with programming the field transmission sequence.

Start Programming...



- 2) Program the transmission sequence by reading the desired fields as well as additional fields.

Field 1



Field 2



Field 3



Field 4



Field 5



Field 6



Additional Field 1



|                      |   |
|----------------------|---|
| Additional Field 2   | <br>109908 |
| Additional Field 3   | <br>109909 |
| Additional Field 4   | <br>109910 |
| Additional Field 5   | <br>109911 |
| Pause Field          | <br>109912 |
| Null Character Field | <br>109913 |

3) Read the "End" barcode to complete this setting.

|                    |   |
|--------------------|---|
| End Programming... | <br>109994 |
|--------------------|---|





## 6.6 PROGRAMMING EXAMPLES

### 6.6.1 EXAMPLE I

#### Extract data from the 10th character to the 19th character...

The editing format should be configured as follows:

- 1) Read the "Enter Setup" barcode to enter the Configuration Mode.
- 2) Read the "Configure Format 1" barcode.
- 3) Read the "Clear All" and "Code 128" barcodes for applicable code type.
- 4) Read the "Three Fields" barcode.
- 5) Read the "Divide Field 1 by Length" barcode, and set length to 9.  
Field 1 data starts from the 1<sup>st</sup> character to the 9<sup>th</sup> character.
- 6) Read the "Divide Field 2 by Length" barcode, and set length to 10.  
Field 2 data starts from the 10<sup>th</sup> character to the 19<sup>th</sup> character.
- 7) Read the "Start (Programming)" barcode to program the transmission sequence.
- 8) Read the "Field 2" barcode.
- 9) Read the "End" barcode to complete the transmission sequence setting.
- 10) Read the "End Programming Format" barcode to complete the setting of Editing Format 1.
- 11) Read the "Enable Format 1" barcode to apply Editing Format 1 to Code 128.
- 12) Read the "Update" barcode to exit the Configuration Mode.



## 6.6.2 EXAMPLE II

### Extract the date code, item number, and quantity information from barcodes.

---

Data in a barcode is encoded like this:

- ▶ From the 1<sup>st</sup> character to the 6<sup>th</sup> character is the date code.
- ▶ From the 7<sup>th</sup> character to the dash '-' character is the item number.
- ▶ After the dash '-' character is the quantity information.

Data will be transmitted like this:

- ▶ The item number goes first, then a TAB character, followed by the date code, then another TAB character, and finally the quantity information.

The editing format should be configured as follows:

- 1) Read the "Enter Setup" barcode to enter the Configuration Mode.
- 2) Read the "Configure Format 2" barcode.
- 3) Read the "Three Fields" barcode.
- 4) Read the "Divide Field 1 by Length" barcode, and set length to 6.  
Field 1 data starts from the 1<sup>st</sup> character to the 6<sup>th</sup> character.
- 5) Read the "Select Field Separator to Divide Field 2" barcode, and use a dash '-' character.  
Field 2 data starts from the 7<sup>th</sup> character until the dash '-' character is met.
- 6) Read the "Additional Field 1" barcode, and use a tab character for the field.
- 7) Read the "Start (Programming)" barcode to program the transmission sequence.
- 8) Read the "Field 2", "Additional Field 1", "Field 1", "Additional Field 1", "Field 3" barcodes.
- 9) Read the "End" barcode to complete the transmission sequence (F2 A1 F1 A1 F3) setting.
- 10) Read the "End Programming Format" barcode to complete the setting of Editing Format 1.
- 11) Read the "Enable Format 2" barcode to apply Editing Format 2 to all code types.
- 12) Read the "Update" barcode to exit the Configuration Mode.



# SPECIFICATIONS



|                                 |   |
|---------------------------------|---|
| <b>Optical Characteristics</b>  | <b>1663</b>   |
| Scan Engine                     | Non-contact type  |
| Optical Sensor                  | 2500 pixels CCD image sensor  |
| Light Source                    | Visible Red LED   |
| Scan Rate                       | 200 scans/second  |
| <b>RF Characteristics</b>       |   |
| WPAN Module                     | <i>Bluetooth</i> <sup>®</sup> Class 2, Version 2.1  |
| Coverage (line-of-sight)        | 20 meters with 3610   |
| Interface Supported             | <ul style="list-style-type: none"> <li>▶ Serial Port Profile (<i>Bluetooth</i><sup>®</sup> SPP)</li> <li>▶ Human Interface Device Profile (<i>Bluetooth</i><sup>®</sup> HID)</li> <li>▶ 3610</li> <li>▶ Direct USB HID</li> <li>▶ Direct USB Virtual COM</li> </ul> |
| <b>Physical Characteristics</b> |   |
| Memory                          | <ul style="list-style-type: none"> <li>▶ 2 KB SDRAM for transmit buffer</li> <li>▶ 4MB flash for memory mode</li> </ul>   |
| Switch                          | Push-button switch for [Trigger] key, plus [Power/Delete] key   |
| Indication                      | Triple-color LED (Red/Green/Blue) and beeper  |
| Dimensions                      | 113 x 44.9 x 29.9 mm  |
| Weight                          | 106g (with battery)<br>83g (without battery)  |



|  |  |                 |
|--|--|-----------------|
| <b>Electrical Characteristics</b>        |  |                 |
| Battery                                  | Rechargeable Li-ion battery — 3.7 V, 850 mAh       |                 |
| <b>Power Adaptor</b>                     |  |                 |
| Input                                    | AC 100~240 V (50/60 Hz)                            |                 |
| Output                                   | DC 5V 2A (Battery Charger)                         |                 |
| Operating Temperature                    | 0 °C to 40 °C                                      |                 |
| <b>Environmental Characteristics</b>     |  |                 |
| Temperature                              | Operating  | 0 °C to 50 °C   |
|  | Storage  | -20 °C to 60 °C |
| Humidity<br>(Non-condensing)             | Operating  | 10% to 90%      |
|  | Storage  | 5% to 95%       |
| <b>Resistance</b>                        |  |                 |
| Electrostatic Discharge                  | ± 15 kV air discharge, ± 8 kV contact discharge    |                 |
| <b>Programming Support</b>               |  |                 |
| Configuration                            | Use setup barcodes or host serial commands         |                 |
| Software                                 | Windows®-based ScanMaster                          |                 |
| Firmware upgradeable                     | Download firmware updates via the download utility |                 |
| <b>Accessories (√ means “supported”)</b> |  |                 |
| CipherLab Dongle (3610)                  | √  |                 |
| Rechargeable Li-ion Battery              | √  |                 |
| Direct USB Cable                         | √  |                 |
| Wristband                                | √  |                 |
| Protective Cover (Pouch)                 | √  |                 |
| Single Battery Charger                   | √  |                 |



## FIRMWARE UPGRADE

---


Upgrade firmware to one scanner at a time. For example, turn off each of the rest scanners when there is more than one scanner connected to host computer.

- Note:
1. Ensure the scanner has a fully charged battery prior to attempting a firmware upgrade.
  2. In order to avoid the data loss during firmware upgrade. Please save or upload all the data from the flash memory before beginning firmware upgrade.
- 

### HOW TO UPGRADE 1663 FIRMWARE

#### USING 3610

- 1) Connect 3610 to the USB port of PC after installing its driver.
- 2) Refer to [3.1.1 Connect to 3610](#) for connecting to 3610.  
Read the "Set Connection" label first, and then the "Serial Number" label. Both labels can be located at the back of 3610.
- 3) Read the following barcodes in sequence to configure the scanner to use USB Virtual COM as download interface.

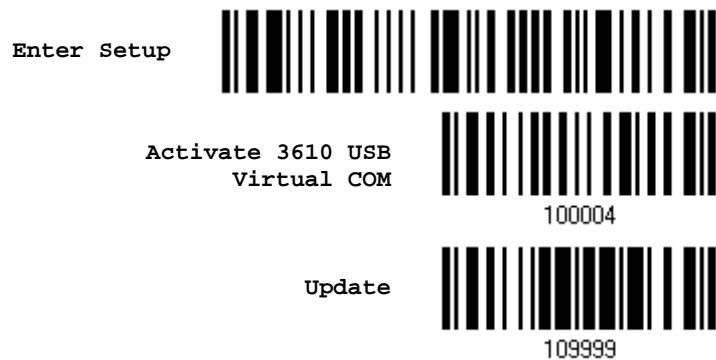

Note: You may also choose to use "Direct" USB Virtual COM interface.

---

- 4) Read the following barcodes in sequence for the scanner to enter the download mode. The scanner will respond with beeps to indicate it is ready for downloading.




Update



5) Run the download utility “ProgLoad.exe” on your computer.

| Kernel Program | User Program   |
|----------------|----------------|
| K1663_V*.shx   | STD1663_V*.shx |

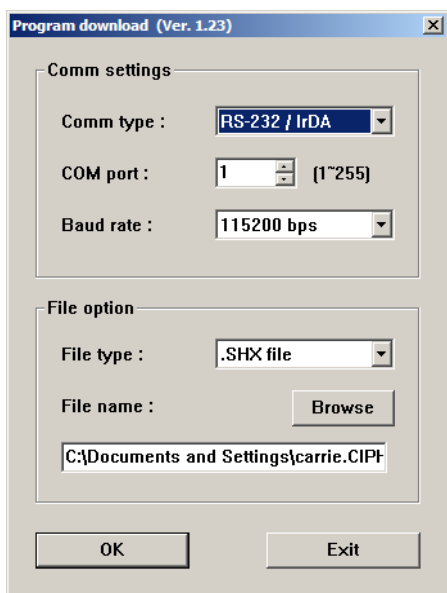

- ▶ For the communication settings, select “RS-232” and the correct COM port for USB Virtual COM interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

6) After upgrading kernel, you will need to manually restart the scanner.


After upgrading the user program, the scanner will automatically restart itself once the download is completed successfully.


Note: The output interface remains unchanged as specified in step 3 (= USB Virtual COM).




**USE DIRECT USB VIRTUAL COM**


- 1) Use the provided USB cable to connect 1663 to the USB port of PC. You will need to install its driver first!
- 2) Read the following barcodes in sequence to configure 1663 to use Direct USB Virtual COM as the download interface (read either barcode label '100008' or '100010').

Enter Setup 

Activate Direct USB  
Virtual COM   
100008

Or

Activate Direct USB  
Virtual COM\_CDC   
100010

Update   
109999

- 3) And then read the following barcodes in sequence for the scanner to enter download mode. The scanner will respond with beeps to indicate it is ready for downloading.


Enter Setup 

Download   
109979

- 4) Run the download utility "ProgLoad.exe" on host computer.

| Kernel Program | User Program   |
|----------------|----------------|
| K1663_V*.shx   | STD1663_V*.shx |



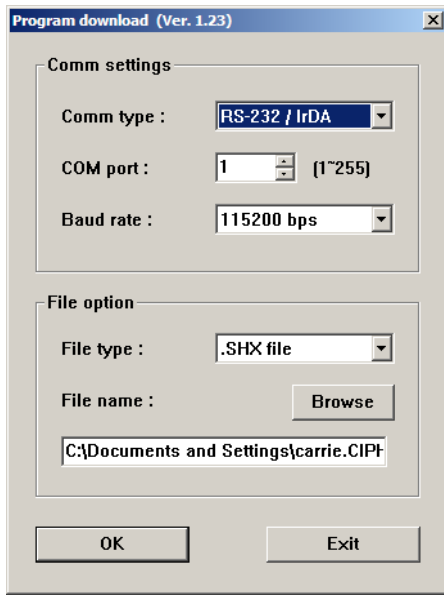

- ▶ For the communication settings, select "RS-232" and the correct COM port for Direct USB Virtual COM interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].


5) After upgrading kernel, you will need to restart the scanner manually.

After upgrading the user program, the scanner will restart itself automatically once the download is completely.

Note: Because 1663 supports the downloading of firmware via Direct USB Virtual COM interface, the output interface will be set to the previously used one upon completion of firmware upgrade.

### USE BLUETOOTH® DONGLE

- 1) Refer to [3.2.3 Connect to Dongle](#) for the target scanner to accept the connection request from your computer.
- 2) Read the following barcodes in sequence to configure the scanner to use *Bluetooth*® SPP as download interface.

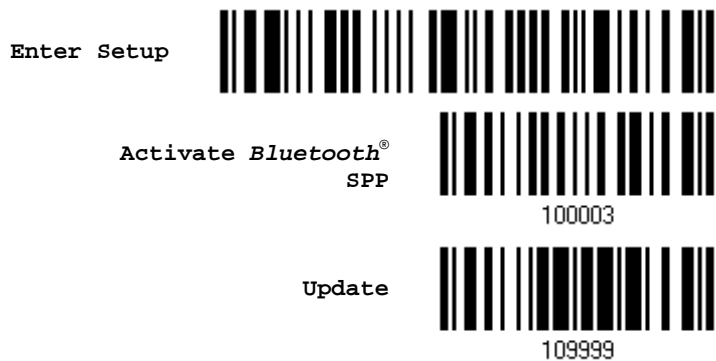



- 3) Read the following barcodes in sequence for the scanner to enter the download mode. The scanner will respond with beeps to indicate it is ready for downloading.



- 4) Run the download utility "ProgLoad.exe" on your computer.

| Kernel Program | User Program   |
|----------------|----------------|
| K1663_V*.shx   | STD1663_V*.shx |

- ▶ For the communication settings, select "RS-232" and the correct COM port for *Bluetooth*<sup>®</sup> SPP interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

- 5) After upgrading kernel, you will need to manually restart the scanner.  
 After upgrading the user program, the scanner will automatically restart itself once the download is completed successfully.

Note: The output interface remains unchanged as specified in step 2 (=Bluetooth<sup>®</sup> SPP).



## HOW TO UPGRADE 3610 FIRMWARE

Connect 3610 to the USB port of PC after installing its driver. Refer to [3.1.1 Connect to 3610](#) for the target scanner to connect to 3610.


### UPGRADE 3610 CPU FIRMWARE

- 1) Read the following barcodes in sequence for 3610 to enter the download mode. The Communication LED on 3610 will be flashing red to indicate it is ready for downloading.



- 2) Run the download utility “ProgLoad.exe” on your computer.

| Kernel Program | User Program   |
|----------------|----------------|
| K3610_V*.shx   | STD3610_V*.shx |

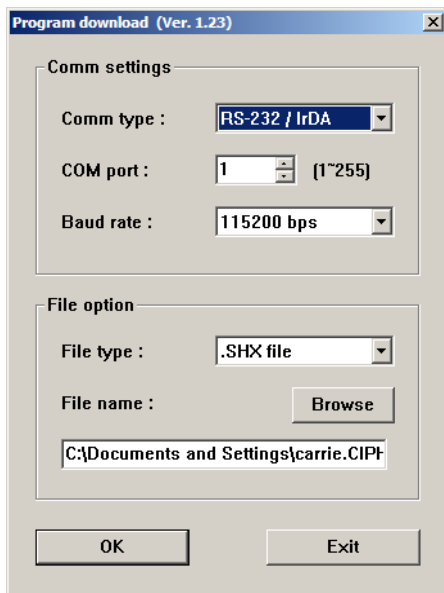

- ▶ For the communication settings, select “RS-232” and the correct COM port for USB Virtual COM interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

- 3) The 3610 will automatically restart itself when upgrading firmware is completed successfully.



- 4) Read the "Update" barcode for the scanner to resume its operation (exit the configuration mode).




**UPGRADE 3610 USB BRIDGE FIRMWARE**

- 1) Read the following barcodes in sequence for 3610 to enter the download mode. The Communication LED on 3610 will be flashing red to indicate it is ready for downloading.



- 2) Run the download utility "ProgLoad.exe" on your computer.

| Kernel Program     | User Program         |
|--------------------|----------------------|
| K3610Bridge_V*.shx | STD3610Bridge_V*.shx |

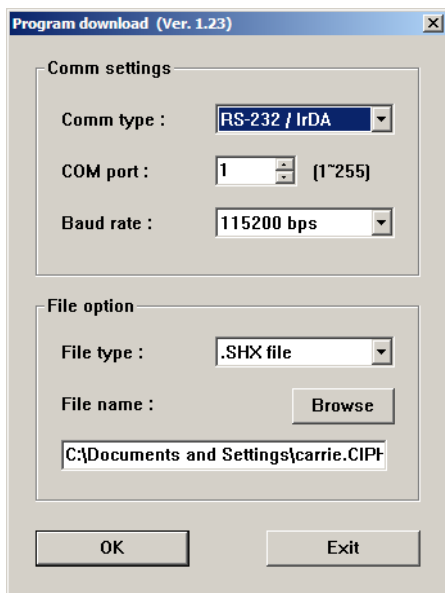

- ▶ For the communication settings, select "RS-232" and the correct COM port for USB Virtual COM interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].



- 3) The 3610 will automatically restart itself when upgrading firmware is completed successfully.
- 4) Read the "Update" barcode for the scanner to resume its operation (exit the configuration mode).

Update



109999



Enter Setup

## HOST SERIAL COMMANDS

### SERIAL COMMANDS

#### D

Purpose To disable the scanner.  
Remarks "D"

 
#### E

Purpose To enable the scanner.  
Remarks "E"

#### #@ nnnnnn <CR>

Purpose To configure the scanner.  
Remarks nnnnnn – the six digits of command parameters.  
For example, "109952" is to list the current Code ID settings.

List Page 3



"0x23" + "0x40" + "0x31" + "0x30" + "0x39" + "0x39" + "0x35" + "0x32" + "0x0d"

Note: After configuring the scanner, you may send the serial command "#@109999" to save the settings.

#### #@ ----<CR>

Purpose To halt the scanner.  
Remarks "0x23" + "0x40" + "0x2d" + "0x2d" + "0x2d" + "0x2d" + "0x0d"

#### #@ ....<CR>

Purpose To resume operation.  
Remarks "0x23" + "0x40" + "0x2e" + "0x2e" + "0x2e" + "0x2e" + "0x0d"

#### #@////<CR>

Purpose To respond with a beep.  
Remarks "0x23" + "0x40" + "0x2f" + "0x2f" + "0x2f" + "0x2f" + "0x0d"



### #@TRIGOFF<CR>

---

Purpose To disable the software trigger  
Remarks "0x23" + "0x40" + "0x54" + "0x52" + "0x49" + "0x47" + "0x4f" + "0x46" + "0x46"  
+ "0x0d"

### #@TRIGON<CR>

---

Purpose To enable the software trigger  
Remarks "0x23" + "0x40" + "0x54" + "0x52" + "0x49" + "0x47" + "0x4f" + "0x4e" + "0x0d"

### #@RDSN<CR>

---

Purpose Read serial number  
Remarks "0x23" + "0x40" + "0x52" + "0x44" + "0x53" + "0x4E" + "0x0D"

## EXAMPLE

You may run HyperTerminal.exe on the host computer to send serial commands to the scanner via USB Virtual COM or *Bluetooth*<sup>®</sup> SPP.

- ▶ For the scanner to stop immediately –  
D
- ▶ For the scanner to resume working –  
E
- ▶ For the scanner to change the beeper to medium volume and beep –  
#@101011<CR>  
#@////<CR>
- ▶ For the scanner to change the beeper to minimal volume and beep –  
#@101010<CR>  
#@////<CR>
- ▶ For the scanner to change the beeper frequency to 8 kHz (for Good Read Beep only) and beep –  
#@101001<CR>  
#@////<CR>
- ▶ For the scanner to change the beeper length to longest (for Good Read Beep only) and beep –  
#@101008<CR>  
#@////<CR>
- ▶ For the scanner to save the settings, send the serial command "#@109999" –  
#@101011<CR>  
#@109999<CR>




- ▶ For the scanner to read the serial number and beep -
  - #@RDSN<CR>
  - #@/////<CR>

Note: (1) For USB Virtual COM, only configure the first scanner that connects to 3610. To identify the scanner, send the serial command to have it respond with a beep.  
 (2) For *Bluetooth*<sup>®</sup> SPP, you can configure up to seven scanners at the same time.

## 3610 SETUP BARCODES & SERIAL COMMANDS

Normally, configure the 3610 dongle by having a connected scanner read 3610-related setup barcodes.

- 1) Connect 3610 to the USB port of PC. You will need to install its driver first!
- 2) Refer to [3.1.1 Connect to 3610](#) for the target scanner to connect to 3610.  
 Read the "Set Connection" barcode first, and then the "Serial Number" barcode. Both barcode labels can be located at the back of 3610.
- 3) Read the following barcodes in sequence to configure 3610.

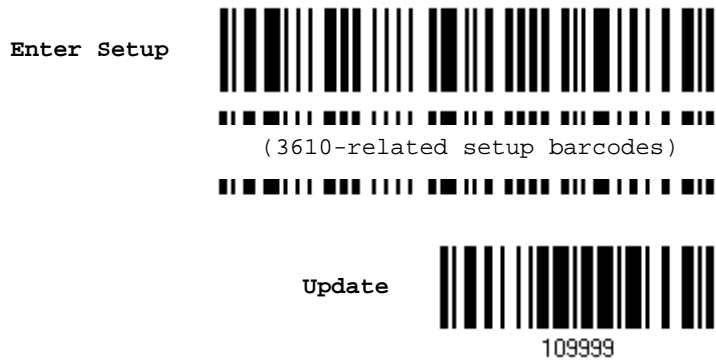

For 3610-related setup barcodes, refer to the Serial Command table below. Note that for the "Version" and "GetID" barcodes, you must run HyperTerminal.exe or any text editor to receive or view the information.

- ▶ If the output interface is USB Virtual COM, run HyperTerminal.exe on the host computer to receive the information.
- ▶ If the output interface is USB HID, run any text editor to receive the information.



## 3610 SERIAL COMMAND TABLE

### Config<CR>

**Purpose** To configure 3610.

Here is the setup barcode for this serial command:



**Remarks** A list of the current settings will be displayed. Run HyperTerminal.exe on your computer and change the settings one by one.

### DefaultSetting<CR>

**Purpose** To restore the default settings.

Here is the setup barcode for this serial command:



### SingleConnection<CR>

**Purpose** To allow only one scanner connecting to 3610.

Here is the setup barcode for this serial command:



### MultiConnection<CR>

**Purpose** To allow up to seven scanners connecting to 3610.

Here is the setup barcode for this serial command:



### UseOnePortforAll<CR>

**Purpose** To use one Virtual COM port for all whenever connecting 3610 to PC via USB. This setting requires to connect one 3610 at a time, and will facilitate configuring multiple 3610 via the same Virtual COM port (for administrators' or factory use).

Here is the setup barcode for this serial command:





**UseVariablePort<CR>**

---

Purpose To use variable Virtual COM port when connecting more than one 3610 to PC via USB.

Here is the setup barcode for this serial command:



**Version<CR>**

---

Purpose To get the firmware versions (CPU+USB Bridge).

Here is the setup barcode for this serial command:



**GetID<CR>**

---

Purpose To get MAC ID.

Here is the setup barcode for this serial command:



**Download<CR>**

---

Purpose To download CPU firmware to 3610.

Here is the setup barcode for this serial command:



**LoadBridge<CR>**

---

Purpose To download USB Bridge firmware to 3610.

Here is the setup barcode for this serial command:



**EXAMPLE**

Without using the scanner to read the above setup barcodes for configuring the 3610 dongle, run HyperTerminal.exe on the host computer to send serial commands to 3610 via USB Virtual COM.

- 1) Connect 3610 to the USB port of PC.
- 2) The Communication LED will indicate when 3610 can accept serial commands after initializing. Refer to the table below.
  - ▶ If the output interface is USB Virtual COM, run HyperTerminal.exe on the host computer. While the Communication LED on 3610 is purple (red with flashing blue), type the serial command within 3 seconds.
  - ▶ If the output interface is USB HID, press the "Num Lock" or "Caps Lock" key via the keyboard 5 times within 3 seconds while the Communication LED on 3610 is flashing red and blue. This will change the interface from USB HID to USB Virtual COM and the Communication LED will become purple (red with flashing blue). Then, run HyperTerminal.exe on the host computer. While the Communication LED on 3610 is purple (red with flashing blue), type the serial command within 3 seconds. After configuring via serial commands, the interface will reset to USB HID after re-connecting 3610.

| Communication LED |                | Meaning   |
|-------------------|----------------|---|
| ---               | Blue, solid    | Initialize  |
| Red, solid        | Blue, flashing | Serial command mode with USB Virtual COM: wait 3 seconds for starting a serial command  |
| Red, flashing     | Blue, flashing | Serial command mode with USB HID changed to USB Virtual COM first: wait 3 seconds for pressing [Num Lock] or [Caps Lock] 5 times via keyboard |



## KEYBOARD WEDGE TABLE

|  |       |      |    |   |   |   |   |     |        |
|--|-------|------|----|---|---|---|---|-----|--------|
|  |       | F2   | SP | 0 | @ | P | ` | p   | Ⓚ      |
|  | INS   | F3   | !  | 1 | A | Q | a | q   | Ⓛ      |
|  | DLT   | F4   | "  | 2 | B | R | b | r   | Ⓜ      |
|  | Home  | F5   | #  | 3 | C | S | c | s   | Ⓝ      |
|  | End   | F6   | \$ | 4 | D | T | d | t   | Ⓞ      |
|  | Up    | F7   | %  | 5 | E | U | e | u   | Ⓟ      |
|  | Down  | F8   | &  | 6 | F | V | f | v   | Ⓠ      |
|  | Left  | F9   | '  | 7 | G | W | g | w   | Ⓡ      |
|  | BS    | F10  | (  | 8 | H | X | h | x   | Ⓢ      |
|  | HT    | F11  | )  | 9 | I | Y | i | y   | Ⓣ      |
|  | LF    | F12  | *  | : | J | Z | j | z   |        |
|  | Right | ESC  | +  | ; | K | [ | k | {   |        |
|  | PgUp  | Exec | ,  | < | L | \ | l |     |        |
|  | CR    | CR*  | -  | = | M | ] | m | }   |        |
|  | PgDn  |      | .  | > | N | ^ | n | ~   |        |
|  | F1    |      | /  | ? | O | _ | o | Dly | ENTER* |

Note: (1) Ⓚ~Ⓣ: Digits of numeric keypad.  
 (2) CR\*/Send/ENTER\*: ENTER key on the numeric keypad.



## KEY TYPE & STATUS

### KEY TYPE

If "Bluetooth® HID" or "USB HID" is configured for interface, Key Type and Key Status will then become applicable.

\*Normal



109926

Scan Code



109936

### KEY STATUS

Decide whether or not to change key status when "Normal Key" is selected for Key Type.

Add Shift



109930

Add Left Ctrl



109931

Add Right Ctrl



109933

Add Left Alt



109932

Add Right Alt



109934



**EXAMPLE****KEY TYPE = NORMAL**

For example, if you want to program the character "!" as the prefix code:

- 1) Read the "Configure Prefix" barcode.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 220 for "2" and "1".
- 3) Read the "Validate" barcode to complete this setting.

**KEY TYPE = SCAN CODE**

For example, if you want to program the character "a" (= "1C" on the scan code table) as the prefix code:

- 1) Read the "Configure Prefix" barcode.
- 2) Read the "Scan Code" barcode.
- 3) Read the "[Hexadecimal Value](#)" barcode on page 220 for "1" and "C".
- 4) Read the "Validate" barcode to complete this setting.

**KEY TYPE = NORMAL + KEY STATUS = SHIFT**

For example, if you want to program the character "!" (= "Shift" + "1" on keyboard) as the prefix code:

- 1) Read the "Configure Prefix" barcode.
- 2) Read the "Add Shift" barcode.
- 3) Read the "[Hexadecimal Value](#)" barcode on page 220 for "3" and "1".
- 4) Read the "Validate" barcode to complete this setting.

**KEY TYPE = NORMAL + KEY STATUS = CTRL**

For example, if you want to program "Ctrl+A" and "Ctrl+\$" as the prefix code:

- 1) Read the "Configure Prefix" barcode.
- 2) Read the "Add Left Ctrl" barcode.
- 3) Read the "[Hexadecimal Value](#)" barcode on page 220 for "4", "1" (= "A").
- 4) Read the "Add Left Ctrl" barcode.
- 5) Read the "[Hexadecimal Value](#)" barcode on page 220 for "2", "4" (= "\$").
- 6) Read the "Validate" barcode to complete this setting.





## NUMERAL SYSTEMS

---

### DECIMAL SYSTEM

#### Decimal

---



#### Validate the Values

---



## HEXADECIMAL SYSTEM

### Hexadecimal





## Validate the Values



## ASCII TABLE

|   |     |     |    |   |   |   |   |     |  |
|---|-----|-----|----|---|---|---|---|-----|--|
| 0 |     | DLE | SP | 0 | @ | P | ` | p   |  |
| 1 | SOH | DC1 | !  | 1 | A | Q | a | q   |  |
| 2 | STX | DC2 | "  | 2 | B | R | b | r   |  |
| 3 | ETX | DC3 | #  | 3 | C | S | c | s   |  |
| 4 | EOT | DC4 | \$ | 4 | D | T | d | t   |  |
| 5 | ENQ | NAK | %  | 5 | E | U | e | u   |  |
| 6 | ACK | SYN | &  | 6 | F | V | f | v   |  |
| 7 | BEL | ETB | '  | 7 | G | W | g | w   |  |
| 8 | BS  | CAN | (  | 8 | H | X | h | x   |  |
| 9 | HT  | EM  | )  | 9 | I | Y | i | y   |  |
| A | LF  | SUB | *  | : | J | Z | j | z   |  |
| B | VT  | ESC | +  | ; | K | [ | k | {   |  |
| C | FF  | FS  | ,  | < | L | \ | l |     |  |
| D | CR  | GS  | -  | = | M | ] | m | }   |  |
| E | SO  | RS  | .  | > | N | ^ | n | ~   |  |
| F | SI  | US  | /  | ? | O | _ | o | DEL |  |



## ENTERING PIN CODE FOR AUTHENTICATION

### USE PRESET PIN

- 1) In the configuration mode, read the barcode below to use a preset PIN for authentication.

Use Preset PIN



- 2) Read one of the barcodes to specify the PIN code, in decimal or hexadecimal.  
By default, the PIN code is set to "0000". Maximum 16 characters are allowed.

Enter PIN in  
Hexadecimal...



Enter PIN in  
Decimal...



- 3) Read the "[Decimal Value](#)" barcode on page 219 or the "[Hexadecimal Value](#)" barcode on page 220 for the desired digits or character string.

Read the "Clear PIN Code" barcode first if you need to re-input the PIN code.

Clear PIN Code



- 4) Read the "Validate" barcode to complete this setting.



**DISABLE AUTHENTICATION OR USE RANDOM PIN**

In the configuration mode, read the barcode below to disable authentication (= No PIN) or use a random PIN for authentication.



Note: When using *Bluetooth*<sup>®</sup> HID, some device drivers may not support pre-defined PIN code for authentication. In this case, make sure you have the scanner set to “No PIN or use random PIN” before pairing. While pairing, the host PIN code will be displayed on the computer screen.

**Use Random PIN**

When the target device is set to use a random PIN for authentication, wait until the random PIN is displayed on the target device while pairing, and then input the matching PIN code on the scanner.

Note: Follow the steps below to enter the matching PIN on the scanner. There is no need to enter the configuration mode!

- 1) Read one of the barcodes to specify the PIN code, in decimal or hexadecimal.



- 2) Read the [“Decimal Value”](#) barcode on page 219 or the [“Hexadecimal Value”](#) barcode on page 220 for the desired digits or character string.

Read the “Clear PIN Code” barcode first if you need to re-input the PIN.



- 3) Read the “Validate” barcode to complete this setting.

**Reject Random PIN Request**

When the random PIN is displayed on the target device while pairing, you can reject the PIN request by having the scanner read the “Validate” barcode.

