

**GS220** 

Bar Code Scanner

**Quick Start Guide** 

220-QS Rev B 11/11

## **Getting Started**


Turn off the computer's power before connecting the scanner, then power up the computer once the scanner is fully connected.

# Connecting the Scanner

USB:



Keyboard Wedge:

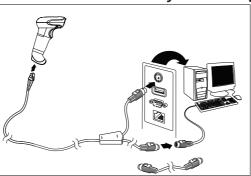

## Reading Techniques





## Recall Defaults

The following bar code resets all standard product default settings.



Interface Selections

**USB** 



Keyboard Wedge



Keyboard Wedge Emulation

## Prefix

Scan one of the following bar codes to program your scanner to add or remove a start of text character, or AIM or Nixdorf identification characters before each bar code.



STX Prefix On



AIM ID Prefix On





AIM ID Prefix Off

# Suffix

Scan one of the following bar codes to program your scanner to add or remove a carriage return, line feed, tab, or end of text after each bar code.



CR Suffix On



LF Suffix On





ETX Suffix On



CR Suffix Off



LF Suffix Off



Tab Suffix Off



# User Configurable Prefix/Suffix

One or two prefix or suffix characters can be added and assigned for data transmission. Use one of the codes below with a 3 code byte sequence that represents the desired character (see ASCII Conversion Chart, end of document) for your prefix or suffix. (To add additional prefix/suffix characters, refer to your Single-Line Configuration Guide.)

Scan the **Enter/Exit Programming** bar code to begin. Then scan the 3 digit decimal equivalent of the ASCII character into the appropriate character location with the code byte bar codes (see Code Bytes, end of document). To save, scan the Enter/Exit Programming bar code again.

Example: To add an asterisk (\*) as a prefix, scan the bar codes:

- 1. Enter/Exit Programming
- Configurable Prefix #1
- Code Byte 0
- 4. Code Byte 4
- Code Byte 2
- 6. Enter/Exit Programming











Configurable Suffix #1

# Supplements

Scan one of the bar codes below to program your scanner for 2 or 5 digit bar code supplements.







5 Digit Supplements Off

977 (2 Digit) Supplement Required: Turn on this feature when a 2 digit supplement is required for EAN-13 codes that begin with 977.



977 Supplements On



<sup>3</sup> 1 0 1 3 0 4 977 Supplements Off

Scan Enable Automatic Scanning to make the IR sensor on the scanner active. The scanner stays off unless motion or an object is detected. Once something is detected, the beam comes on and scans the bar code automatically.

When you scan Continuous Blinky Scan mode, the IR sensor is deactivated. The scanner beam flashes continuously, but the scanner only scans when the beam is on. Scan Enable Manual Trigger to activate the laser when the CodeGate button is pressed.



**Enable Automatic** Scanning



**Enable Manual Trigger** 

# **UPC/EAN Formatting**

Scan Convert UPC-A to EAN-13 and a leading zero is transmitted before a UPC-A bar code to convert it to EAN-13.



Don't Convert UPC-A to

Scan Transmit Lead Zero on UPC-E to transmit a zero before each



Transmit Lead Zero on

Convert UPC-A to

EAN-13

4 1 8 3 3 4 Continuous Blinky



Scan Transmit UPC-A Number System to transmit the UPC-A leading digit with the bar code data. To transmit just the data, without the leading digit, scan Don't Transmit UPC-A Number System.



Number System

Don't Transmit UPC-A Number System

Expand UPC-E to 12 Digits expands the UPC-E code to the 12 digit, **UPC-A** format



Don't Expand UPC-E to 12 Digits

When Code 39 Full ASCII On is scanned, certain character pairs within the bar code symbol will be interpreted as a single character. For example: \$V will be decoded as the ASCII character SYN, and / C will be decoded as the ASCII character #.





#### Miscellaneous

Minimum Symbol Length specifies the minimum number of characters allowable for non-UPC/EAN bar codes. Scan the Enter/ Exit Programming bar code to begin. Scan Minimum Symbol Length, then scan the minumum number of characters allowed using code byte bar codes, below. For example, for a 12-character symbol length, scan 012. To save, scan the Enter/Exit Programming bar







Symbol Length Lock specifies the exact number of characters required for non-UPC/EAN bar codes. Scan the Enter/Exit Programming bar code to begin. Scan Symbol Length Lock, then scan three bar codes representing the desired number of characters using the code byte bar codes, below. For example for a 12-character symbol length lock, scan 012. To save, scan the Enter/Exit Programming bar code again.





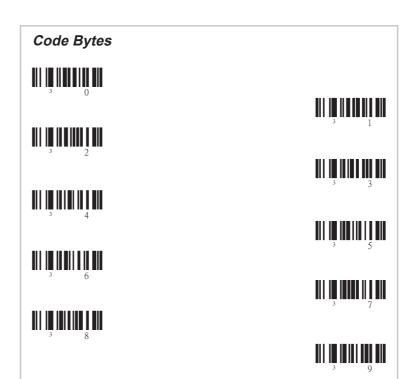

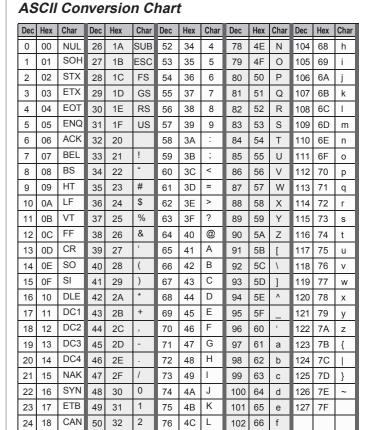

### Technical Assistance

Contact information for technical support, product service, and repair can be found at www.godexintl.com.

## Limited Warranty

Godex warrants its products and optional accessories to be free from defects in materials and workmanship and to conform to Godex's published specifications applicable to the products purchased at the time of shipment. This warranty does not cover any Godex product which is (i) improperly installed or used; (ii) damaged by accident or negligence, including failure to follow the proper maintenance, service, and cleaning schedule; or (iii) damaged as a result of (A) modification or alteration by the purchaser or other party, (B) excessive voltage or current supplied to or drawn from the interface connections, (C) static electricity or electro-static discharge, (D) operation under conditions beyond the specified operating parameters, or (E) repair or service of the product by anyone other than Godex or its authorized

This warranty shall extend from the time of shipment for the duration published by Godex for the product at the time of purchase ("Warranty Period"). Any defective product must be returned (at purchaser's expense) during the Warranty Period to Godex's factory or authorized service center for inspection. No product will be accepted by Godex without a Return Materials Authorization, which may be obtained by contacting Godex. In the event that the product is returned to Godex or its authorized service center within the Warranty Period and Godex determines to its satisfaction that the product is defective due to defects in materials or workmanship, Godex, at its sole option, will either repair or replace the product without charge, except for return shipping to Godex.

EXCEPT AS MAY BE OTHERWISE PROVIDED BY APPLICABLE LAW. THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER COVENANTS OR WARRANTIES, EITHER EXPRESSED OR IMPLIED, ORAL OR WRITTEN, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT.

GODEX RESPONSIBILITY AND PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT WITH NEW OR REFURBISHED PARTS. IN NO EVENT SHALL GODEX BE LIABLE FOR INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, AND, IN NO EVENT, SHALL ANY LIABILITY OF GODEX ARISING IN CONNECTION WITH ANY PRODUCT SOLD HEREUNDER (WHETHER SUCH LIABILITY ARISES FROM A CLAIM BASED ON CONTRACT, WARRANTY, TORT, OR OTHERWISE) EXCEED THE ACTUAL AMOUNT PAID TO GODEX FOR THE PRODUCT. THESE LIMITATIONS ON LIABILITY SHALL REMAIN IN FULL FORCE AND EFFECT EVEN WHEN GODEX MAY HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH INJURIES, LOSSES, OR DAMAGES. SOME STATES, PROVINCES, OR COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

All provisions of this Limited Warranty are separate and severable, which means that if any provision is held invalid and unenforceable, such determination shall not affect the validity of enforceability of the other provisions hereof. Use of any peripherals not provided by the manufacturer may result in damage not covered by this warranty. This includes but is not limited to: cables, power supplies, cradles, and docking stations. Godex extends these warranties only to the first end-users of the products. These warranties are non-transferable.

## **User Documentation**

For localized versions of this document, and to download the User's Guide, go to www.godexintl.com.

Godex reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult Godex to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of Godex.

Godex shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

# **Product Agency Compliance**

Laser Eye Safety Statement



This device has been tested in accordance with and complies with IEC60825-1: 1993+A1+A2, EN 60825-1:1994+A1+A2 and 21 CFR 1040.10 and 1040.11, except for deviations pursuant to Laser Notice No. 50, dated July 26,

CAUTION-Laser light when open, DO NOT STARE INTO BEAM,

CAUTION - use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure.

# For China RoHS Declaration

 $\times$ 

 $\times$ 

VLD 套管

VID 检管

由源线

25 19 EM 51 33 3 77 4D M 103 67 g

产品有毒有害物质或元素清单 本产品表面标识的环保使用期限是在正常使用情况下(产品正常使用具体条件请参见产品使用手 册)的环保使用期限,下表为产品中含有有毒物质的部件清单 有毒有害物质或元素 铅 镉 六价铬 多溴联苯 多溴二苯醚 汞  $\circ$  $\circ$ 0 上羔  $\times$  $\bigcirc$  $\circ$ 屏蔽罩  $\times$ 0 0 0 0 0 0 0 0 0 0 激光二极管

0

 $\cap$ 

 $\circ$ 

0

 $\circ$ 

0

0

 $\circ$ 

0


〇:该物质在对应元器件中的含量满足 SJ/T 11363-2006 规定的限量要求 ×:该物质在对应元器件中的含量超出 SJ/T 11363-2006 规定的限量要求

0

 $\cap$ 

 $\circ$ 

除上表所示的部件外,以下部件的环保使用期限为10年。 有毒有害物质或元素 六价铬 多溴联苯 多溴二苯醚 0 0 0 0 0 电源 0 0

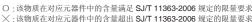

For additional information, please refer to www.godexintl.com.



0

 $\circ$ 

 $\circ$