
EZ-DT-4 / EZ-DT-2 Stripper Installation

	Z-DT-2 Stripper	Installation	
1 Stripper Modu	le		
2 Screw x 2pcs			
[Note1] Please power off the printer			
before installing the stripper module.			
[Note2] Label liner thickness is			
recommended to be 0.06mm ± 10% with			
basic weight 65g/m² ± 6%.			C 7
[Note3] The max width for stripper is			
110 mm.			
【Suggestion】 When printing with stripper			_ @
module, it is suggested to set the stop			2
position (^E) to 9 (for DT-4) and 8 (for			
DT-2).			
	ter on a horizontal		G
surface and open the Top Cover.			
Remove the Front Cover Piece.			
Zi Tromere ale i fem devel i lecel		F	
[Note]			
You can also use coin or			
screwdriver to open the Front Cover Piece.			
,			
Push the Stripper connector into			
printer through the cable hole as shown in figure.			
4. Place the Stripper on the fillister.			
4. Place the Stripper on the fillister.			+
EZ-DT-4		EZ-DT-2	
5.		5.	
Turn the printer		Loose the screw	nny.
around and		of Bottom Case	3 yann 30]
tighten screws to	9.0	Cover and open it.	inini Minini
fix the Stripper in	A COUNTY OF THE PARTY OF THE PA	•	
location.	1 11111111		▼
	inimi 🐷		
	11/11/11		
	6.3		4
6.		6.	
Unlock the Bottom		Tighten the	45
Case Cover to	-	screws to fix the	
see the main		Stripper in	
board of printer.		location.	
F NI=4c ▼		Ĭ	
[Note]			
You can also use coin or screwdriver to			
open the bottom case cover.			

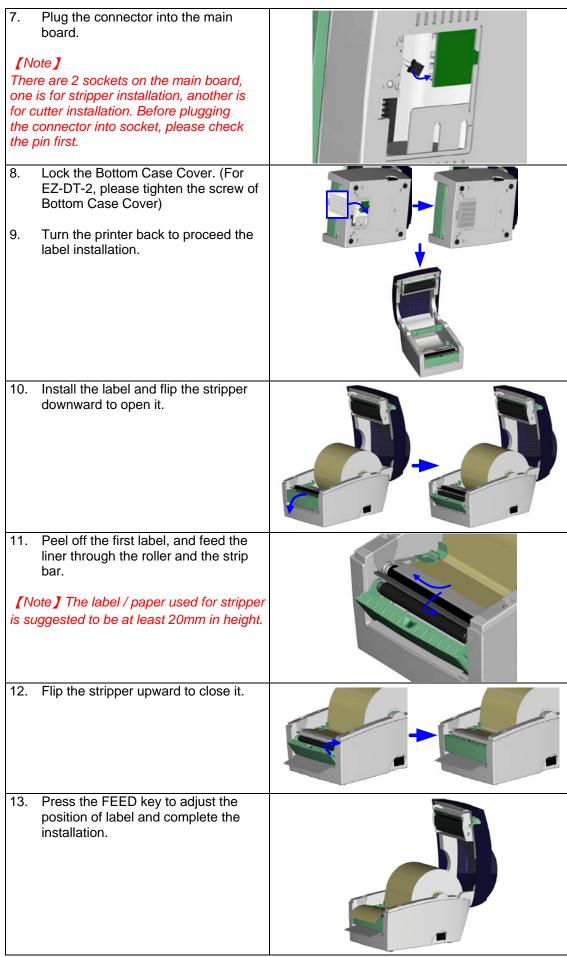

P/N 313-029500-201